

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

1. DTC TABLE

NOTE:

When more than two DTC codes are recorded, referring to their combination will make it easy to identify the possible cause. Refer to the list for typical examples.

DTC to Check	Diagnostic Code that was displayed.					Probable cause
	BODY INTEGRATED UNIT	ECM	TCM	VDC/ABSCM	Combination meter display	
B0100 <Ref. to LAN(diag)-35, DTC B0100 INTEG. UNIT SYSTEM ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0100	P0600	P1718	—	Er IU	There could be a problem in the body integrated unit.
B0221 <Ref. to LAN(diag)-56, DTC B0211 CAN-HS ECM DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0221	—	P1718	C0057	Er HC	It is possible that the ECM is faulty.
B0222 <Ref. to LAN(diag)-58, DTC B0212 CAN-HS TCM DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0222	P0600	—	C0057	Er HC	It is possible that the TCM is faulty.
B0223 <Ref. to LAN(diag)-59, DTC B0213 CAN-HS VDC/ABS DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0223	P0600	P1718	—	Er HC	It is possible that the VDC/ABSCM is faulty.
B0321 <Ref. to LAN(diag)-81, DTC B0321 CAN-LS METER NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0321	—	—	—	—	It is possible that the combination meter is faulty.
B0313 <Ref. to LAN(diag)-80, DTC B0313 CAN-LS MONITOR DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0313	—	—	—	—	It is possible that the navigation monitor is faulty.
B0500 <Ref. to LAN(diag)-83, DTC B0500 KEYLESS UART COM. MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0500	—	—	—	—	It is possible that the keyless entry module is faulty.