

## 7. Read Diagnostic Trouble Code (DTC)

### A: OPERATION

#### 1. WITHOUT SUBARU SELECT MONITOR

**NOTE:**

Use the Subaru Select Monitor; DTCs cannot be read without it.

#### 2. WITH SUBARU SELECT MONITOR

For details concerning the DTC read procedure, refer to "Subaru Select Monitor". <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>