1. General Description

A: SPECIFICATION

| Headlight | Halogen type low beam | | 12 V — 55 W |
|---|------------------------|------------------------|--------------------|
| | Halogen type high beam | | 12 V — 60 W |
| Front turn signal, parking, front side marker light | | | 12 V — 27/8 W |
| Front fog light | OUTBACK | | 12 V — 51 W |
| | Except for OUTBACK | | 12 V — 55 W |
| Side turn signal light | | | 12 V — 2.7 W (LED) |
| Rear combination light | Stop/tail light | | 12 V — 21/5 W |
| | Turn signal light | | 12 V — 21 W |
| | Wagon | Rear side marker light | 12 V — 5 W |
| Back-up light | Sedan | | 12 V — 16 W |
| | Wagon | | 12 V — 16 W |
| License plate light | | | 12 V — 5 W |
| High-mounted stop light | Sedan | | 12 V — 21 W |
| | Wagon | | 12 V — 1.3 W (LED) |
| Room light | | | 12 V — 8 W |
| Spot map light | | | 12 V — 8 W |
| Luggage room light | | | 12 V — 13 W |
| Trunk room light | | | 12 V — 5 W |
| Glove box light | | | 12 V — 1.4 W |
| Door step light | | | 12 V — 3.5 W |

B: CAUTION

- Before removing or installing parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- · Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.
- The airbag system wiring harness is routed near electrical parts and switches. Airbag system wiring harnesses and connectors are yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.

C: PREPARATION TOOL

1. GENERAL TOOL

| TOOL NAME | REMARKS |
|----------------|--|
| Circuit tester | Used for measuring resistance and voltage. |