



## 10. Headlight Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct. (When removing the headlight RH).

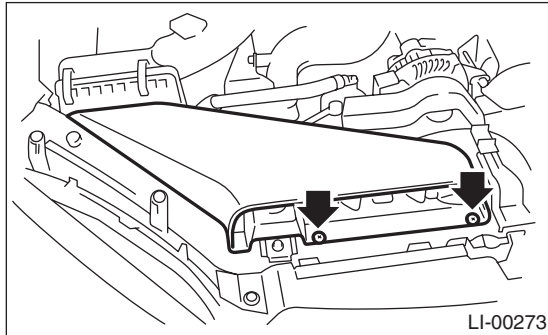

- 3) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 4) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 5) Disconnect harness connectors.
- 6) Remove the 5 bolts, disengage 1 clip, then detach the headlight assembly.

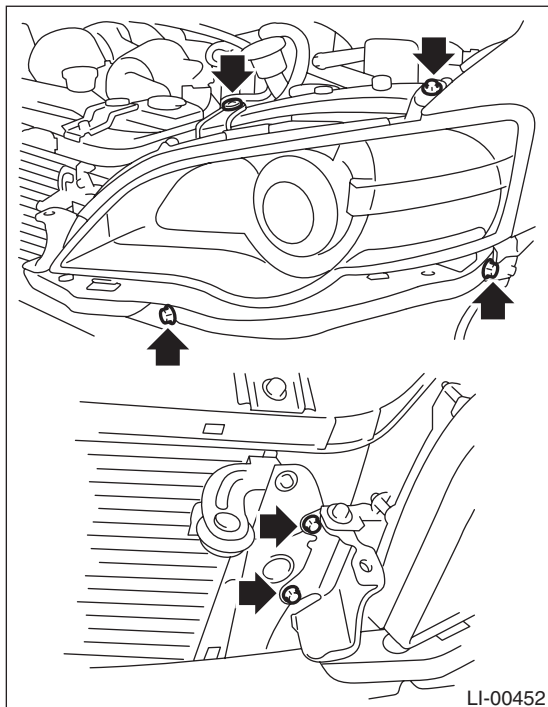

### B: INSTALLATION

Install in the reverse order of removal.

### C: ADJUSTMENT

#### 1. HEADLIGHT AIMING

##### NOTE:

Aiming of this headlight can be adjusted only in the vertical direction. It cannot be adjusted in the horizontal direction.

##### CAUTION:

**Turn off the light before adjusting the headlight beam level. If the light is necessary to check aiming, do not turn on for more than two minutes.**

##### NOTE:


Before checking the headlight beam level, be sure of the following:

- The area around the headlight has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

- 1) Bounce the vehicle several times to normalize the suspension.
- 2) Make certain that someone is seated in the driver's seat.
- 3) Turn the headlights on and then adjust the low beam pattern.


##### NOTE:

Adjust the headlight beam level by turning the adjusting screw (A).

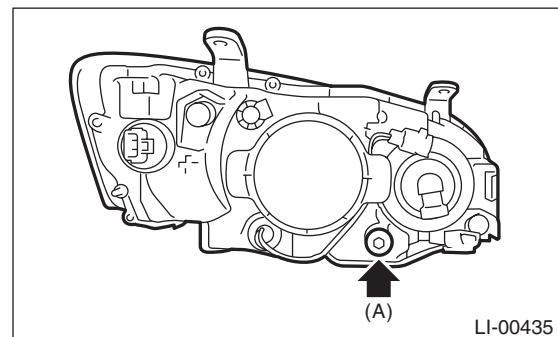

# Headlight Assembly

## LIGHTING SYSTEM

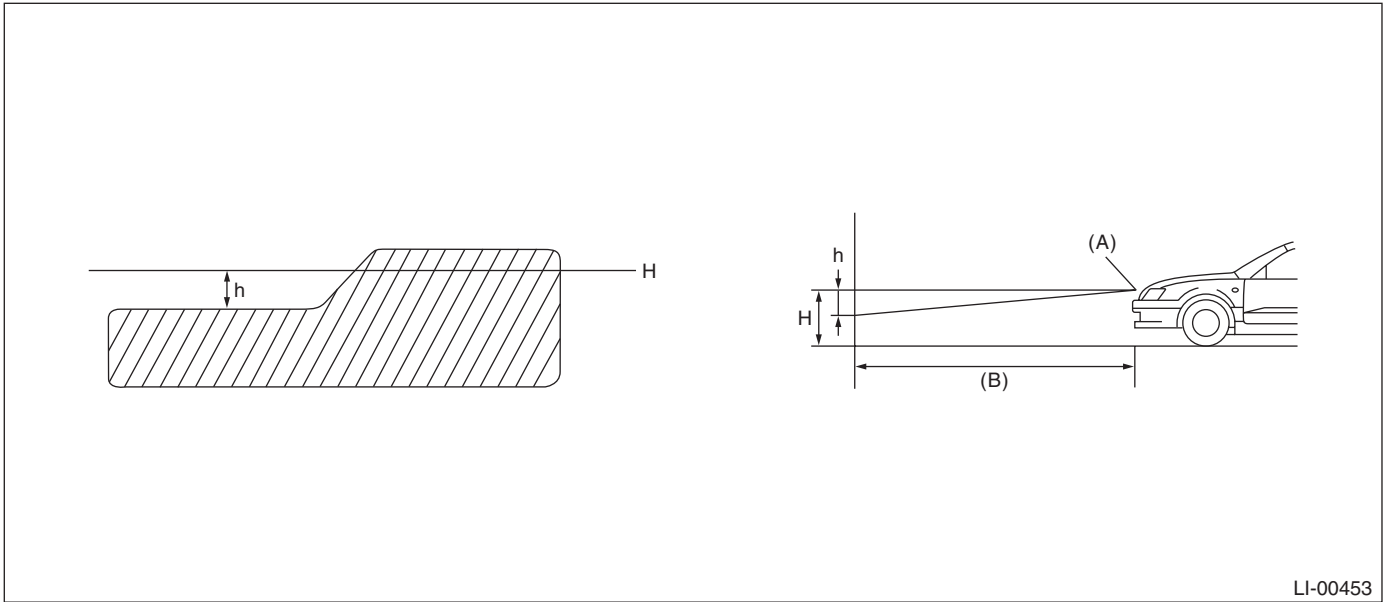

LI-00453

(A) Bulb center marking

(B) 3 m (10 ft)

H mm (in)				h mm (in) at 3 m (10 ft)
Sedan		Wagon		
Except for OUTBACK	OUTBACK	Except for OUTBACK	OUTBACK	21 (0.83)
640 (25.20)	707 (27.83)	637 (25.08)	707 (27.83)	