


## 15. Front Fog Light Assembly


### A: REMOVAL

#### 1. EXCEPT FOR OUTBACK MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the front fog light cover (A).

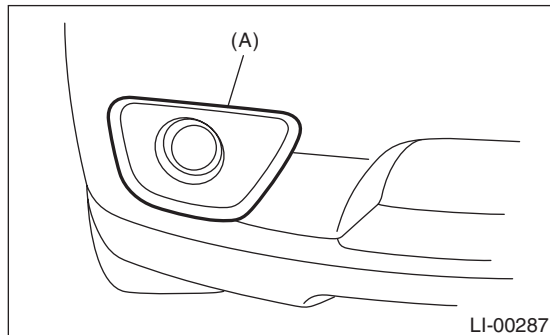

- 3) Disengage the two clips, and then turn over the lower mud guard.

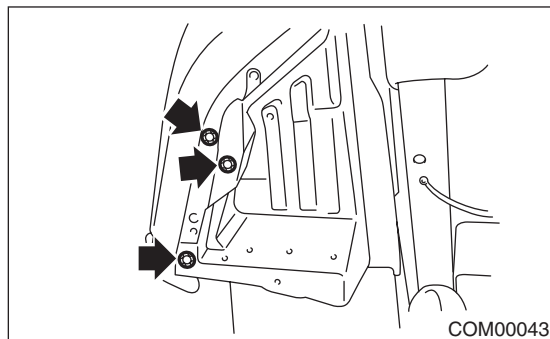


- 4) Disconnect the harness connector.
- 5) Remove the mounting bolts, then detach the fog light assembly by pulling it out.

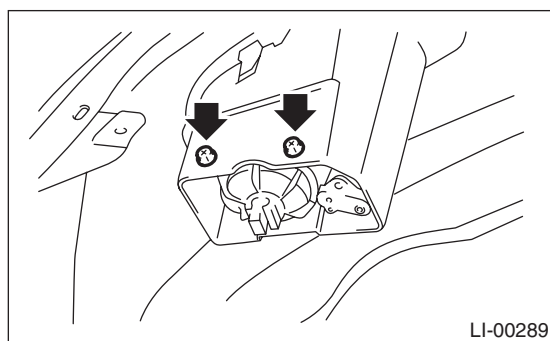


#### 2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Disengage the two clips, and then turn over the lower mud guard.

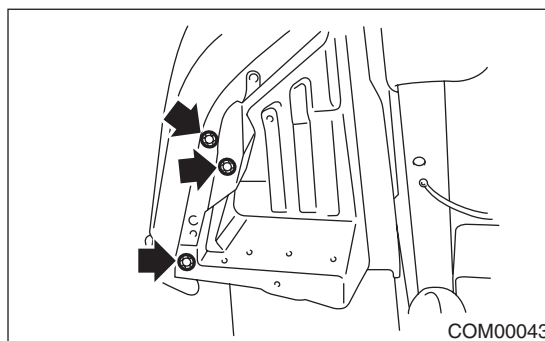

- 3) Disconnect the harness connector.
- 4) Remove the mounting nuts and clips, and detach the fog light assembly by pulling it out.

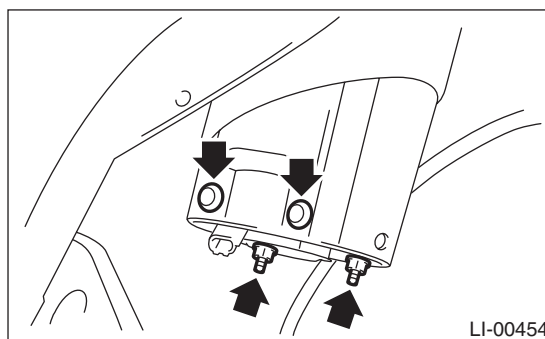

### B: INSTALLATION

Install in the reverse order of removal.

# Front Fog Light Assembly

## LIGHTING SYSTEM

### C: ADJUSTMENT

#### 1. FOG LIGHT AIMING

**NOTE:**

Before checking the fog light beam level, be sure of the following:

- The area around the fog light has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

1) Bounce the vehicle several times to normalize the suspension.


2) Make certain that someone is seated in the driver's seat.

3) Adjust the fog light pattern by inserting a Philips screwdriver to the aiming screw hole.

**NOTE:**


Perform the adjustment after removing the front fog light cover.

Except for OUTBACK model

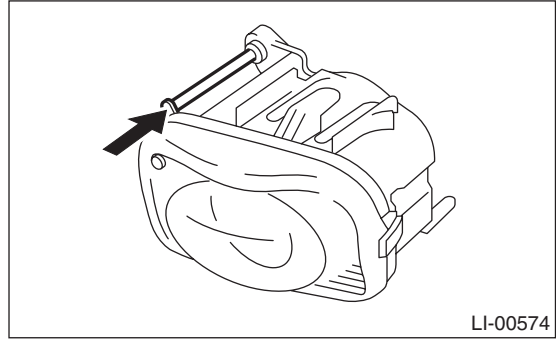


LI-00574

OUTBACK model

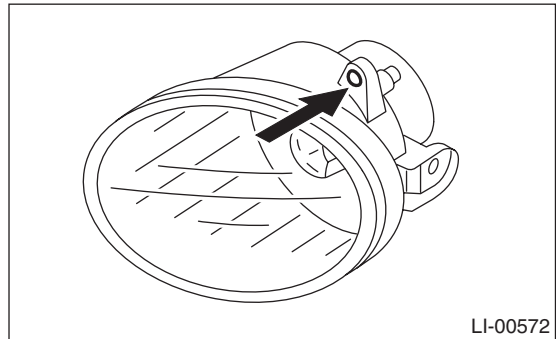

LI-00572

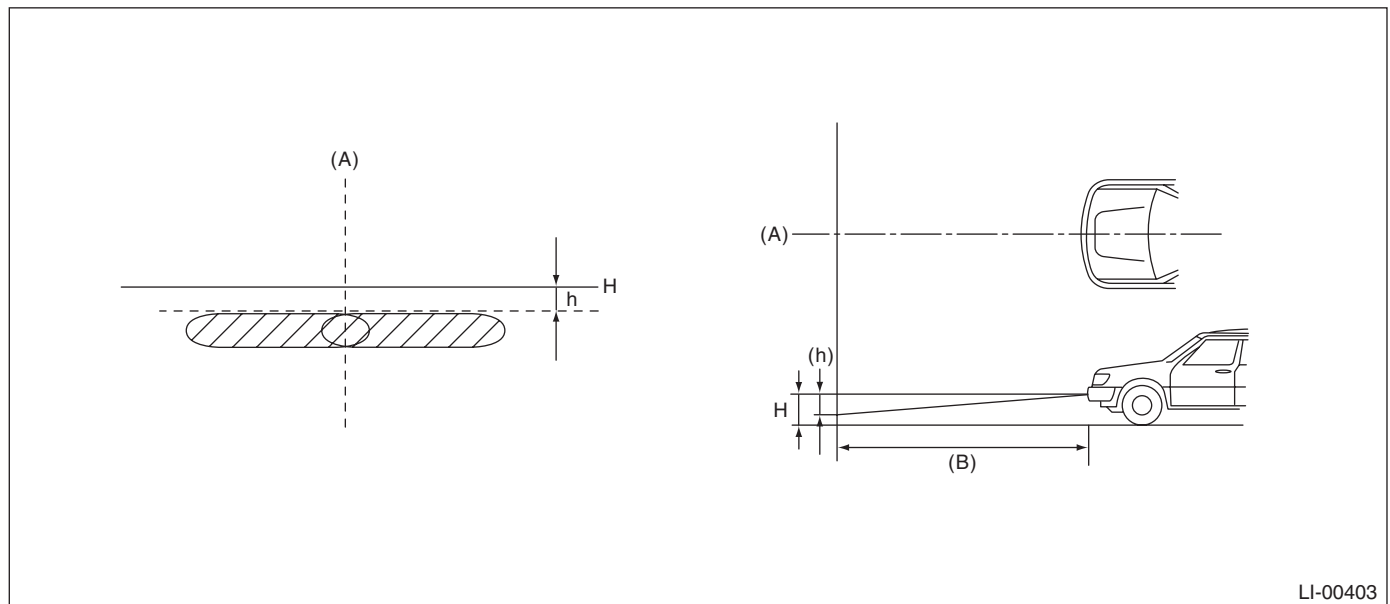

LI-00403

(A) Vehicle center  
(B) 3 m (10 ft)

(H) Height of fog light center

(h) 40 mm (1.58 in)

Height of fog light center (H) mm (in)			
Sedan		Wagon	
Except for OUTBACK	OUTBACK	Except for OUTBACK	OUTBACK
330 (12.99)	423 (16.65)	328 (12.91)	423 (16.65)