


## 18. Rear Combination Light Assembly

### A: REMOVAL


#### 1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim. <Ref. to EI-68, REMOVAL, Trunk Room Trim.>
- 3) Remove the four nuts, and then detach the rear combination light after disconnecting the connector.

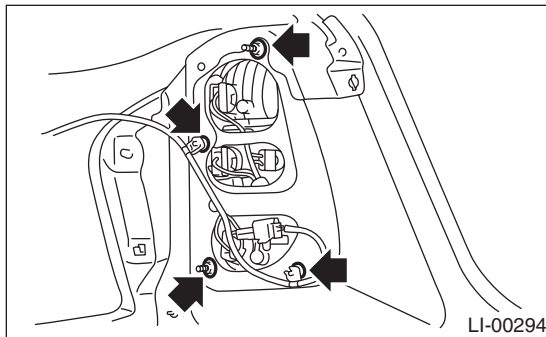


#### 2. WAGON MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the clip.

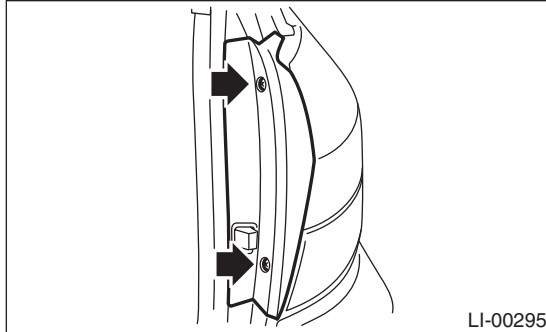

- 3) While pressing the section (A), insert your finger or a flat-tip screwdriver wrapped with tape into the clearance (B) to remove claws in the order of (C), (D), (E), and remove the rear combination cover.

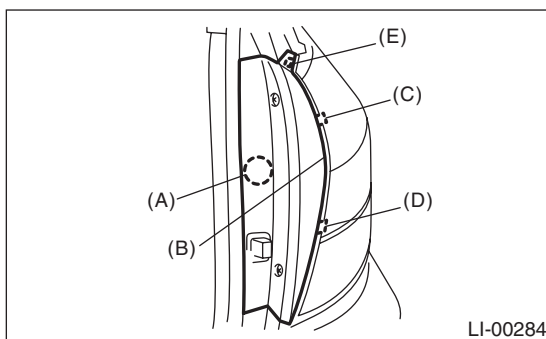

- 4) Remove the two bolts, and then detach the rear combination light by pulling it to the rear side of vehicle.

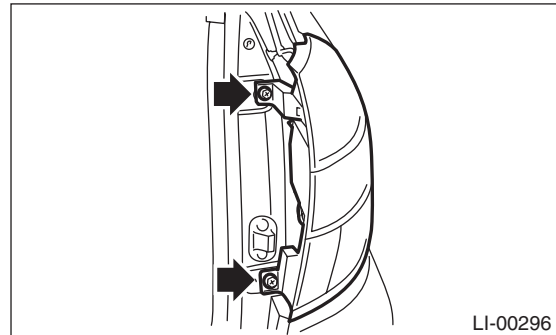

- 5) After turning the sockets of the tail/stop light bulbs and rear turn signal light bulbs, remove the rear combination light.

### B: INSTALLATION

Install in the reverse order of removal.