22.Back-up Light Assembly


A: REMOVAL

1. SEDAN MODEL

Remove the rear combination light. <Ref. to LI-21, REMOVAL, Rear Combination Light Assembly.>

2. WAGON MODEL

- 1) Remove the rear gate trim. <Ref. to El-66, RE-MOVAL, Rear Gate Trim.>
- 2) Disconnect the harness connector and remove the rear gate garnish. <Ref. to EI-73, REMOVAL, Rear Gate Garnish.>
- 3) Remove the attachment nuts and remove the back-up light assembly.

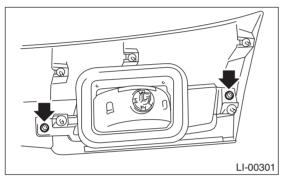

B: INSTALLATION

Install in the reverse order of removal.