


## 23. Back-up Light Bulb

### A: REMOVAL


#### 1. SEDAN MODEL

- 1) Remove the trunk side trim cover.
- 2) Turn the socket and remove the bulb.

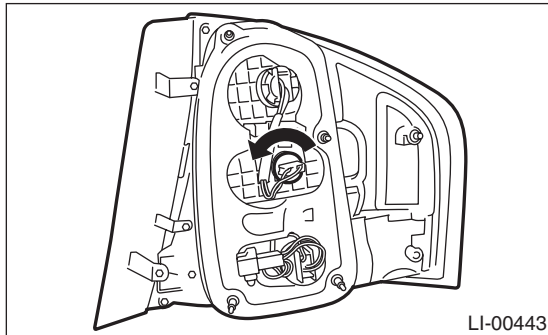

#### 2. WAGON MODEL

- 1) Remove the bulb inspection cover of the rear gate trim.
- 2) Turn the socket and remove the bulb.

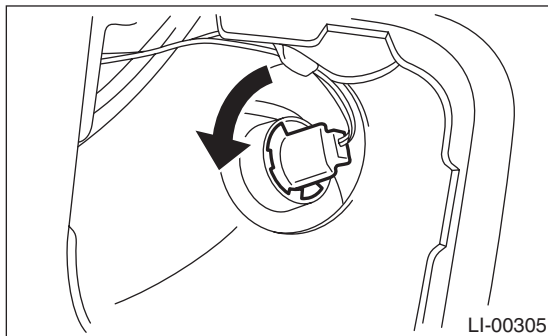

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.