


25. License Plate Light

A: REMOVAL

1. SEDAN MODEL


- 1) Remove the trunk lid trim. <Ref. to EI-68, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>
- 2) Turn and remove the bulb socket (A).

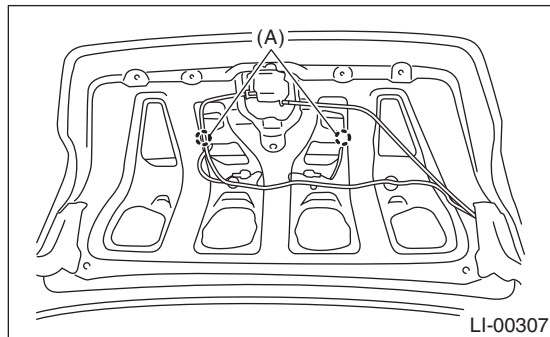

- 3) Remove the bulb.

2. WAGON MODEL

- 1) Remove the license plate light mounting screw (A) and then remove the lens (B).

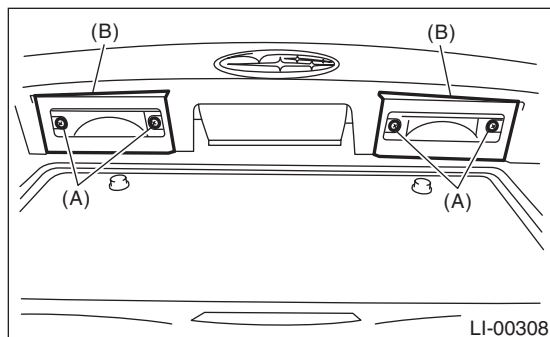

- 2) Remove the bulb.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.