

10. Clear Memory Mode

A: OPERATION

Clear the memory in the following steps after the malfunction is repaired.

For details to clear the DTC, refer to “Airbag System (Diagnosis) Subaru Select Monitor”. <Ref. to AB(diag)-29, Subaru Select Monitor.>