


3. Rear Seat


A: REMOVAL

1. (SEDAN MODEL)


1) Remove the two hooks while lifting up the rear seat cushion.

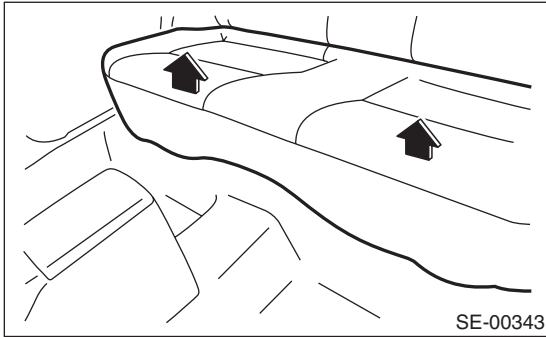


2) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

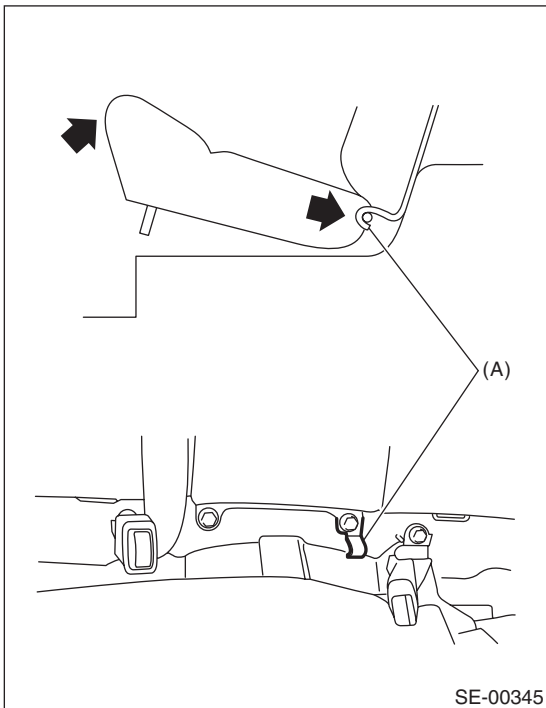


3) Remove the lower anchor bolt of the rear center seat belt.

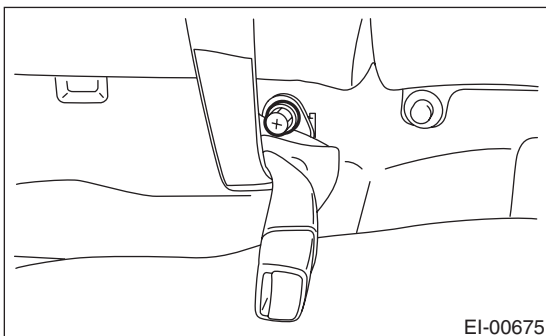

4) Remove the bolts which secure the bottom of the backrest.

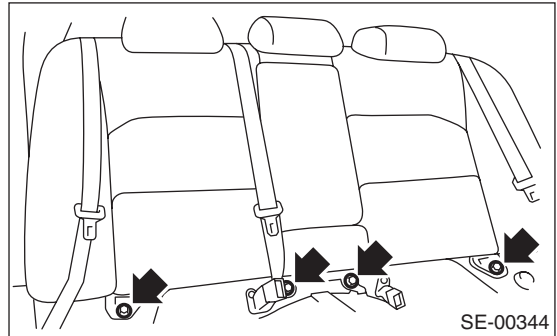


5) Lift the backrest up, detach the backrest side anchor from the body side hook (A), and remove from the vehicle.

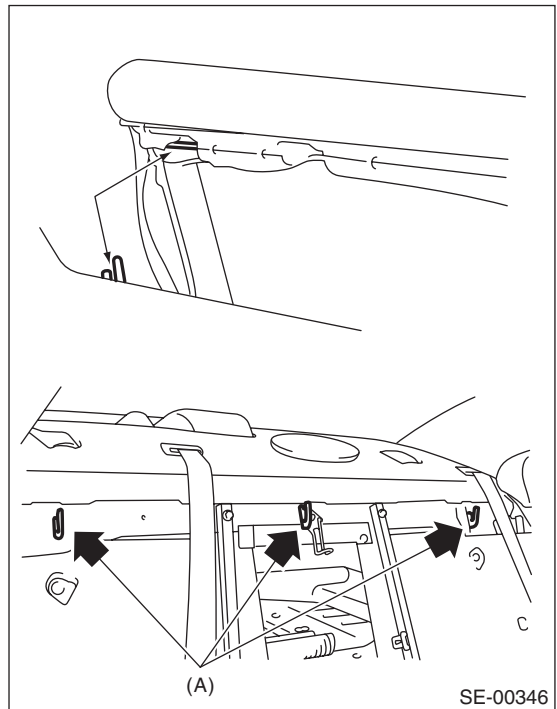

2. (WAGON MODEL)


1) Disconnect the ground cable from battery.
2) Remove the two hooks while lifting up the rear seat cushion.

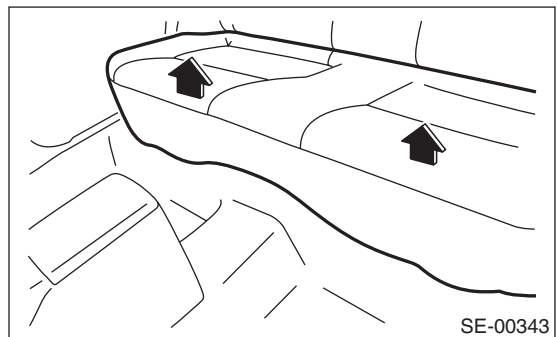

Rear Seat

SEATS


3) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

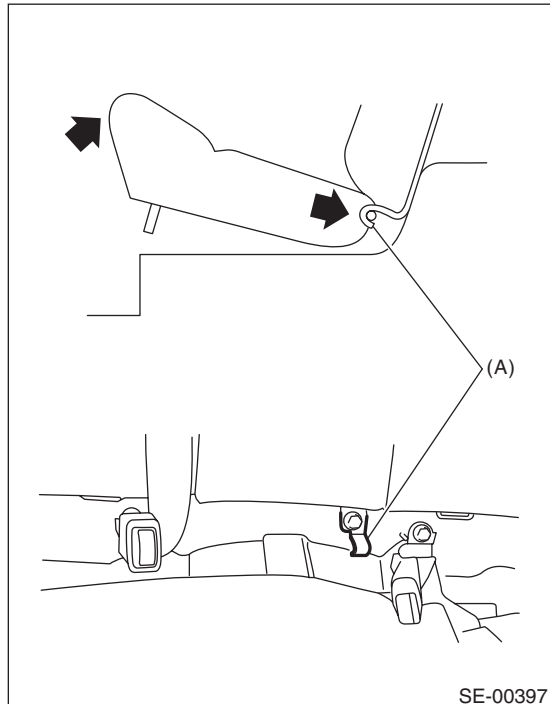


4) Remove the headrest, and then tilt the backrest forward.

5) Remove the luggage floor box. <Ref. to EI-71, REMOVAL, Luggage Floor Box.>

6) Remove the hinge assembly center bolts.

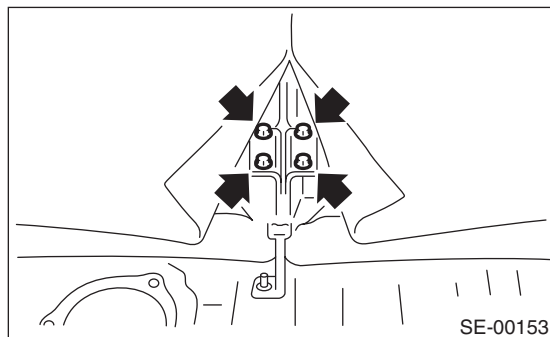


7) Remove the backrest from hinge assembly LH (hinge assembly RH).

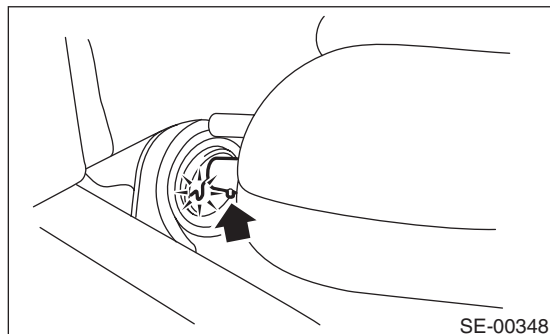


NOTE:


The backrest cannot be detached while the hinge assembly side and the backrest pin are not aligned.
8) Remove the lower anchor bolt (A) of the outer seat belt and backrest shoulder bolt (B).

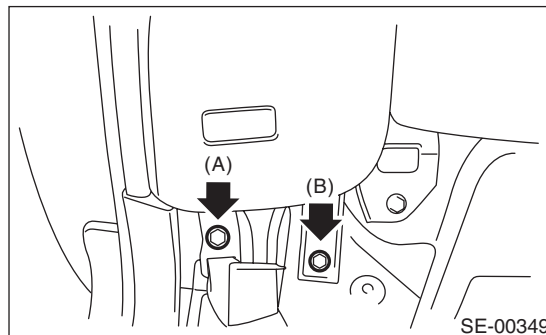

9) Remove the backrest shoulder with lifting it up.

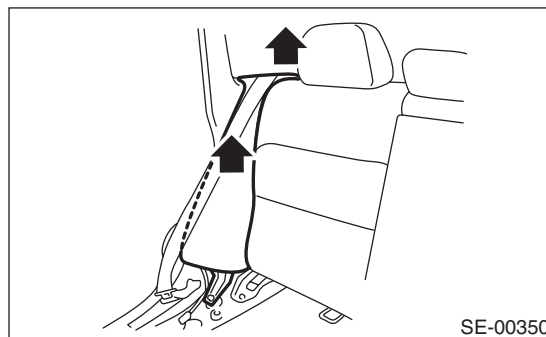

10) Remove the belt cover (A) from the backrest shoulder, then pull the seat belt out.

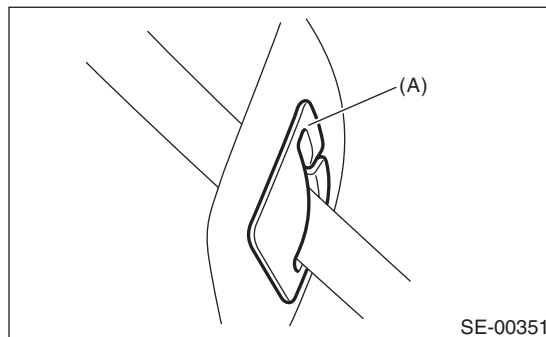

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- After installing the backrest, make sure that each seat belt operates normally.
- Make sure that they are properly secured on each hook on the vehicle side.


Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-2, COMPONENT, General Description.>


C: DISASSEMBLY

1. (SEDAN MODEL)


- 1) Remove the rear seat. <Ref. to SE-17, (SEDAN MODEL), REMOVAL, Rear Seat.>
- 2) Remove the headrest.
- 3) Remove the nuts, then detach the trunk through assembly.

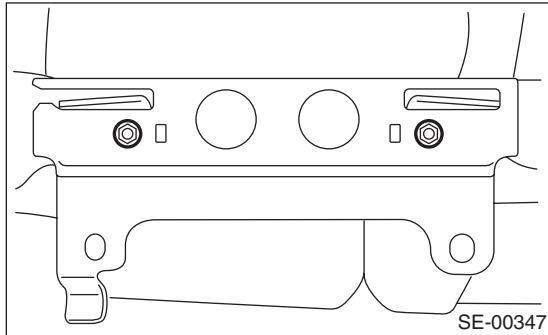


- 4) Remove the hog rings (A) on the rear side of the backrest.

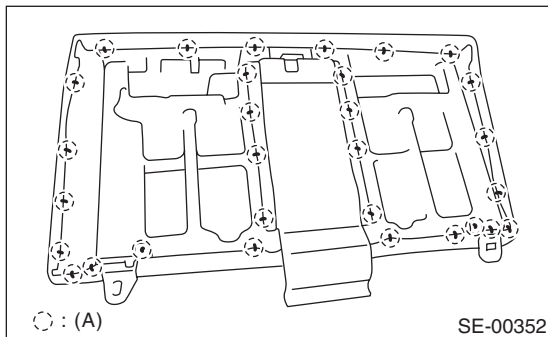


- 5) Remove the hog rings (A) on the front side of the backrest.

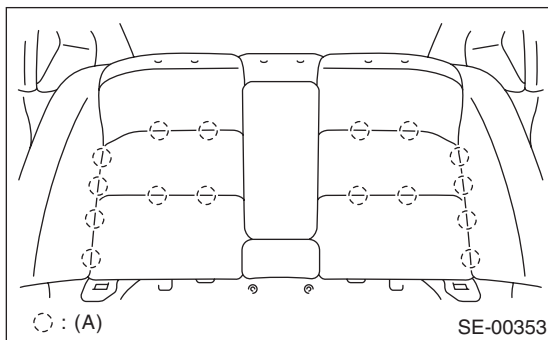


- 6) Remove the armrest hinge covers on both sides, and loosen the screws to remove the armrests.

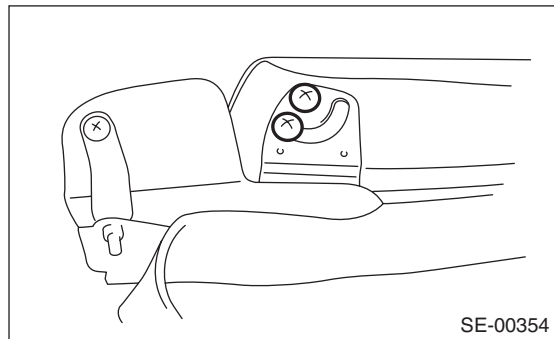


- 7) Remove the hook, and then detach the center through cover.

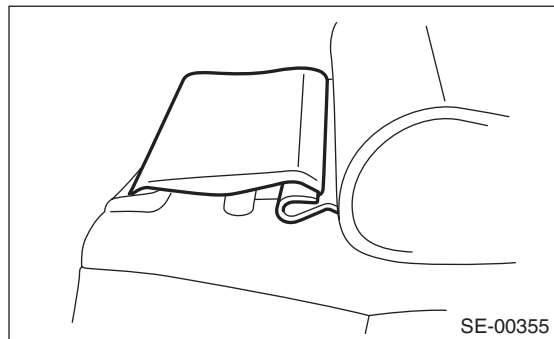

- 8) Remove the hook, and then remove the armrest cover.

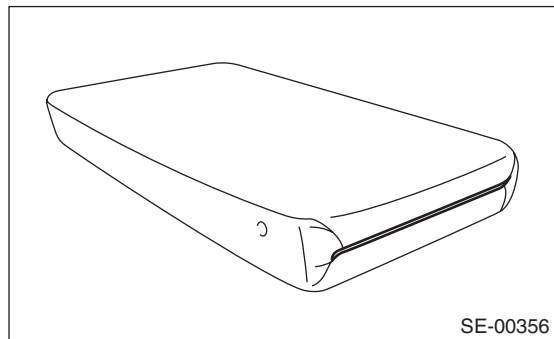


- 9) Remove the hook and hog ring, and then remove the headrest cover.

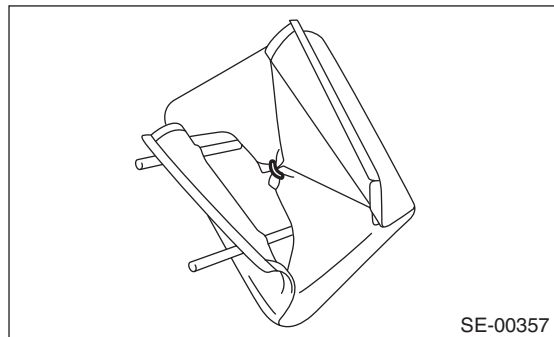


Rear Seat

SEATS

10) Remove the hog rings (A) on the rear side of the seat cushion.

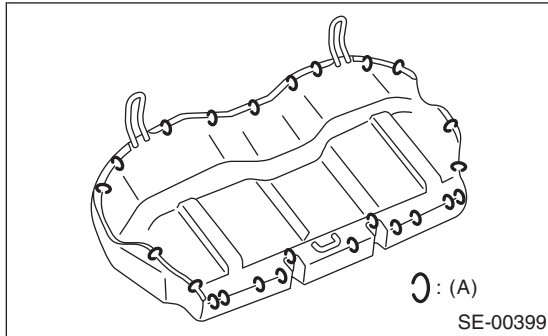


11) Remove the hog rings (A), then remove the seat cushion cover.

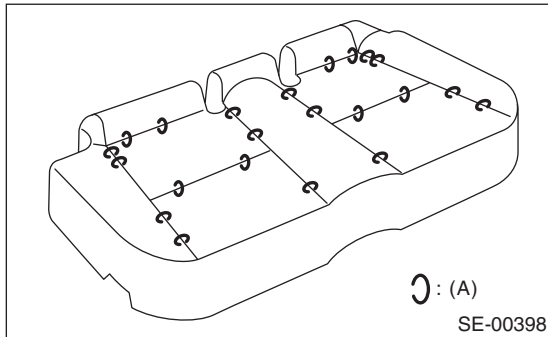


2. (WAGON MODEL)

1) Remove the rear seat. <Ref. to SE-17, (WAGON MODEL), REMOVAL, Rear Seat.>


2) Remove the hooks at the bottom of backrest assembly LH, and then turn over the backrest cover to remove the hog rings (A) and hooks (B).

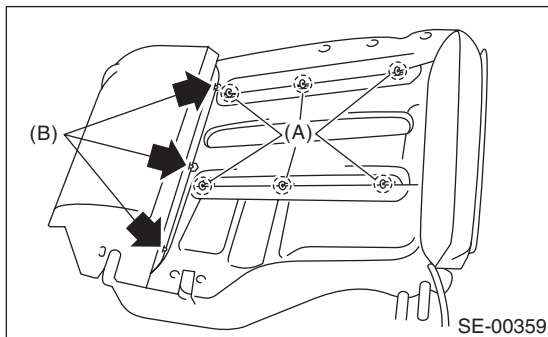


3) Remove the hog rings (A) on the front side of backrest, and then remove the backrest cover.

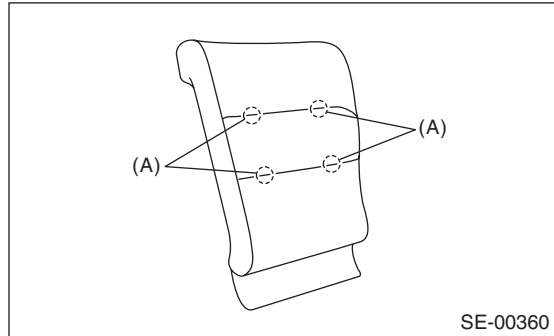

4) Remove the bolts, and then remove the backrest latch.

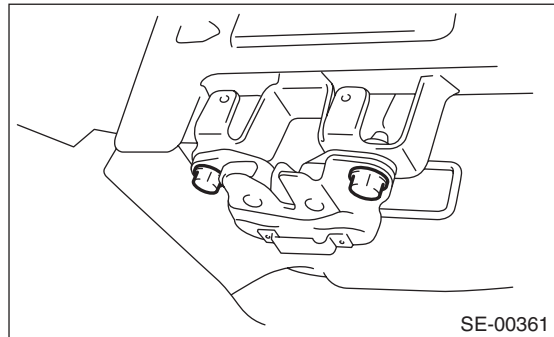

5) Loosen the screws to remove the armrest from backrest assembly RH.

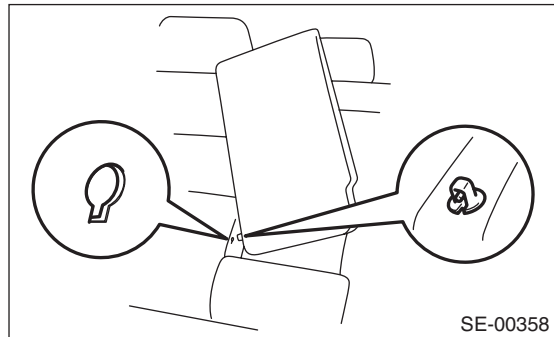


NOTE:


The armrests cannot be detached while the backrest assembly RH and armrest side pin positions are not aligned.

6) After this operation, refer to the step 2) to disassemble the backrest assembly RH.


7) Remove the hook, and then remove the armrest cover.

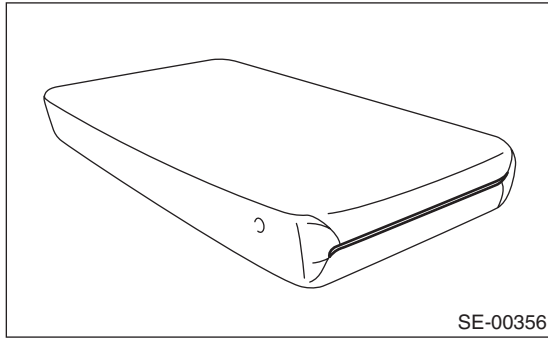


8) Remove the hook and hog ring, and then remove the headrest cover.

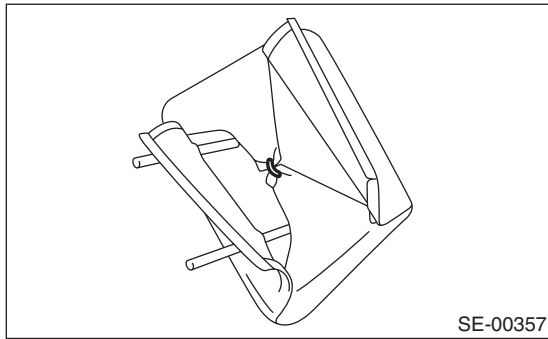

9) Remove the hog rings (A) on the rear side of the seat cushion.

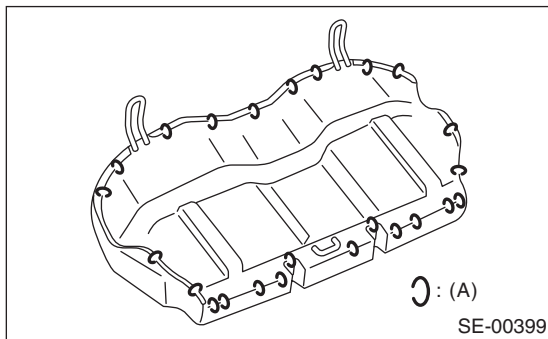

10) Remove the hog rings (A), then remove the seat cushion cover.

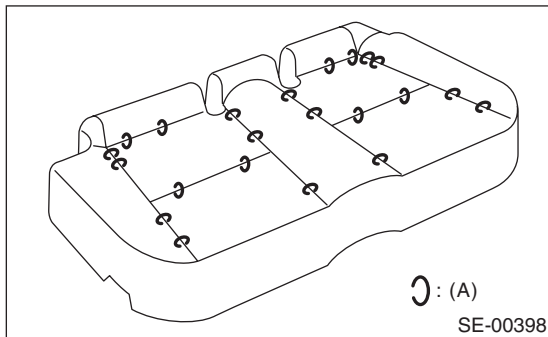

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

CAUTION:

- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

E: INSPECTION

Check that no tear or fray on the seat cover.