

27. Immobilizer Control Module

A: NOTE

The control of immobilizer system is carried out in body integrated unit.

B: REMOVAL

<Ref. to SL-55, REMOVAL, Body Integrated Unit.>

C: INSTALLATION

Install in the reverse order of removal.