


## 6. Front Outer Handle

### A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from the front inner remote. <Ref. to SL-34, REMOVAL, Front Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 5) Remove the rod clamps (1).
- 6) Remove bolts (2), then remove the front outer handle.

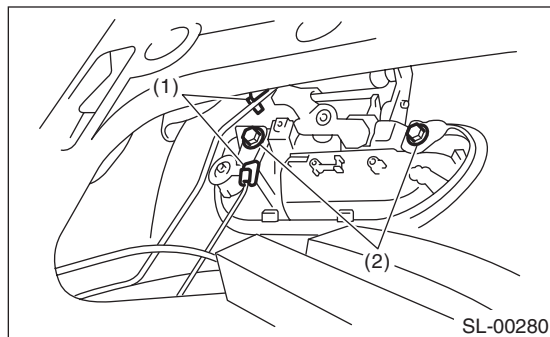

### CAUTION:

**Do not apply excessive force to remove the handle from the door panel. The door panel may become deformed.**

### B: INSTALLATION

Install in the reverse order of removal.

### NOTE:

Make sure that the outer handle works correctly after installation.

### C: INSPECTION

- 1) Check the rod for deformation.
- 2) Check the lever and rod for smooth operation.