

# Front Door Latch and Door Lock Actuator Assembly


## SECURITY AND LOCKS

---

### 7. Front Door Latch and Door Lock Actuator Assembly

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from the front inner remote. <Ref. to SL-34, REMOVAL, Front Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 5) Remove the front door glass. <Ref. to GW-12, REMOVAL, Front Door Glass.>
- 6) Remove the rear sash. <Ref. to GW-17, REMOVAL, Front Regulator and Motor Assembly.>
- 7) Open the handle rod cover of the latch assembly.
- 8) Remove the three screws.

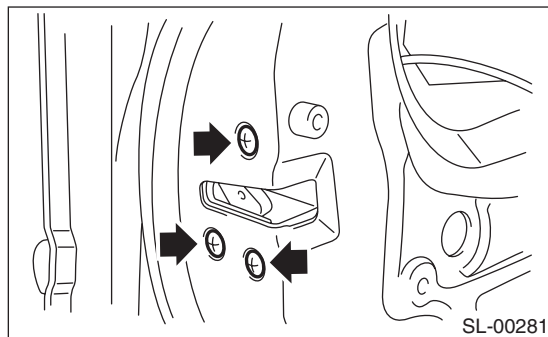

- 9) Remove the front door latch & door lock actuator assembly, and disconnect the connector.

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the lock works correctly after installation.

#### C: INSPECTION

- 1) Check the rod and cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the front door latch and door lock actuator assembly.
- 2) Check the lever, rod and cable for smooth operation.