

# Front Washer Nozzle


## WIPER AND WASHER SYSTEMS

### 8. Front Washer Nozzle

#### A: REMOVAL

1) Remove the front hood insulator. <Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>

2) Hold the claw (A) of the washer nozzle towards the direction of the arrow, and remove the washer nozzle.

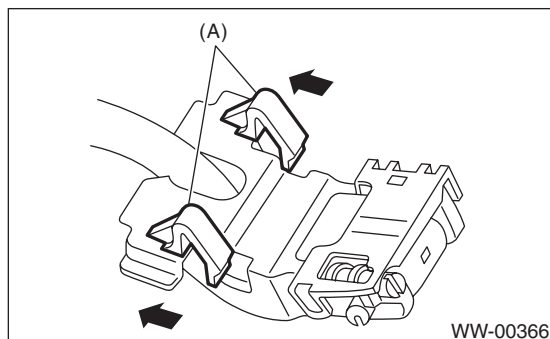

3) Remove the washer hose from the washer nozzle.

#### B: INSTALLATION

1) Install in the reverse order of removal.

2) Adjust the washer nozzle position. <Ref. to WW-16, ADJUSTMENT, Front Washer Nozzle.>

#### C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

#### D: ADJUSTMENT

##### CAUTION:

**Do not move the spray nozzle area directly to adjust. Doing so will damage the slit and cause improper spray.**


1) Turn the wiper switch to OFF position.

2) While the vehicle is at a standstill, adjust the washer injection position as shown in the figure.

##### Spray position:

**A: 250 mm (9.84 in)**


**B: 535 mm (21.06 in)**

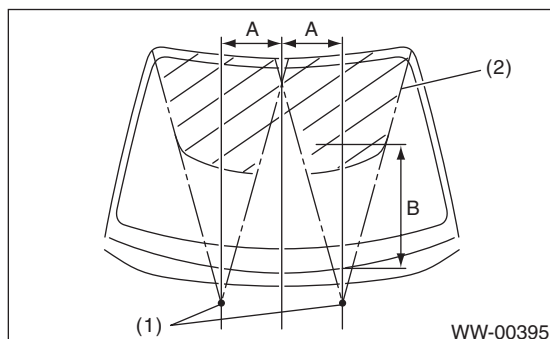

(1) Nozzle

(2) Spray area (shaded area)

3) Spray angle should be adjusted by rotating adjusting dial (A) with a flat tip screwdriver.

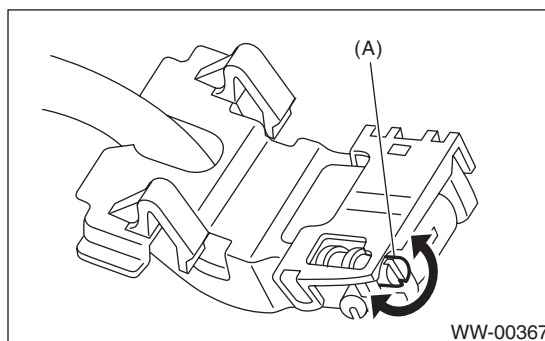

##### NOTE:

Adjusting dial will return to the original spray angle with 1 rotation.