

FUSES & CIRCUIT BREAKERS


1992 Subaru SVX

Fuses & Circuit Breakers
1992-96 Subaru

SVX

FUSES & CIRCUIT BREAKERS

The fuse block is located under the instrument panel. If a fuse is blown, locate the cause before replacing the fuse. Spare fuses are contained in the fuse block. If an electrical failure has occurred and the fuses are in good condition, check the fusible links in the engine compartment and replace as necessary. Always use fuses and fusible links with the correct amperage rating.

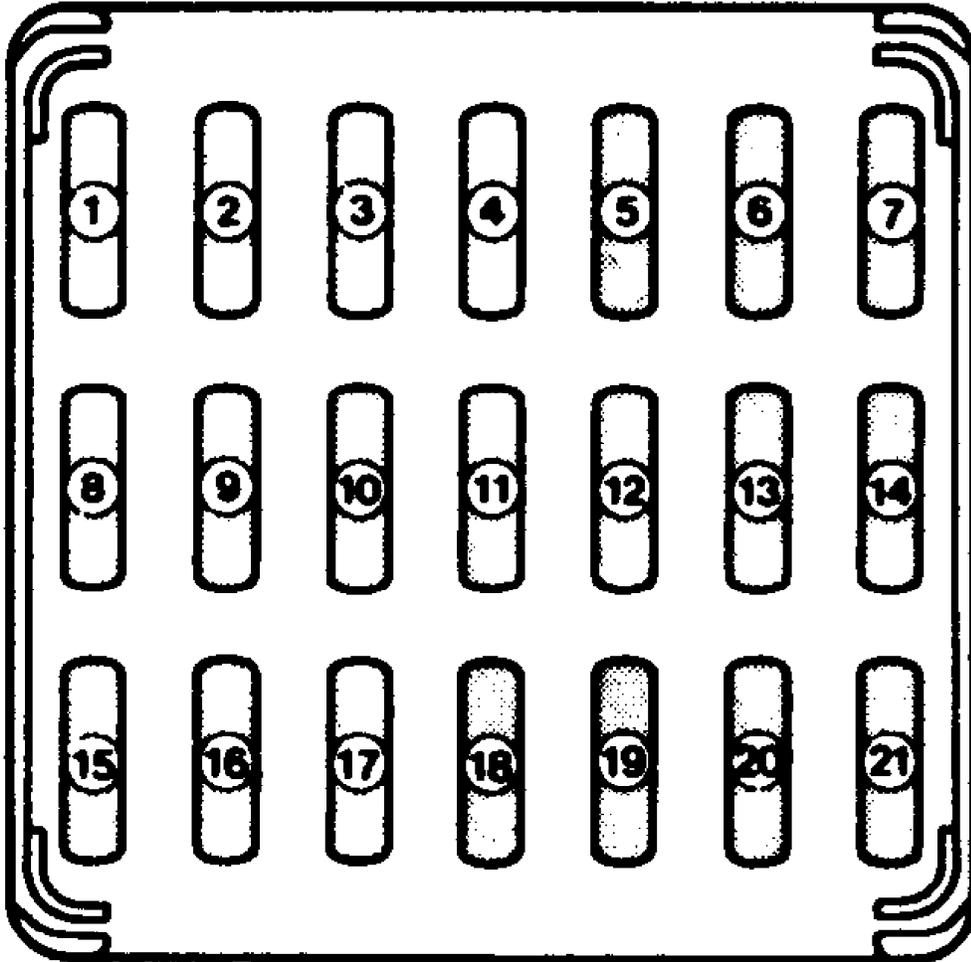


UNDERDASH FUSE PANEL 93G45464

Fig. 1: Underdash Fuse Panel Identification
Courtesy of Subaru of America, Inc.

Underdash Fuse & Circuit Breaker Identification

- 1 - 15 Amp
Back-Up Lights, Turn Signal Lights
- 2 - 15 Amp
Windshield Wiper & Washer
- 3 - 20 Amp
Cigarette Lighter, Remote Controlled Rear View Mirrors,
Outside Mirror Defogger
- 4 - 15 Amp
Foglight
- 5 - 10 Amp
Tail lights, Clearance Lights
- 6 - 20 Amp
Windowshield Wiper
- 7 - 20 Amp
Rear Window Defogger
- 8 - 15 Amp
Supplemental Restraint System (SRS)
- 9 - 10 Amp
Illumination Brightness Control
- 10 - 15 Amp
Telephone (If Equipped)
- 11 - 15 Amp
Rear Window Wiper
- 12 - 20 Amp
Brake light, Horn
- 13 - 15 Amp
Power Door Lock
- 14 - 10 Amp
EGI Unit, A/T Unit
- 15 - 10 Amp
Meter, Seat Heater
- 16 - 15 Amp
Ignition System, SRS
- 17 - 15 Amp
Radio
- 18 - 10 Amp
Cruise Control, ABS, Power Steering
- 19 - 20 Amp
ABS Solenoid
- 20 - 15 Amp
Heater Fan
- 21 - 15 Amp
Heater Fan

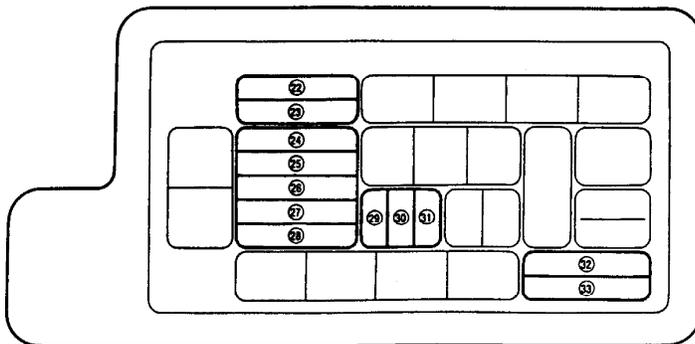

ENGINE COMPARTMENT FUSE PANEL

93A45468

Fig. 2: Engine Compartment Fuse Panel Identification
Courtesy of Subaru of America, Inc.

WARNING: Always disconnect battery ground cable before servicing "high-current fuses. It is recommended that "high-current"

fuses be replaced by a qualified technician.

Engine Compartment Fuse & Circuit Breaker Identification

- 22 - 25 Amp
Left Electric Cooling Fan
- 23 - 25 Amp
Right Electric Cooling Fan
- 24 - 15 Amp
Right Headlight
- 25 - 10 Amp
Clock
- 26 - 15 Amp
Left Headlight
- 27 - 20 Amp
Lighting Switch
- 28 - 15 Amp
Hazard Warning Flasher
- 29 - Spare
- 30 - Spare
- 31 - Spare
- 32 - Empty
For FWD Light During Maintenance
- 33 - 10 Amp
Air Conditioning System