

JACKING & HOISTING

1992 Subaru SVX

1992 WHEEL ALIGNMENT
Subaru Jacking & Hoisting

Justy, Legacy, Loyale, SVX

JACKING & HOISTING

FLOOR JACK

Using a garage-type floor jack, vehicles can be lifted at following points: under rear differential case on 4WD models, under center of rear crossmember on 2WD models and under engine center support crossmember (if equipped).

HOIST/LIFT & EMERGENCY JACKING

Lower body seam areas indicated in illustration by circles, are specifically designed to facilitate use of vehicle's own jack. See Fig. 1. These jacking points are also to be used by hoist/lift pads. If floor jack is used at these points, extreme care should be taken to avoid damaging outer body shell.

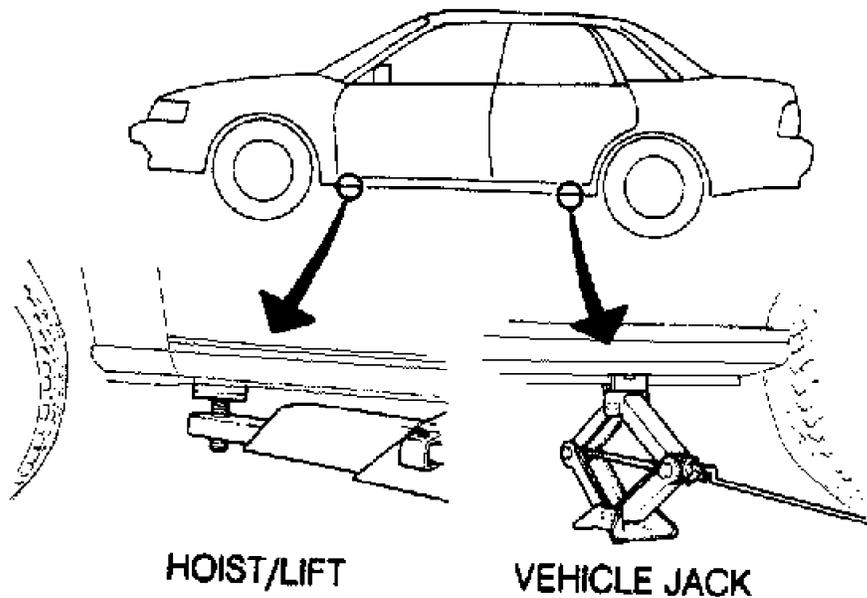


Fig. 1: Locating Hoisting/Lifting Points On Lower Body Seam
Courtesy of Subaru of America, Inc.