


2. Door

A: REMOVAL AND INSTALLATION

1. DOOR ASSEMBLY

- 1) Remove lower trim and disconnect connectors from body harness.
- 2) Place a cloth or a wood block under door to prevent damage, and support it with a jack.
- 3) Remove checker bolt.

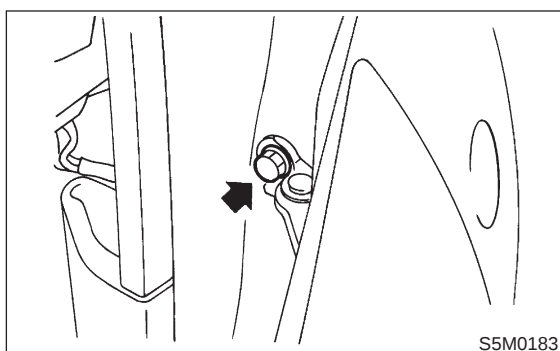

- 4) Remove bolts (M8) securing upper and lower hinges to door, and remove door from hinges.

Tightening torque:

$25 \pm 3 \text{ N}\cdot\text{m}$ ($2.5 \pm 0.3 \text{ kg}\cdot\text{m}$, $18.1 \pm 2.2 \text{ ft}\cdot\text{lb}$)


- 5) Remove hinges by loosening hinges mounting bolt (M8) off of body.

Tightening torque:

$29 \pm 5 \text{ N}\cdot\text{m}$ ($3.0 \pm 0.5 \text{ kg}\cdot\text{m}$, $21.7 \pm 3.6 \text{ ft}\cdot\text{lb}$)

CAUTION:

Work carefully to avoid damaging door.

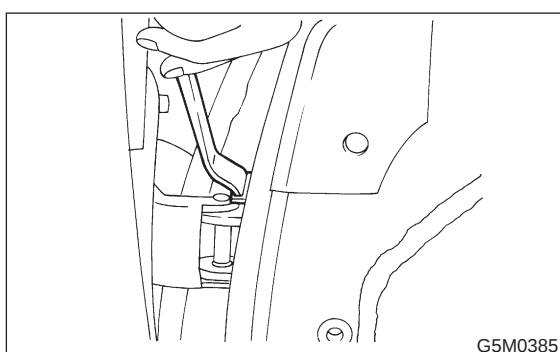

- 6) Installation is in the reverse order of removal.

NOTE:

Apply grease to moving parts of door hinges.

2. TRIM PANEL

CAUTION:

Be careful not to break clip by applying undue force.

- 1) Front door trim:

(1) Remove gusset cover (A), power window switch assembly (B), pocket (C) and inner remote cover (D).

(2) Remove screws and then disengage the clips.

(3) Detach trim panel and then disconnect connector.

(4) Installation is in the reverse order of removal.


- 2) Rear door trim:

(1) Remove handle (E), pocket (F) and clips (G).

(2) Remove screws and then disengage the clips.

(3) Detach trim panel and then disconnect connector.

(4) Installation is in the reverse order of removal.

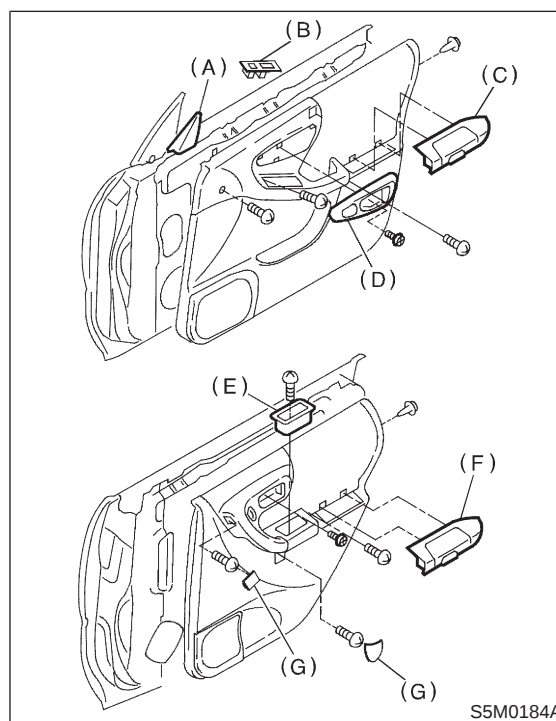

3. SEALING COVER


- 1) Remove trim panel.

2) Remove speaker, trim bracket and remote assembly and disconnect connectors.

3) Remove sealer with a spatula.

CAUTION:

Be careful because cover may break if sealer is removed forcefully.

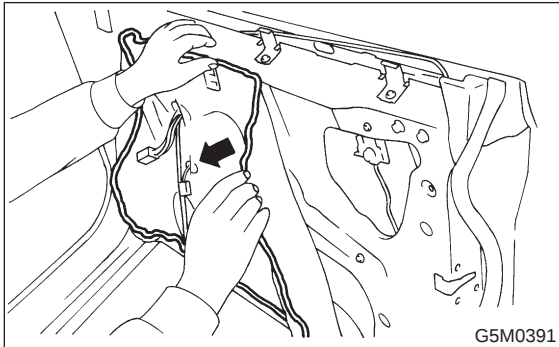

4) Installation is in the reverse order of removal.

NOTE:

- Confirm that sealer is properly applied without breaks. Then install sealing cover.
- When repairing or replacing sealing cover, use "CEMEDINE 5430L" as sealer. It may be overlaid on existing sealer.

Sealer:


CEMEDINE 5430L

CAUTION:

- Any breaks in sealer can cause water leakage or entry of air and dust. Be sure sealer is applied in a continuous line.
- Make sure sealing cover bonded areas are free from wrinkles or openings.

4. CHECKER

- 1) Completely close door glass.
- 2) Remove trim panel.
- 3) Remove sealing cover.
- 4) Remove attaching bolt to body.
- 5) Loosen two nuts securing checker, and take out checker through access hole in underside.

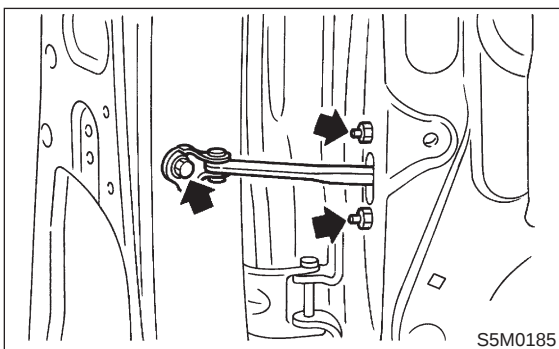


6) Installation should be made in the reverse order of removal.

Tightening torque:

$7.5 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.2 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft}\cdot\text{lb}$)

5. INNER REMOTE

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Disconnect joints of two rods.
- 4) Unlatch rod holder.
- 5) Remove inner remote assembly.

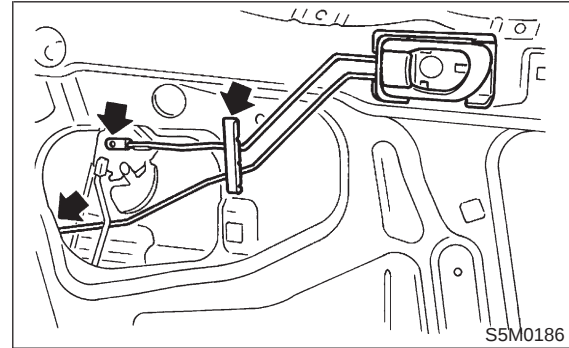


6) Installation is in the reverse order of removal.

NOTE:

If rear door is equipped with child safety lock, check that child lock lever moves without dragging.

6. DOOR LATCH AND OUTER HANDLE

- 1) Completely close door glass.
- 2) Remove door trim panel.
- 3) Remove inner remote assembly.
- 4) Remove sealing cover around latch service hole.
- 5) Remove latch and actuator assembly (A):
 - (1) Turn rod holder to disconnect joint between key lock and rod.
 - (2) Turn rod holder to disconnect joint between outer handle and rod.
 - (3) Turn rod holder to disconnect joint between crank and rod.
 - (4) Loosen screws securing both latch and actuator, then remove latch and actuator assembly through service hole in bottom.

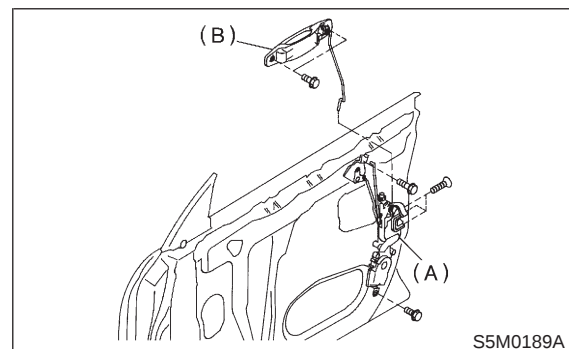

(5) Installation is in the reverse order of removal.

Tightening torque (screw):

$6.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.2 \text{ kg}\cdot\text{m}$, $4.7 \pm 1.4 \text{ ft}\cdot\text{lb}$)

NOTE:

- Check operation of each part.
- Check each sliding part for proper lubrication.


CAUTION:

After installation, be sure lock mechanism operates normally.

- 6) Remove outer handle (B):
 - (1) Remove trim panel.
 - (2) Remove sealing cover.
 - (3) Detach door latch rod from outer handle and key lock.
 - (4) Loosen nut securing outer handle and then remove outer handle from outside.

CAUTION:

Be careful not to damage door.

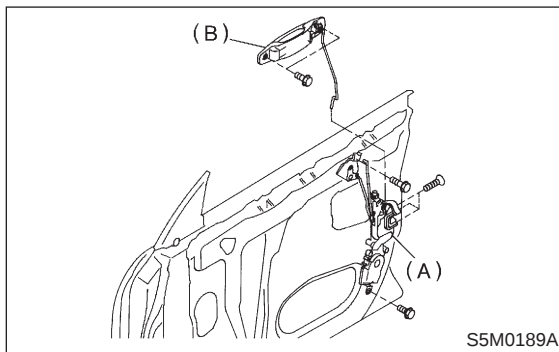

- (5) Installation is in the reverse order of removal.

Tightening torque:

$7.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.2 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft}\cdot\text{lb}$)

7. KEY LOCK

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Completely close door glass.
- 4) Remove outer handle.
- 5) Loosen spring securing key lock.
- 6) Remove key lock from door panel.
- 7) Installation is in the reverse order of removal.

8. GUSSET

- 1) Be sure window is all the way down.
- 2) Remove gusset cover.
- 3) Remove trim panel.
- 4) Remove door rearview mirror.
- 5) Remove outer weatherstrip.
- 6) Remove sealing cover.

NOTE:

Be careful not to drop nuts on the "IN" side.


- 7) Remove bolts and nuts which secure gusset.

Tightening torque: Bolt

$3 \pm 3 \text{ N}\cdot\text{m}$ ($1.3 \pm 0.3 \text{ kg}\cdot\text{m}$, $9.4 \pm 2.2 \text{ ft}\cdot\text{lb}$)

Tightening torque: Nut

$7.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.2 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft}\cdot\text{lb}$)

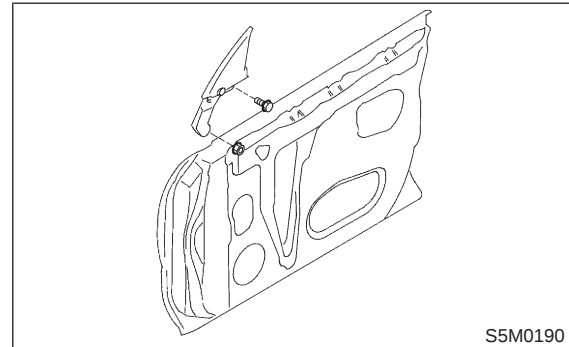

- 8) Lift out gusset.
- 9) Installation is in the reverse order of removal.

B: ADJUSTMENT

1. DOOR ASSEMBLY

- 1) Using ST, loosen bolts securing upper and lower hinges to body, and adjust fore-and-aft and vertical alignment of door.

ST 925610000 DOOR HINGE WRENCH



- 2) Loosen screw one complete rotation, and adjust opening/closing direction of door using a hammer covered with a cloth.

CAUTION:

Be careful not to damage striker.

Hinge tightening torque (body side):



$29 \pm 5 \text{ N}\cdot\text{m}$ ($3.0 \pm 0.5 \text{ kg}\cdot\text{m}$, $21.7 \pm 3.6 \text{ ft}\cdot\text{lb}$)

Striker tightening torque:


$14 \pm 4 \text{ N}\cdot\text{m}$ ($1.4 \pm 0.4 \text{ kg}\cdot\text{m}$, $10.1 \pm 2.9 \text{ ft}\cdot\text{lb}$)

2. INNER REMOTE

- 1) Lock the door.
- 2) Loosen bolt (A).
- 3) Lower bell crank (B) and then tighten bolt (A).

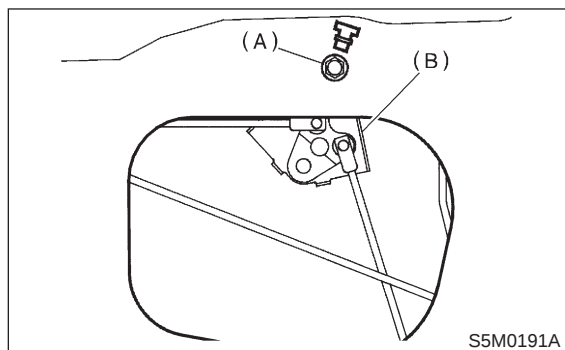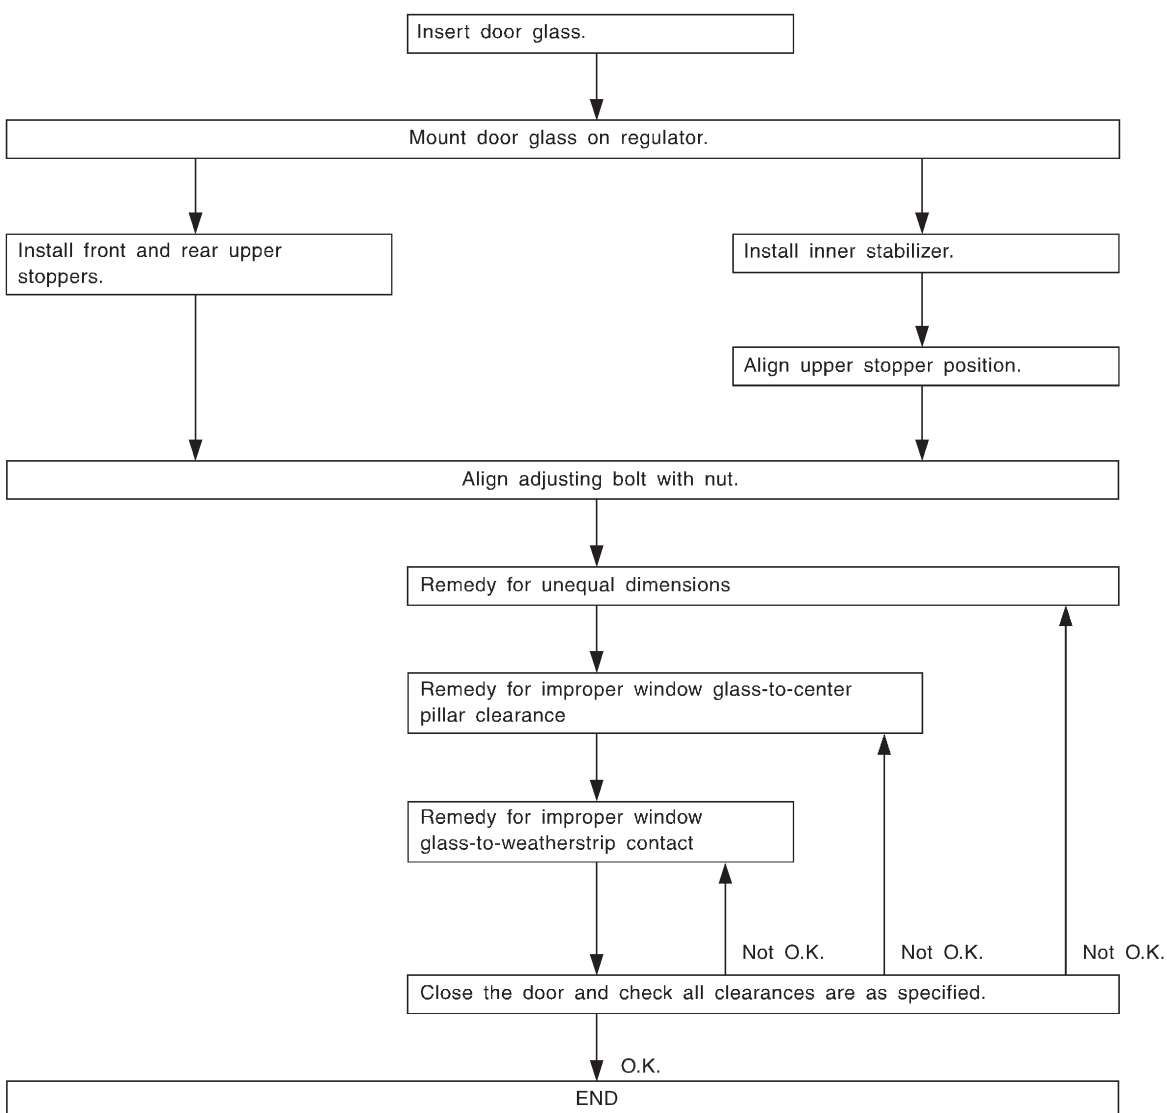**3. PROCEDURE CHART FOR ADJUSTING DOOR GLASS**

4. FRONT DOOR GLASS

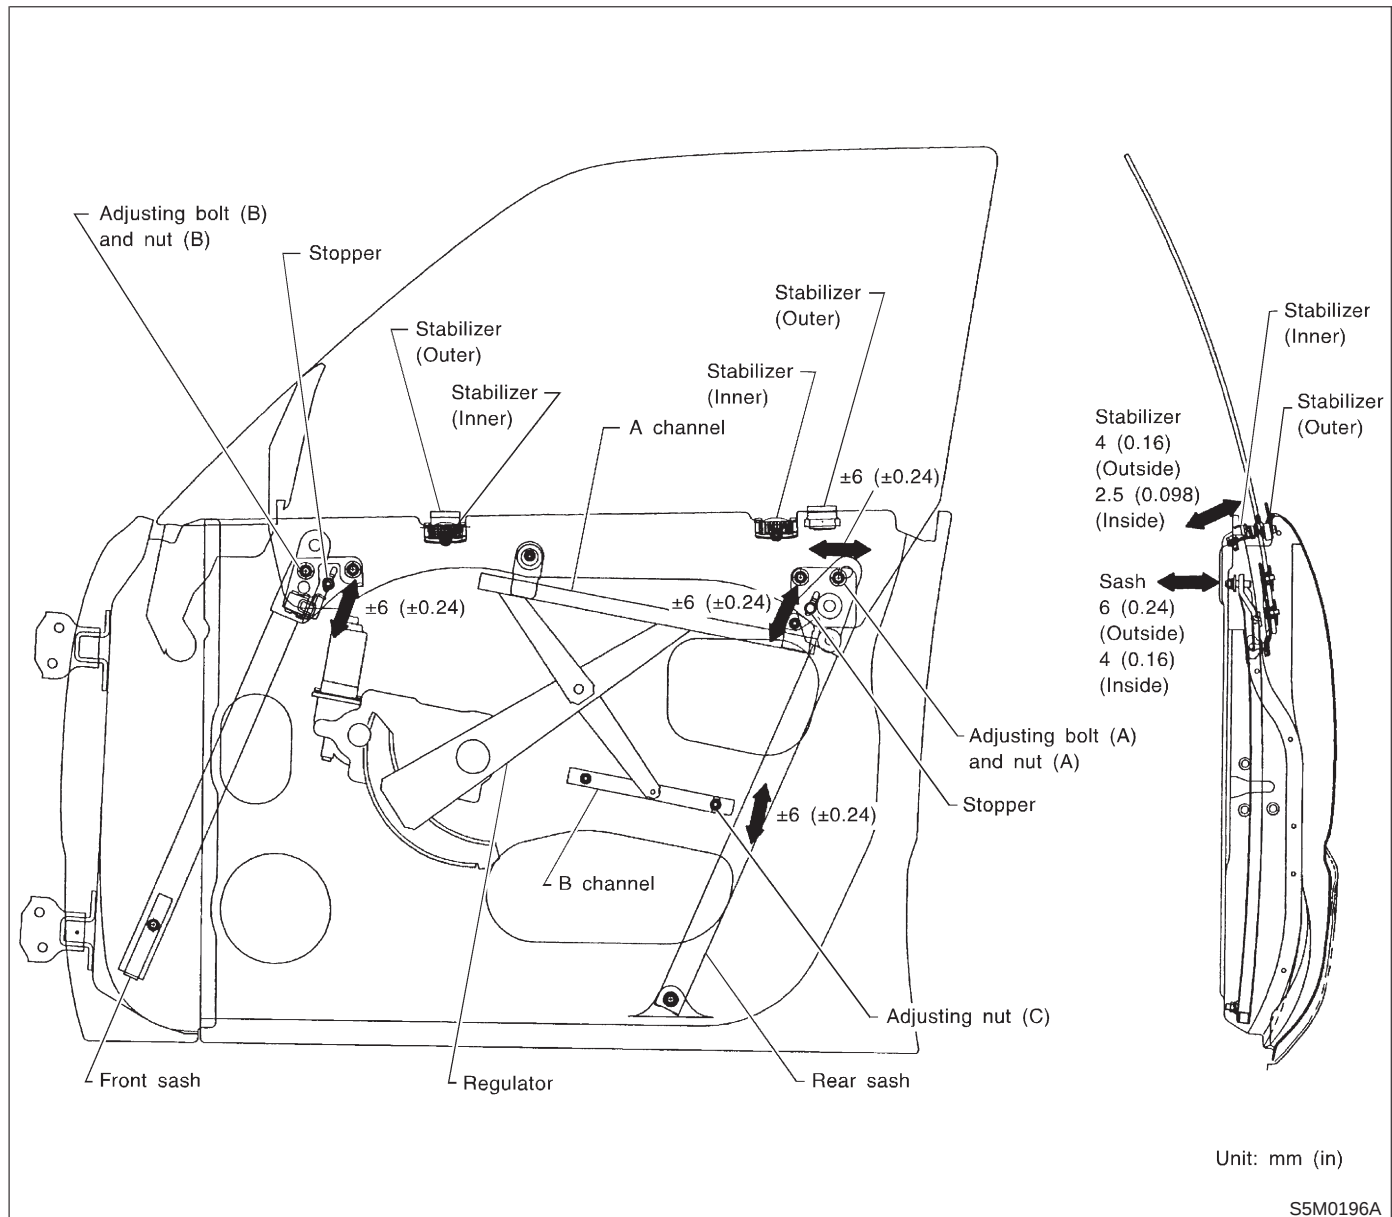

● Door glass fit adjustment

Before adjusting door glass alignment, ensure adjusting bolts for stabilizers, upper stoppers and sashes are loose and glass is raised so that it is in contact with upper and side weatherstrip.

1) Temporarily tighten one of the two rear sash adjusting bolts, at midpoint of oblong hole on inner panel.


2) Temporarily tighten regulator B channel at a position slightly lower than midpoint of oblong hole on inner panel.

3) Lower door glass 10 to 15 mm (0.39 to 0.59 in) from fully closed position. While applying outward pressure (load) to upper edge of glass above midpoint of two outer stabilizers, press inner stabilizer until it just touches the glass, then secure it.

Load: F


Front door glass 44.1 ± 4.9 N (4.5 ± 0.5 kg, 9.9 ± 1.1 lb)

Rear door glass 44.1 ± 4.9 N (4.5 ± 0.5 kg, 9.9 ± 1.1 lb)

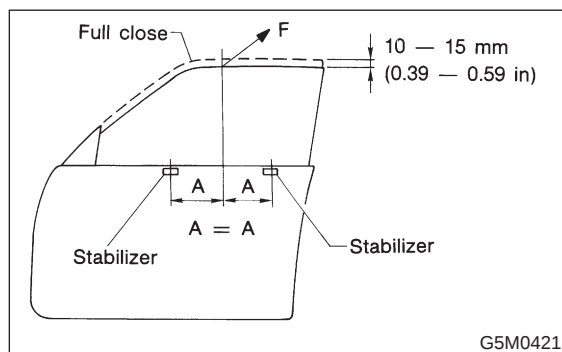

● Remedy for unequal dimensions, between upper, lower and center pillar sides


- 1) Close front door and raise door glass.
- 2) Make sure of unequal dimensions.

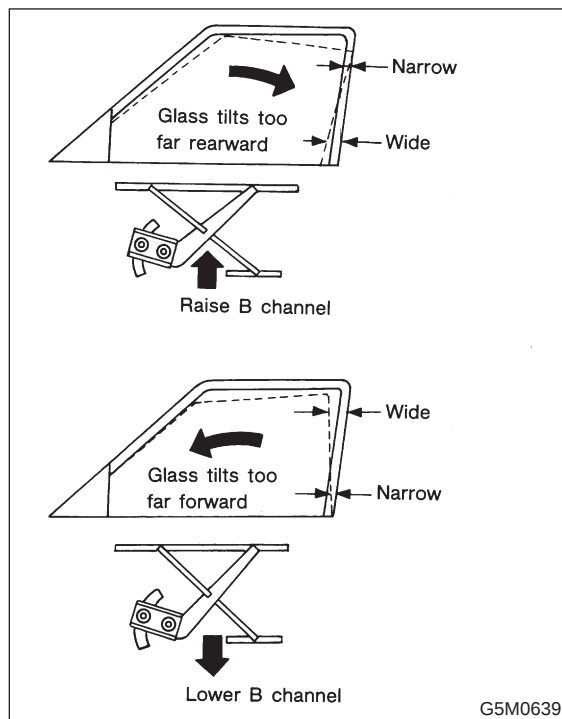

3) If glass tilts to far rearward, loosen adjusting nut (C) and adjust glass to be parallel with center pillar, then after adjustment, tighten adjusting nut (C).


Tightening torque:

7.4 ± 2.0 N·m (0.75 ± 0.2 kg·m, 5.4 ± 1.4 ft·lb)

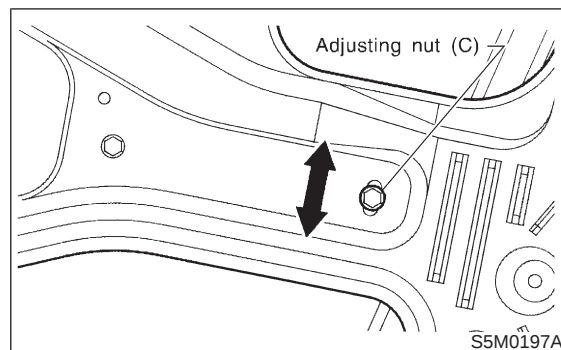


● Remedy for improper glass to center pillar clearance

- 1) Close front door and raise door glass.
- 2) Make sure of improper clearance.

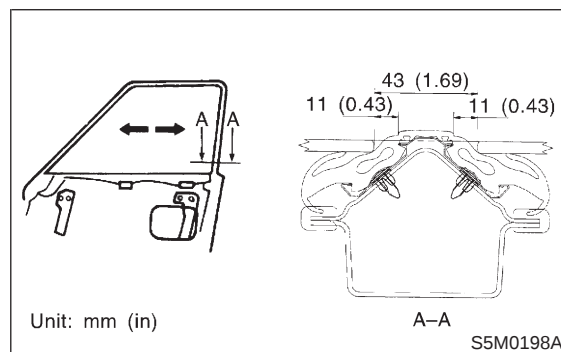

3) If clearance is improper, loosen adjusting nut (A), bolt (A) and adjust glass to center pillar.

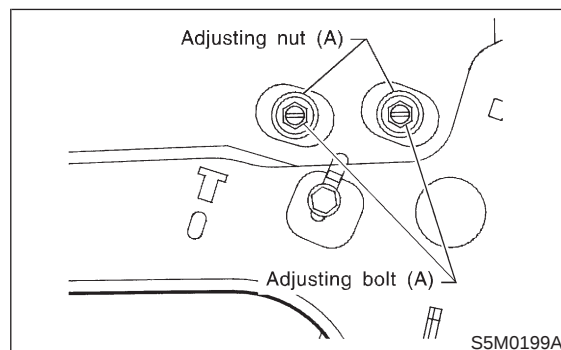


● Remedy for improper upper stop point of door glass

- 1) Loosen front and rear sash stoppers.

2. Door

2) Increase the upward travel of window glass up to the position where upper edge just touches weatherstrip surface with door closed.

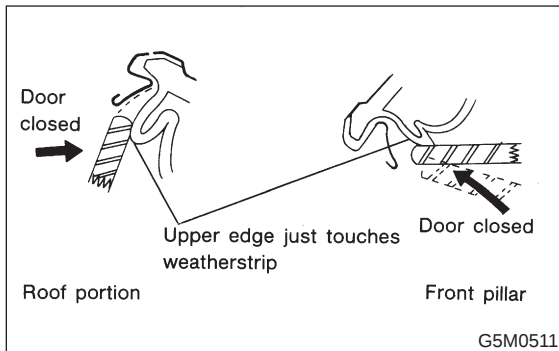


3) After adjustment, temporarily tighten stoppers.

NOTE:

Make sure that each glass stopper is touched.

● **Remedy for incorrect contact of door glass to weatherstrip**

- 1) Close front door and raise door glass.
- 2) If clearance is below specifications, loosen bolt (A) and bolt (B).
- 3) If clearance is over specifications, tighten bolt (A) and bolt (B).

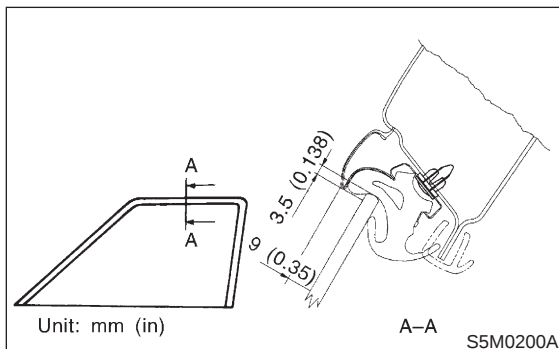

● **Fit adjustment**

Door glass fit is adjusted by displacing the glass front edge with a stabilizer.


NOTE:

Before adjusting glass fit, visually check to determine relative adjusting positions of retainer and molding (on roof side) and glass surface.


- 1) Alternately adjust two rear sash adjusting bolts (A) until dimensions are obtained.

CAUTION:

Do not loosen two adjusting nuts (A) at the same time, as this moves sash fore and aft, creating unequal glass-to-sash clearance. During adjustment, loosen only one nut and keep the other tightened.

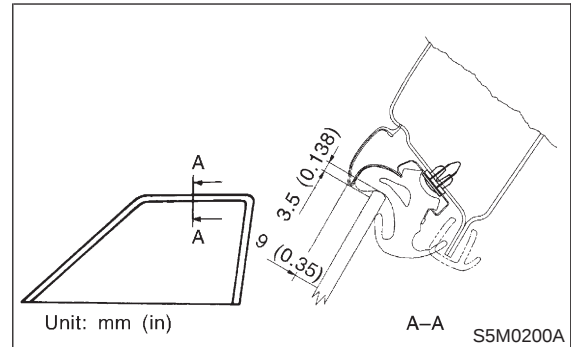**NOTE:**

Always adjust two rear sash adjusting bolts (A) by the same amount. Do not adjust the adjusting bolts with sash bracket inclined toward inner panel, as this increases effort required to operate regulator.

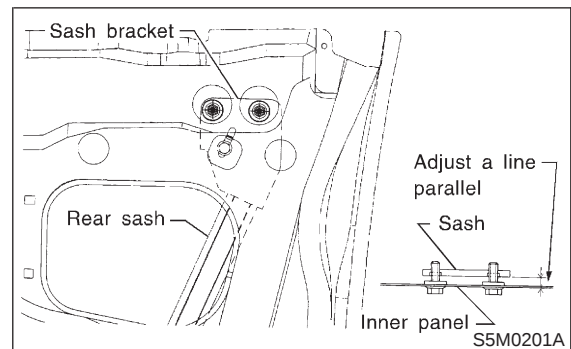

- 2) Adjust front sash fit using rear sash adjustment procedure outlined in the former procedure as a guide. Two adjusting bolts must be adjusted by the same amount.


NOTE:

- Front and rear sash adjustment procedures are basically the same; however, the amount of adjustment is not always the same due to alignment dispersion of individual doors.
- Adjust front and rear sash fit, as equally as possible. Otherwise, effort required to operate regulator may increase.

- 3) After adjusting front sash-to-glass fit, secure front sash.

5. REAR DOOR GLASS

Alignment of rear door glass is basically the same as for the front door glass. Due to slight difference in adjustment dimensions for fore-aft, up-down, and in-out alignments, key points for rear door adjustment are described.

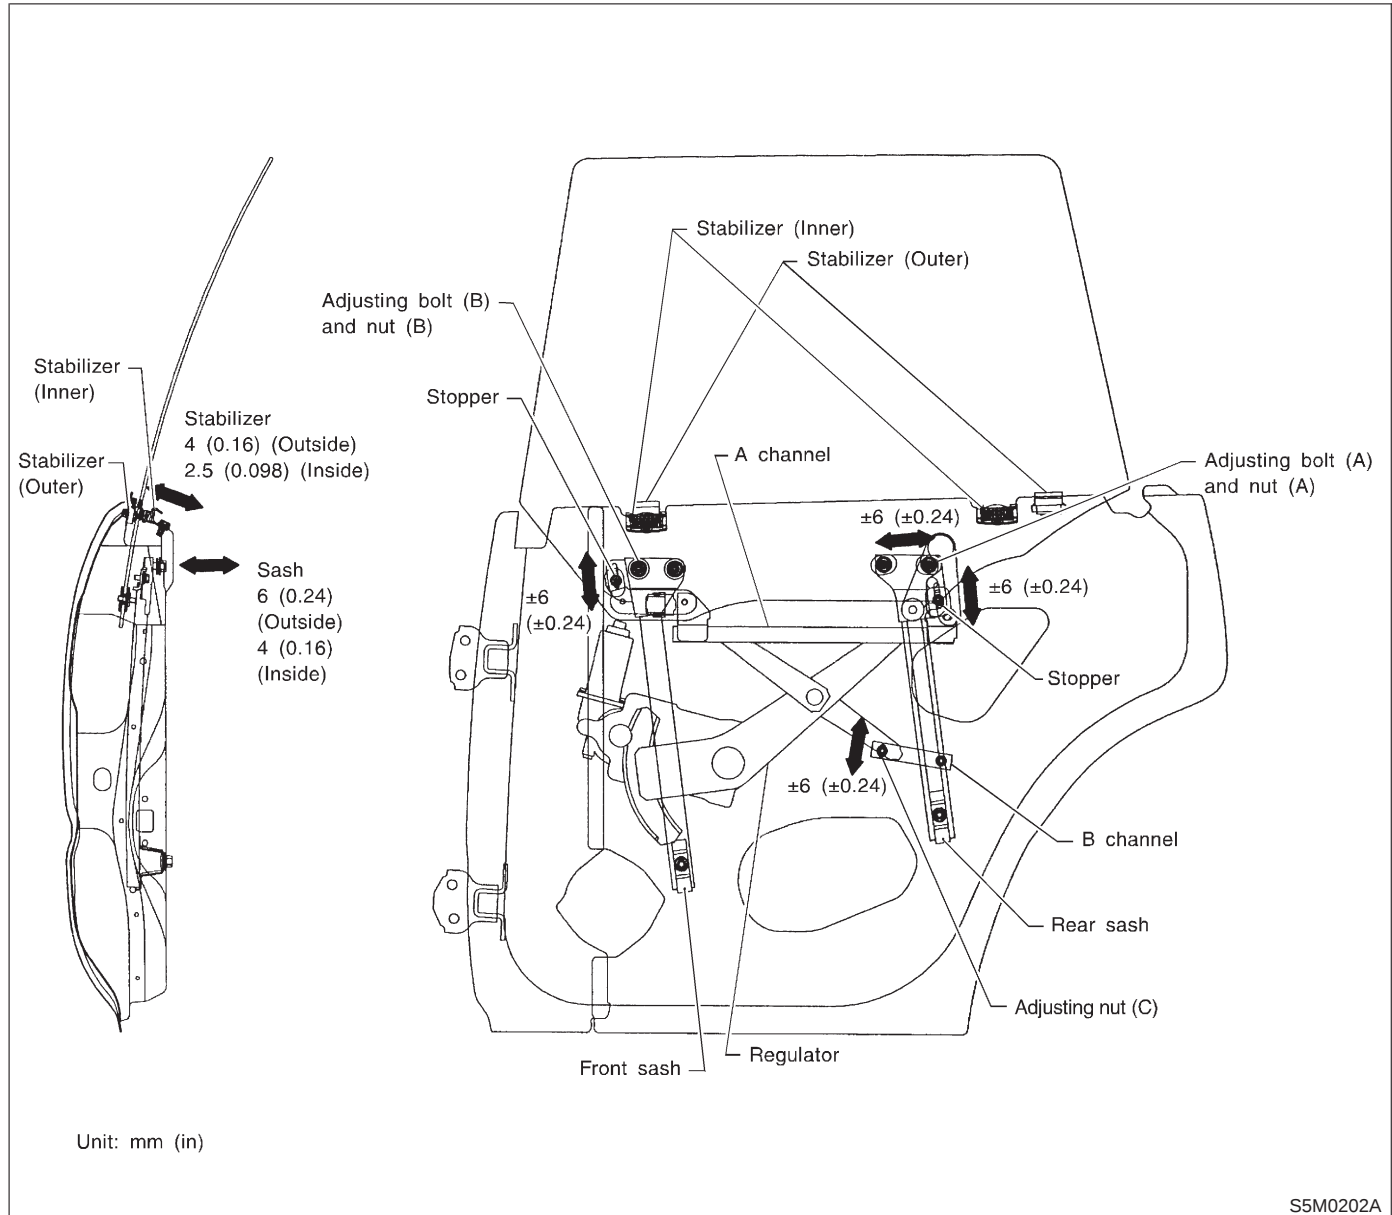


● Fore-aft adjustment

1) Door glass alignment must be adjusted so that glass-to-center pillar fit is equal at all points. Always use dimensions as a guide during adjustment.

NOTE:

If dimensions are smaller than those indicated, glass will be caught in weatherstrip and may not raise to the fully closed position.

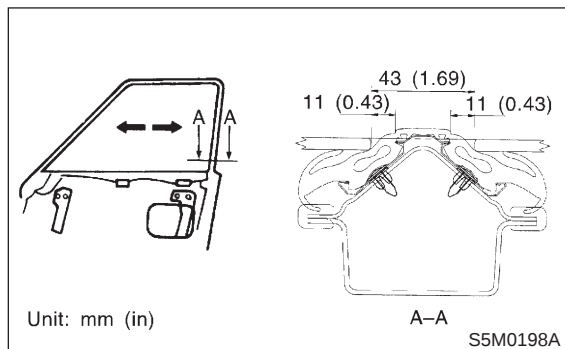


2) After making fore-aft adjustment, raise and lower glass to ensure it is free from any binding.

C: INSPECTION

1. FRONT DOOR GLASS

1) Close front door and make sure of all clearances.

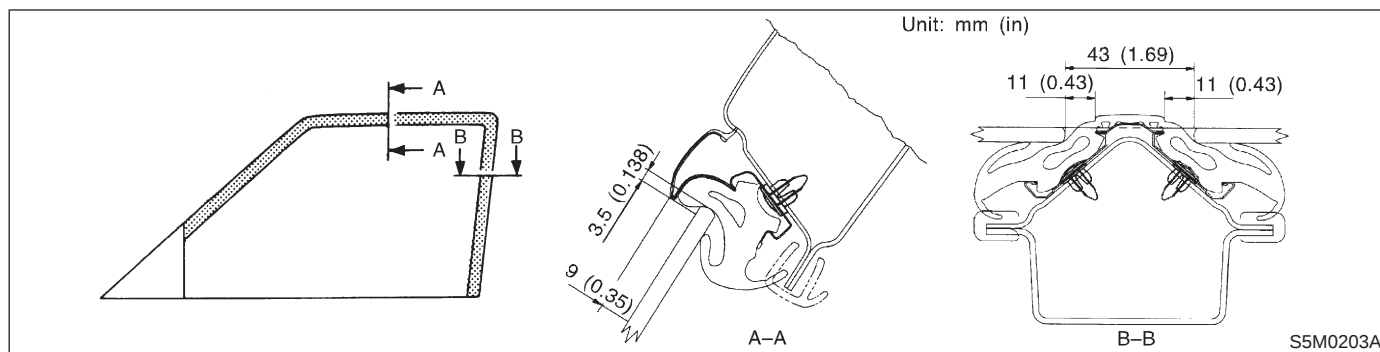


2) If any clearance is not correct, adjust affected parts. Re-check that all clearances are correct.

CAUTION:

● Repeatedly adjust parts until all clearances are correct.

● Fit adjustment


Increasing contact pressure causes rear door glass to be caught in center pillar upper and lower weatherstrip; this will cause premature weatherstrip wear. For this reason, always use dimensions indicated in figure as a guide during glass fit adjustment.

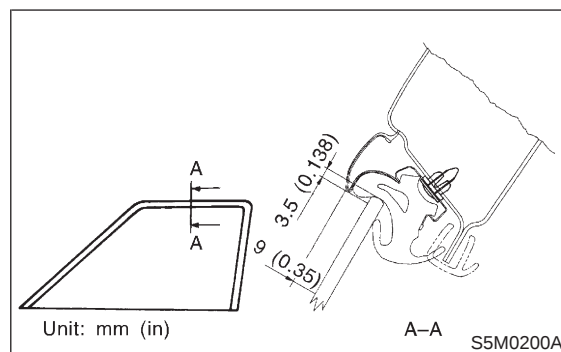

● After clearance adjustment, make sure that all adjusting bolts and nuts are tightened.

2. REAR DOOR GLASS

- 1) Close rear door and make sure of all clearances.

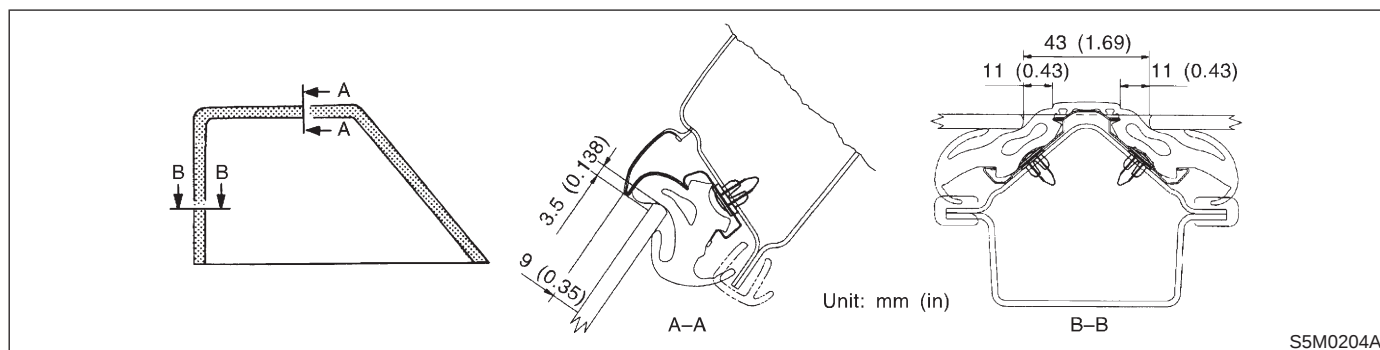

- 2) If any clearance is not correct, adjust affected parts. Re-check that all clearances are correct.

CAUTION:

- Repeatedly adjust parts until all clearances are correct.
- After clearance adjustment, make sure that all adjusting bolts and nuts are tightened.

3. Rear Gate

A: REMOVAL AND INSTALLATION

CAUTION:


- Be careful not to scratch coated surfaces of vehicle body and window glass during removal. Place a cloth over the affected area.
- Be careful not to damage trim panels.
- Use an assistant when handling heavy parts.
- Be careful not to damage or lose small parts.

1. REAR GATE ASSEMBLY

- 1) Remove clips from trim panel and detach trim panel.

CAUTION:

Be careful not to damage clips or their holes.

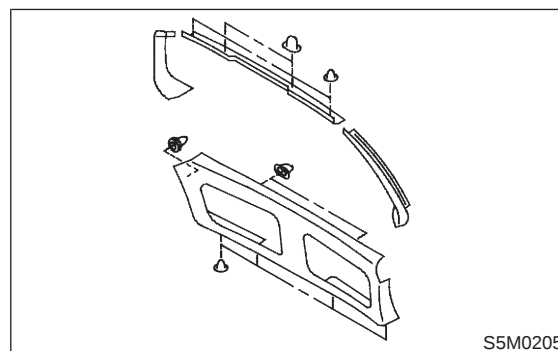

- 2) Disconnect connectors and terminal.
- 3) Disconnect rear washer hose from wiper motor.
- 4) If disconnected harness is re-used, tie connector with a string and place on the upper side of rear gate for ready use.

CAUTION:

Do not forcefully pull cords, lead wires, etc. since damage may result; carefully extract them in a wavy motion while holding connectors.

- 5) Remove both rubber ducts and then extract washer hose and harness connector.