


## 6. Combination Switch

### A: REMOVAL


- 1) Turn ignition switch off.
- 2) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove lower cover. <Ref. to 5-4 [W1A0].> Disconnect airbag connector (AB3) and (AB8) below steering column.

**CAUTION:**


**Do not reconnect airbag connector at steering column until combination switch is securely installed.**

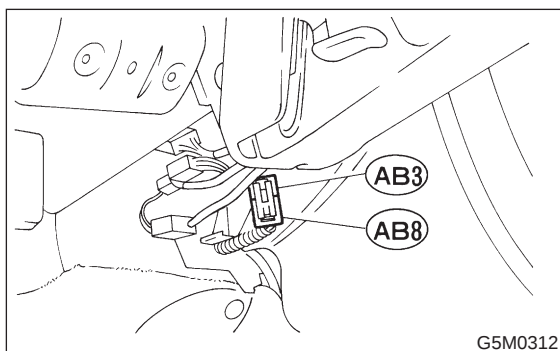

- 4) Disconnect combination switch connectors from body harness connector.
- 5) Set front wheels in straight ahead position. Using T30 TORX® bit, remove two TORX® bolts.

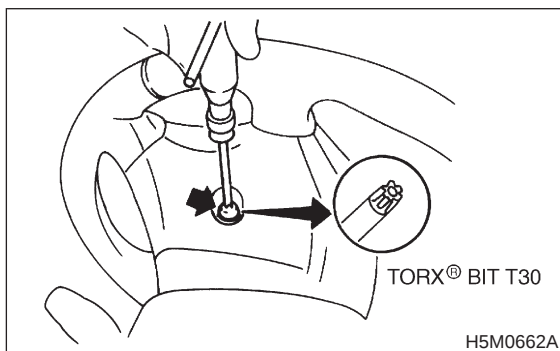


- 6) Disconnect airbag connector on back of airbag module. Remove airbag module, and place it with pad side facing upward. <Ref. to 5-5 [W3A0].>

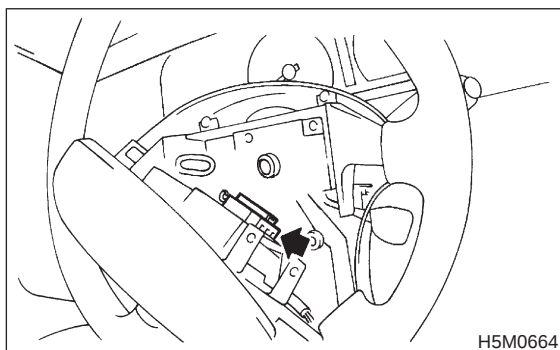


- 7) Using steering puller, remove steering wheel.

**CAUTION:**

**Do not allow connector to interfere when removing steering wheel.**

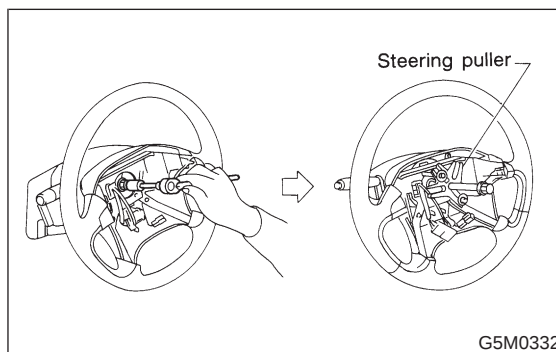

- 8) Remove steering column covers.
- 9) Removing three retaining screws, remove combination switch.

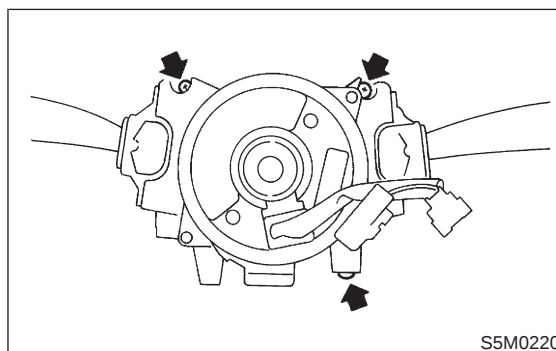


### B: ADJUSTMENT

#### 1. CENTERING ROLL CONNECTOR

Before installing steering wheel, make sure to center roll connector built into combination switch.

- 1) Make sure that front wheels are positioned straight ahead.
- 2) Install steering gearbox, steering shaft and combination switch properly. Turn roll connector pin (A) clockwise until it stops.
- 3) Then, back off roll connector pin (A) approximately 2.65 turns until "▲" marks aligned.

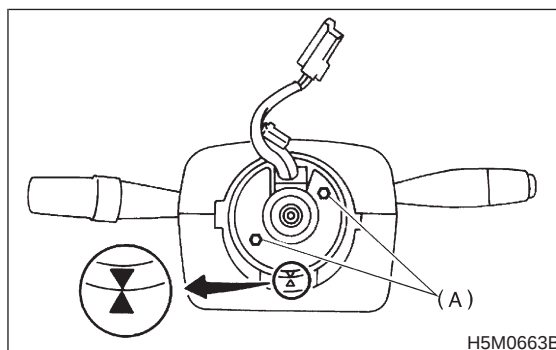

**C: INSTALLATION****CAUTION:**


**Failure to do this might damage roll connector.**

- 1) Before installing combination switch, check to ensure that combination switch is off and front wheels are set in the straight ahead position.
- 2) Install column cover and center roll connector.  
<Ref. to 5-5 [W6B1].>
- 3) Install steering wheel in neutral position. Carefully insert roll connector pin (A) into hole on steering wheel.

**NOTE:**

If steering wheel angle requires fine adjustment, adjust tie-rod.

- 4) Install airbag module and lower cover in the reverse order of removal.

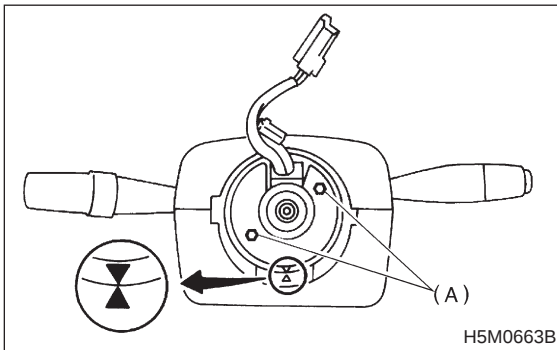

MEMO: