


5) Install in the reverse order of removal.

Tightening torque:


$4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.15 \text{ kg}\cdot\text{m}$, $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

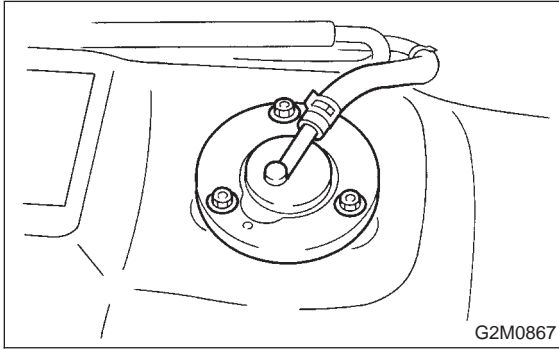


7. Roll Over Valve

A: REMOVAL AND INSTALLATION

- 1) Lift-up the vehicle.
- 2) Remove roll over valve from bracket.

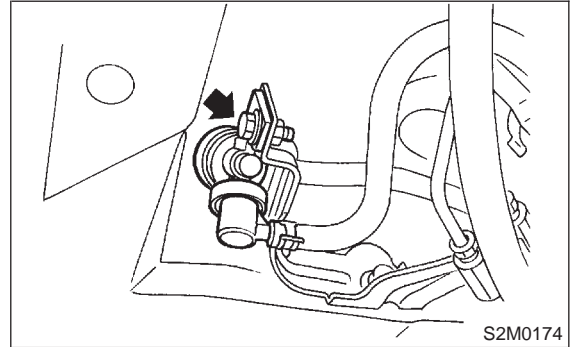


- 3) Disconnect hoses from roll over valve, and remove it from bracket.

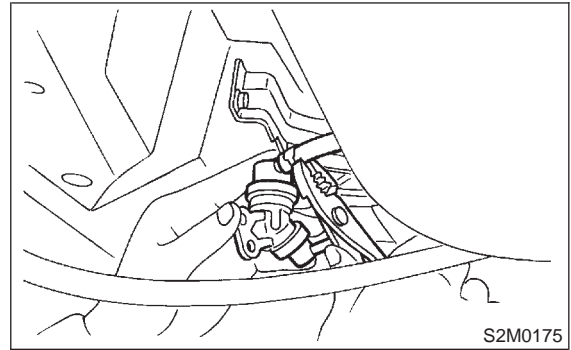

- 4) Install in the reverse order of removal.


CAUTION:

- Do not install top side of valve down.
- Before installing bracket on body, securely fit concave part of bracket to hole in body.

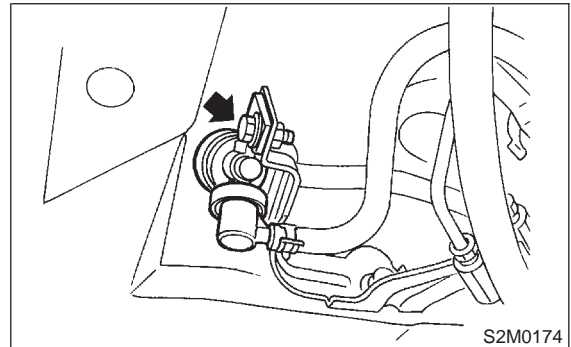

B: INSPECTION

1) Connect hoses to roll over valve as shown in Figure.

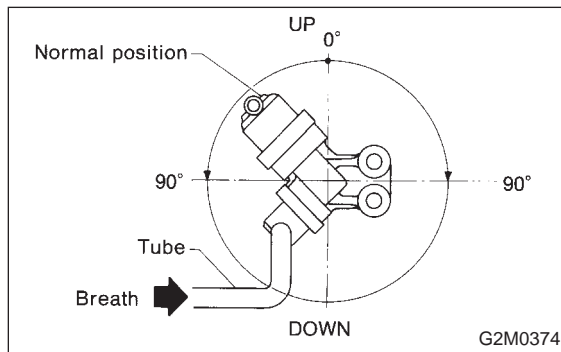


2) While blowing through open end of hose, tilt valve at least 90° left and right from normal position.

3) Ensure that there is no air flow when hose is tilted greater than 90°.


8. Fuel Filter**A: REMOVAL****WARNING:**

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel on the floor.

- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Disconnect battery ground cable.

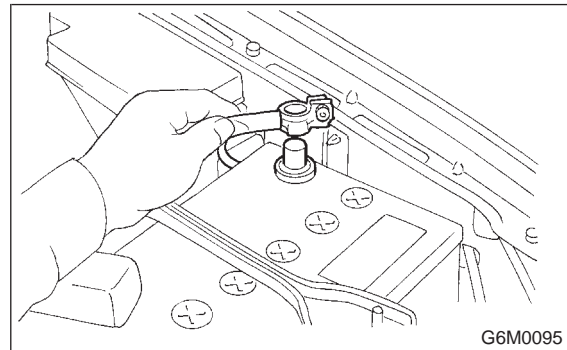

- 3) Disconnect fuel delivery hoses from fuel filter.

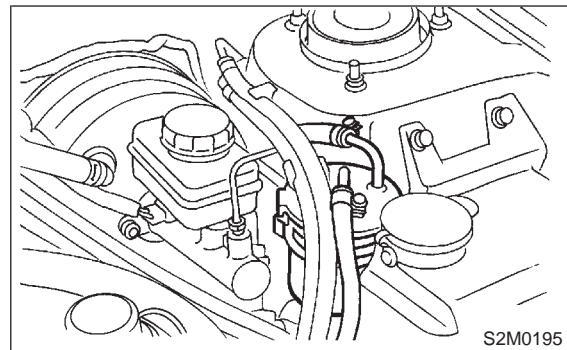

- 4) Remove filter from holder.

B: INSPECTION

- 1) Check the inside of fuel filter for dirt and water sediment.
- 2) If it is clogged, or if replacement interval has been reached, replace it.
- 3) If water is found in it, shake and expel the water from inlet port.