



## 15. Transmission Case

### A: REMOVAL

- 1) Remove the manual transmission assembly from the vehicle. <Ref. to 5MT-26, REMOVAL, Manual Transmission Assembly.>
- 2) Remove the clutch release lever. <Ref. to CL-15, REMOVAL, Release Bearing and Lever.>
- 3) Remove the transfer case together with the extension case assembly. <Ref. to 5MT-39, REMOVAL, Transfer Case and Extension Case Assembly.>
- 4) Remove the bearing mounting bolts.

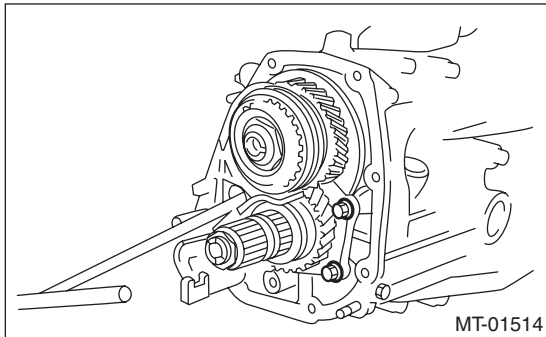


- 5) Remove the main shaft rear plate.

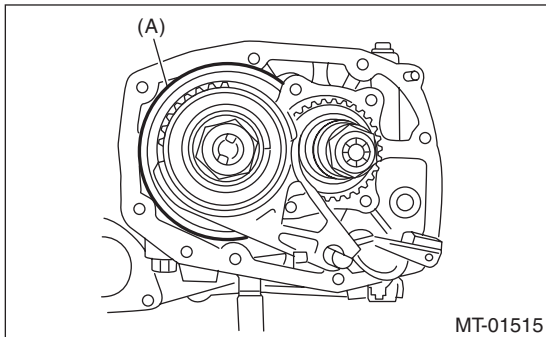

(A) Main shaft rear plate


- 6) Separate the transmission case into the right and left cases by loosening the coupling bolts and nuts.

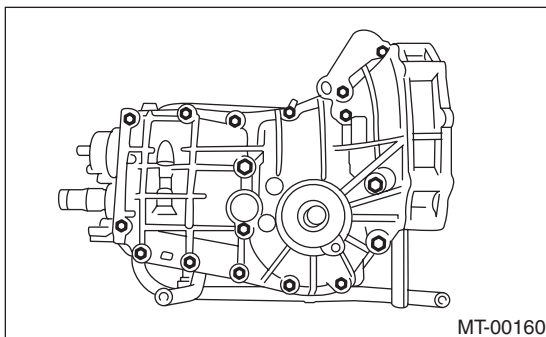

- 7) Remove the drive pinion shaft assembly from the left side of the transmission case and remove the main shaft assembly.

#### NOTE:

Use a hammer handle, etc. to remove if too tight.

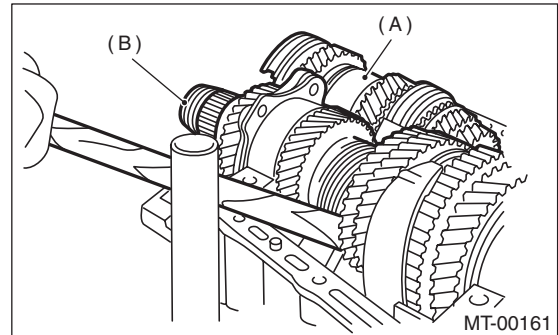


(A) Air assist injector solenoid valve

(B) Drive pinion shaft ASSY

- 8) Remove the differential assembly.

#### NOTE:

- Do not confuse the right and left roller bearing outer races.
- Be careful not to damage the oil seal of retainer.

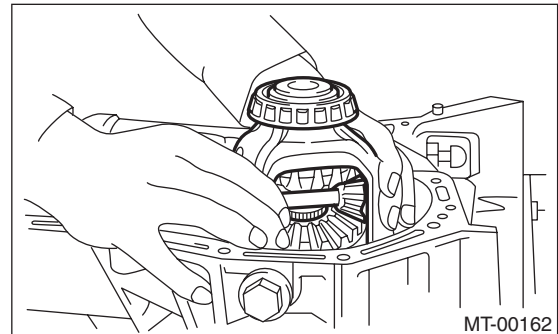

# Transmission Case

## MANUAL TRANSMISSION AND DIFFERENTIAL

### B: INSTALLATION

- 1) Wipe off grease, oil and dust on the mating surfaces of transmission cases with a cleaning solution.
- 2) Install the front differential assembly.
- 3) Install the main shaft assembly.  
Install the transmission case knock pin into the knock pin hole of needle bearing.
- 4) Install the drive pinion shaft assembly.  
Install the transmission case knock pin into the roller bearing knock pin hole.
- 5) Apply liquid gasket, and then join the right side and left side of the case together.

#### Liquid gasket

**THREE BOND 1215 (Part No. 004403007) or equivalent**

- 6) Tighten the bolt together with the bracket and the clip, as shown in the figure.

#### NOTE:

- Insert the 10 mm bolts from the bottom and tighten the nuts at the top.
- Put the cases together so that the drive pinion shim and input shaft holder shims are not caught in between.
- Check that the speedometer gear is engaged.


#### Tightening torque:

**8 mm bolt**

**25 N·m (2.5 kgf-m, 18.1 ft-lb)**

★ **10 mm bolt**


**39 N·m (4.0 kgf-m, 28.9 ft-lb)**

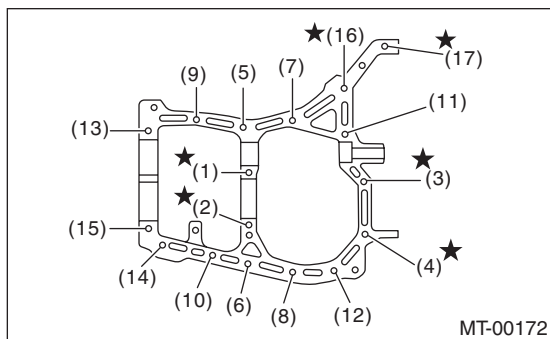

- 7) Tighten the bearing mounting bolts.

#### Tightening torque:


**30 N·m (3.1 kgf-m, 22.1 ft-lb)**

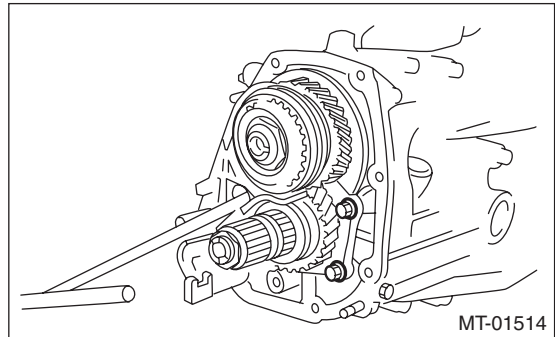

- 8) Perform backlash adjustment of the hypoid gear and preload measurement of the roller bearing.

#### NOTE:

Support the drive pinion assembly with the ST.  
ST 498427100 STOPPER

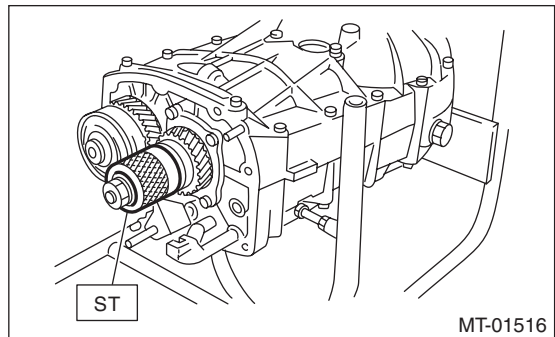

- 9) Place the transmission with the left side of case facing downward, and put ST1 on bearing cup.


- 10) Screw the retainer assembly from the bottom into left case using ST2. Fit the ST3 on transmission main shaft. Shift the gear into 4th or 5th, and turn the shaft several times. Screw in the retainer while rotating the ST3 until a slight resistance is felt on ST2.

This is the contact point of the hypoid gear and the drive pinion shaft. Repeat the above sequence several times to ensure the contact point.

ST1 399780104 WEIGHT

ST2 18630AA010 WRENCH COMPL RETAINER

ST3 499927100 HANDLE

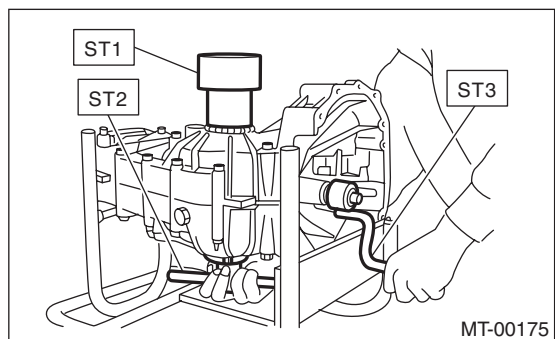

# Transmission Case


## MANUAL TRANSMISSION AND DIFFERENTIAL

11) With the O-ring on the upper side removed, remove the retainer weight and screw, and stop at a point where a slight resistance is felt.

### NOTE:

At this point, the backlash between the hypoid gear and drive pinion shaft is zero.

ST 18630AA010 WRENCH COMPL RETAINER

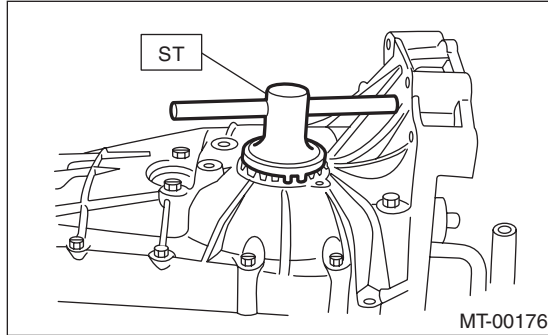

12) Loosen the retainer on the lower side by 3 notches of the lock plate, and turn the retainer on the upper side by the same amount in order to obtain the backlash.

13) Rotate the retainer of the upper side additionally by 1 notch in order to apply preload on taper roller bearing.

14) Temporarily attach both the upper and lower lock plates, and put marks both the holder and lock plate for later readjustment.

### NOTE:

If it is hard to attach the lock plate, attach with the front and back reversed.

15) Turn the transmission main shaft several times while tapping around the retainer lightly with plastic hammer.

16) Inspect and adjust backlash and tooth contact of the hypoid gear. <Ref. to 5MT-70, INSPECTION, Front Differential Assembly.>


17) After checking the tooth contact of the hypoid gears, remove the lock plate. Then loosen the retainer until the O-ring groove appears. Fit the O-ring into the groove and then tighten the retainer up to its original position before it was loosened. Install the lock plate.

### NOTE:

- When loosening the retainer, record the turns it took before the retainer was loosened.
- Perform this for both upper and lower retainers.

### Tightening torque:

**T: 25 N·m (2.5 kgf-m, 18.1 ft-lb)**

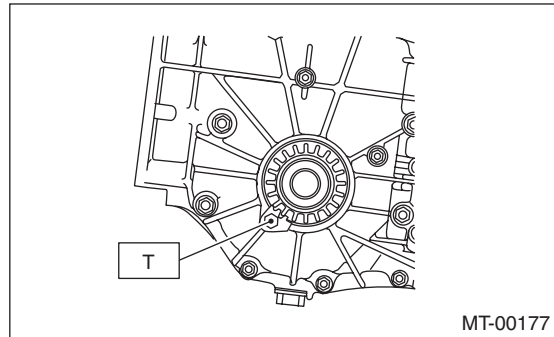

18) Select the main shaft rear plate. <Ref. to 5MT-58, ADJUSTMENT, Main Shaft Assembly for Single-range.>

19) Install the clutch release lever and bearing. <Ref. to CL-15, INSTALLATION, Release Bearing and Lever.>

20) Install the transfer case together with the extension case assembly. <Ref. to 5MT-39, INSTALLATION, Transfer Case and Extension Case Assembly.>

21) Install the manual transmission assembly to the vehicle. <Ref. to 5MT-28, INSTALLATION, Manual Transmission Assembly.>

## C: INSPECTION

Check the transmission case for cracks, damage, or oil leaks.