


## 2. Rear Seat (Sedan and Coupe)

### A: REMOVAL


1) Remove bolts securing hinges (located at front of cushion) to body.

2) Slightly raise front of cushion while pushing down on cushion in the direction of "C". With cushion held in that position, move it forward until it is unhooked.

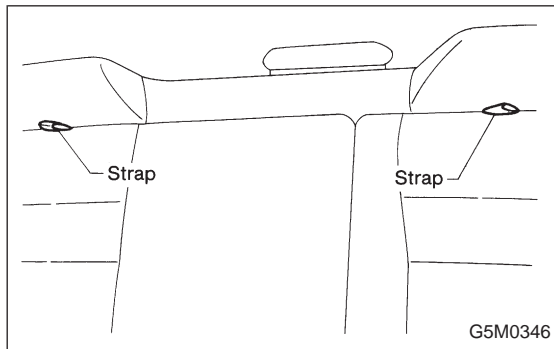



3) Remove bolts securing lower portion of backrest to body.

4) Pull strap (located in center of fold-down backrest) to release lock, and fold backrest onto cushion. (Fold-Down type)

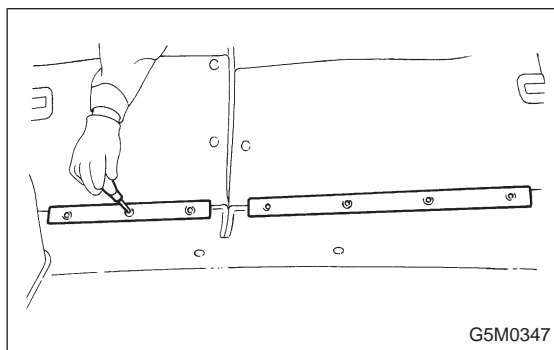

5) Remove screws (located at overlapped portions of trunk compartment mat) and mat (on rear of backrest), and remove edges. (Fold-Down type)

6) Lift rear seat backrest in direction "A" until it is released from upper hooks.

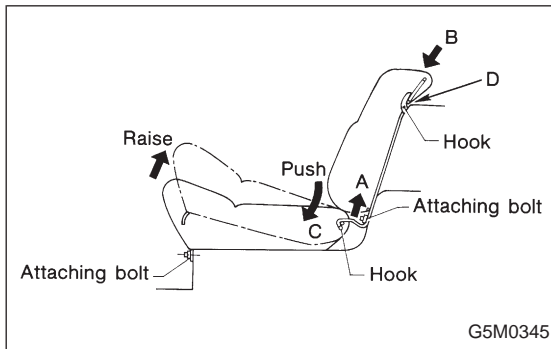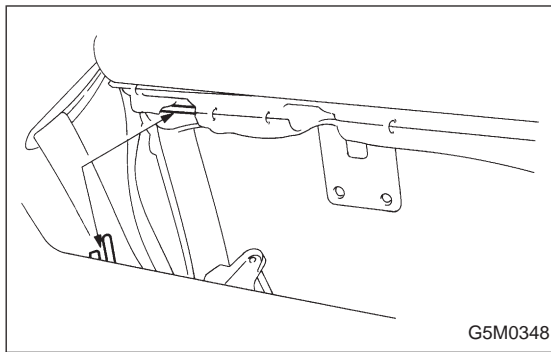

## B: INSTALLATION

- 1) Before installing backrest, ensure that trim panel, insulator and seat belt are properly installed.
- 2) Transfer outer seat belt webbing to front of backrest and fold backrest forward. Attach seat belt webbing to upper hooks (2 places), and move pillow in the direction of "B" until backrest is aligned with lower mounting holes in body.
- 3) Engage backrest's folding mechanism with striker.
- 4) Secure lower center and both sides of backrest to body with bolts.
- 5) Slightly raise front section of cushion while pushing down on cushion in the direction of "C". With cushion held in that position, attach rear section of cushion to hooks at lower frame location.
- 6) Secure front of cushion to body with bolts.
- 7) Fold backrest onto cushion and overlap trunk mat and mat (on backrest). While pushing down on edges of the mats, tighten with screws.

### CAUTION:

- Before installing seat, ensure that seat belt is placed on cushion.
- Observe instructions when storing seat belt in belt pocket in backrest.
- Before removing or installing backrest, remove seat belt from belt pocket.
- Confirm that winding of three-point type seat belt can operate regularly.