



4. Ignition Coil and Ignitor Assembly

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

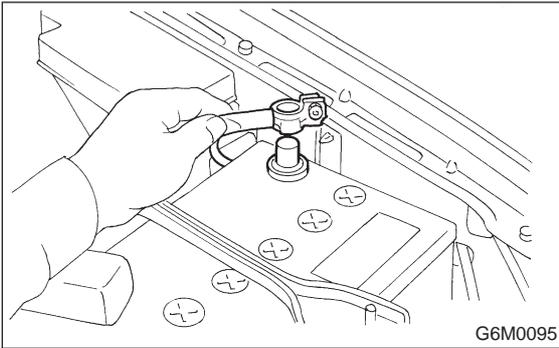

- 2) Disconnect spark plug cords from ignition coil and ignitor assembly.
- 3) Disconnect connector from ignition coil and ignitor assembly.

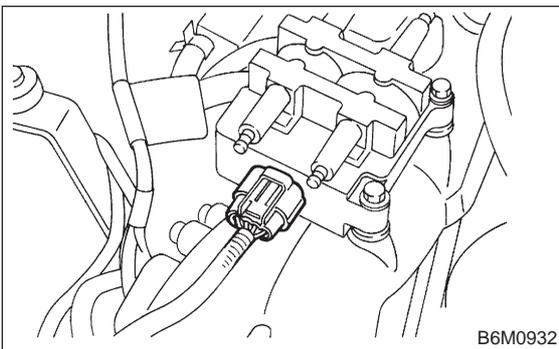

- 4) Remove ignition coil and ignitor assembly.

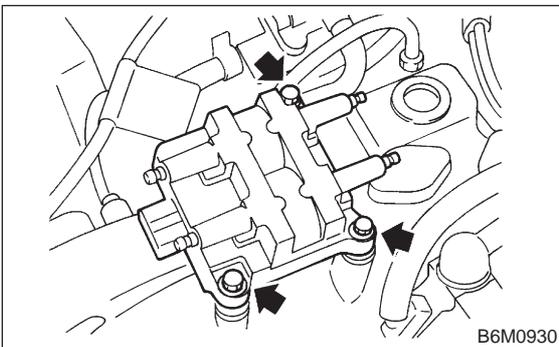

- 5) Installation is in the reverse order of removal.

CAUTION:

Be sure to connect wires to their proper positions. Failure to do so will damage unit.

B: INSPECTION

Using accurate tester, inspect the following items, and replace if defective.

- 1) Primary resistance
- 2) Secondary coil resistance

CAUTION:

If the resistance is extremely low, this indicates the presence of a short-circuit.

Specified resistance:


[Primary side]

Between terminal No. 1 and No. 2

$0.73 \Omega \pm 10\%$

Between terminal No. 2 and No. 4

$0.73 \Omega \pm 10\%$

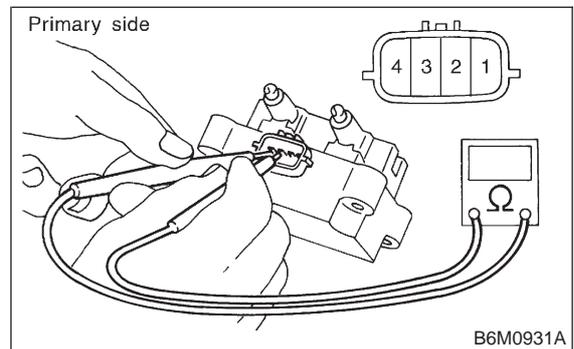


[Secondary side]

Between (A) and (B)

$12.8 k\Omega \pm 15\%$

Between (C) and (D)

$12.8 k\Omega \pm 15\%$

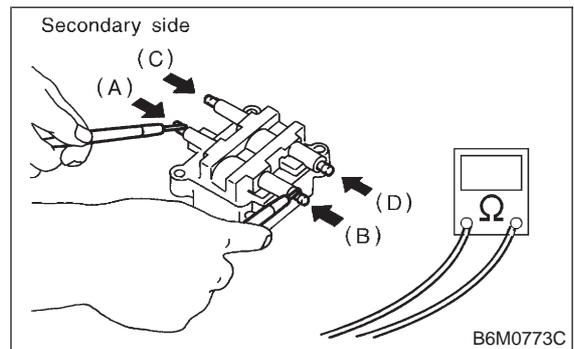

- 3) Insulation between primary terminal and case: 10 M Ω or more.