

20. Fuel S145052

A: OPERATION S145052A16


1. RELEASING OF FUEL PRESSURE

S145052A1601

WARNING:

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel on the floor.

- 1) Disconnect connector from fuel pump relay.

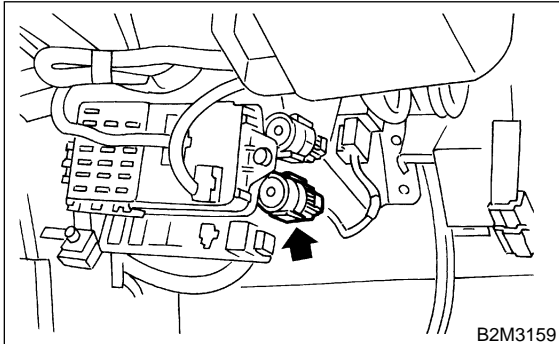


- 2) Start the engine and run it until it stalls.
- 3) After the engine stalls, crank it for five more seconds.
- 4) Turn ignition switch to OFF.

2. DRAINING FUEL S145052A1602


WARNING:

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel on the floor.


- 1) Set vehicle on the lift.
- 2) Disconnect battery ground cable.

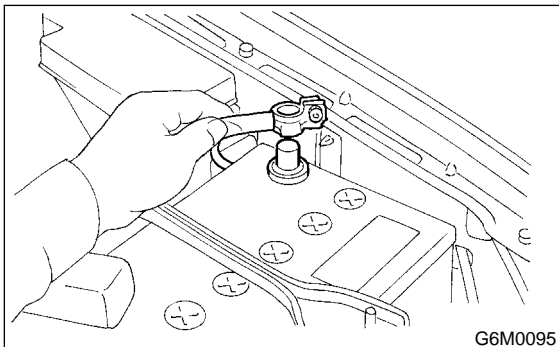

- 3) Lift-up the vehicle.
- 4) Remove front right side fuel tank cover.

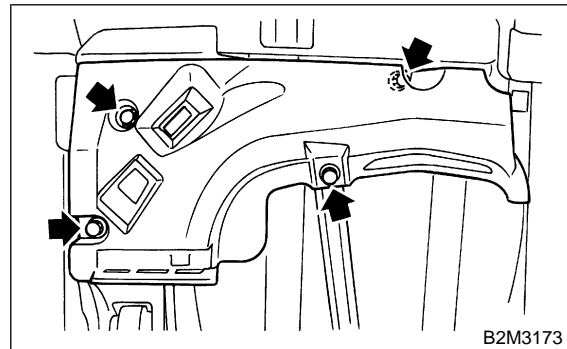


- 5) Drain fuel from fuel tank. Set a container under the vehicle and remove drain plug from fuel tank.

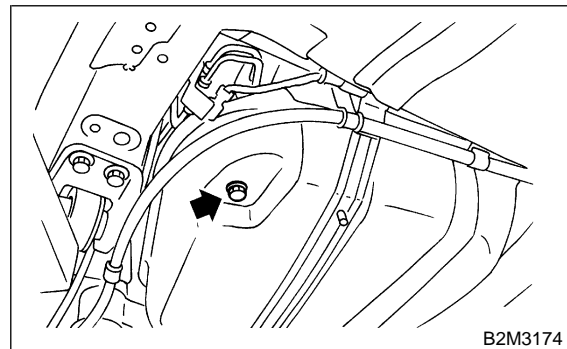

- 6) Tighten fuel drain plug and install front right side tank cover.

Tightening torque:


26 N·m (2.65 kgf·m, 19.2 ft·lb)

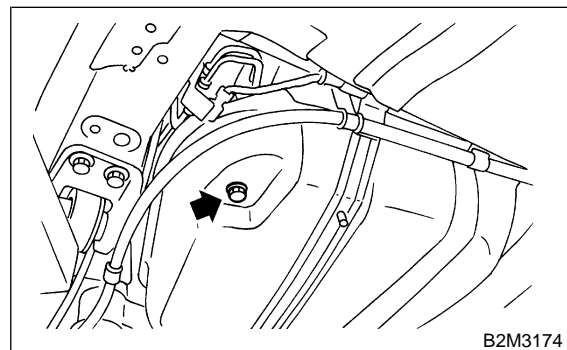


FUEL

Fuel Injection (Fuel Systems)


Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

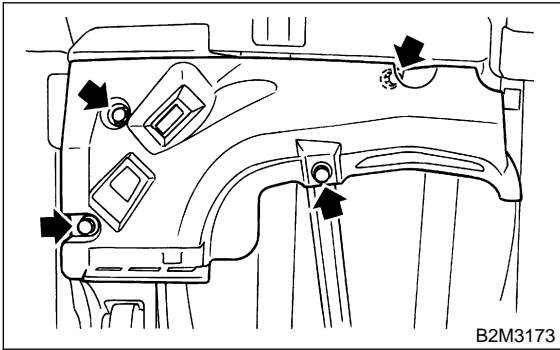


- 7) Lower the vehicle.
- 8) Remove sub service hole cover.

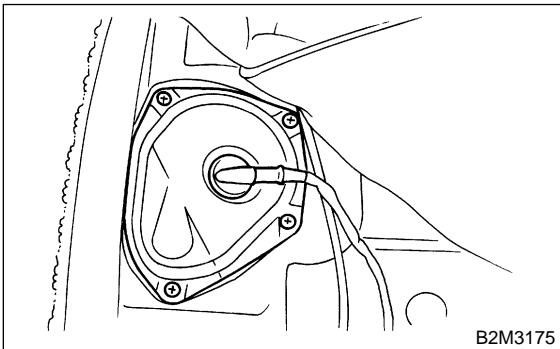


- 9) Disconnect connector from fuel sub level sensor.

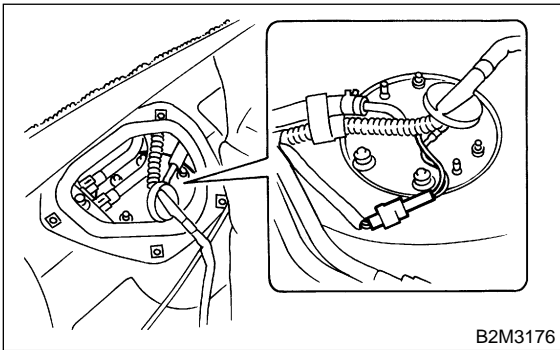

- 10) Disconnect fuel jet pump hose.

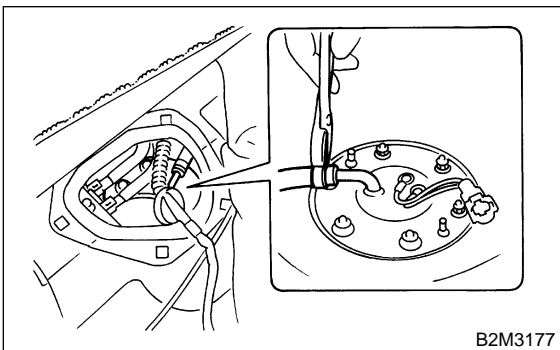

- 11) Remove fuel sub level sensor.

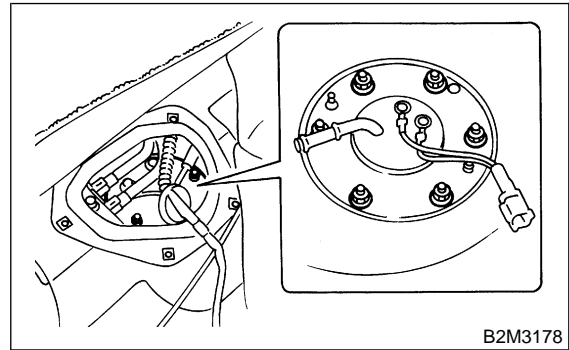


- 12) Drain fuel from fuel tank by using hand pump.

WARNING:
Do not use a motor pump when draining fuel.


- 13) After draining fuel, reinstall fuel sub level sensor.

Tightening torque:
T: 4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

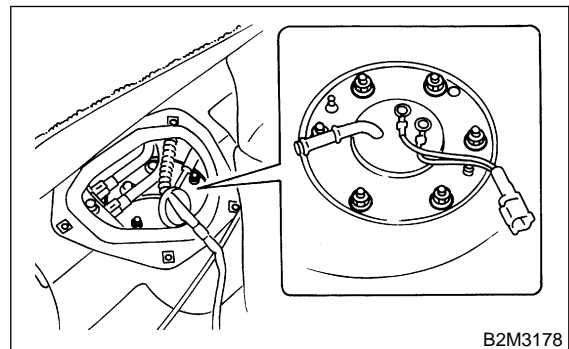


NOTE:
If you have not removed fuel tank yet, proceed with the procedure below for installation.


- (1) Connect fuel jet pump hose.

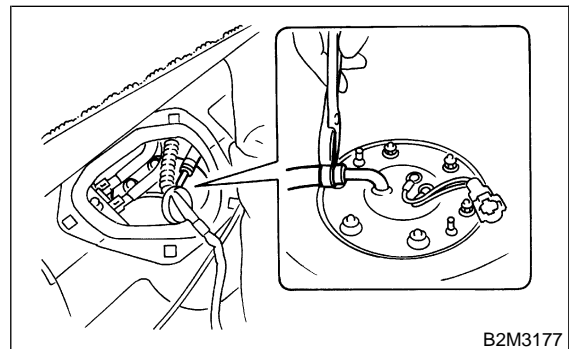

- (2) Connect connector from fuel sub level sensor.

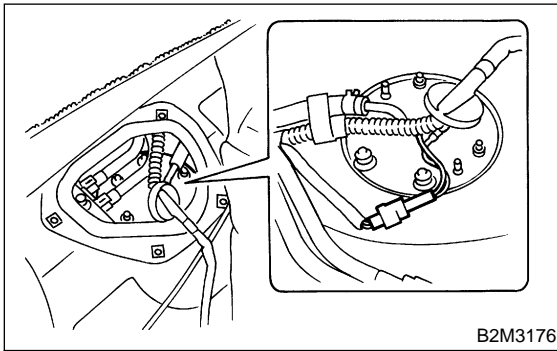

- (3) Install sub service hole cover.

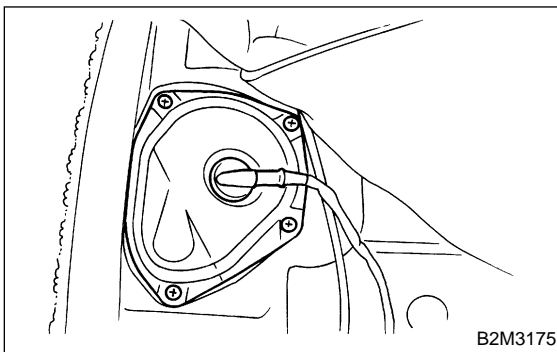

- (4) Set rear seat and floor mat.