


**9. OBD-II General Scan Tool** S048527

**A: OPERATION** S048527A16

**1. HOW TO USE OBD-II GENERAL SCAN TOOL** S048527A1601

- 1) Prepare a general scan tool (OBD-II general scan tool) required by SAE J1978.
- 2) Open the cover and connect the OBD-II general scan tool to the data link connector (A) located in the lower portion of the instrument panel (on the driver's side).

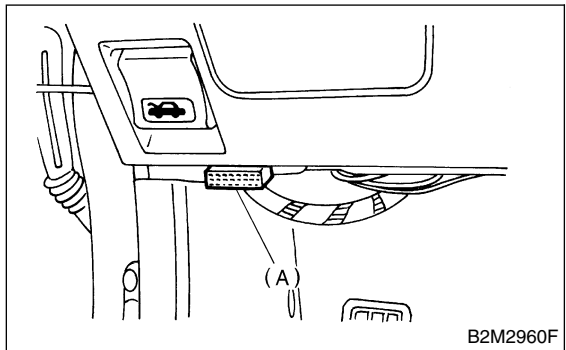

- 3) Using the OBD-II general scan tool, call up diagnostic trouble code(s) and freeze frame data. OBD-II general scan tool functions consist of:
  - (1) MODE \$01: Current powertrain diagnostic data
  - (2) MODE \$02: Powertrain freeze frame data
  - (3) MODE \$03: Emission-related powertrain diagnostic trouble codes
  - (4) MODE \$04: Clear/Reset emission-related diagnostic information

Read out data according to repair procedures. (For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual.)

**NOTE:**  
For details concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC).  
<Ref. to EN(H6)-96, List of Diagnostic Trouble Code (DTC).>

**2. MODE \$01 (CURRENT POWERTRAIN DIAGNOSTIC DATA)** S048527A1602

Refers to data denoting the current operating condition of analog input/output, digital input/output and/or the powertrain system.

A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
01	Number of emission-related powertrain trouble codes and MIL status	ON/OFF and number
03	Fuel system control status	%
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim (Bank 1)	%
07	Long term fuel trim (Bank 1)	%
08	Short term fuel trim (Bank 2)	%
09	Long term fuel trim (Bank 2)	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h
0E	Ignition timing advance	°
10	Air flow rate from pressure sensor	g/sec
11	Throttle valve opening angle	%
13	Check whether oxygen sensor is installed.	—
24	Oxygen sensor output voltage and short term fuel trim associated with oxygen sensor—bank 1	V and %
28	Oxygen sensor output voltage and short term fuel trim associated with oxygen sensor—bank 2	V and %
1C	On-board diagnosis system	—

**NOTE:**  
Refer to OBD-II general scan tool manufacturer's instruction manual to access generic OBD-II PIDs (MODE \$01).

# OBD-II GENERAL SCAN TOOL

Engine (DIAGNOSTICS)

## 3. MODE \$02 (POWERTRAIN FREEZE FRAME DATA) S048527A1603

Refers to data denoting the operating condition when trouble is sensed by the on-board diagnosis system. A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
02	Trouble code that caused CARB required freeze frame data storage	—
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim (Bank 1)	%
07	Long term fuel trim (Bank 1)	%
08	Short term fuel trim (Bank 2)	%
09	Long term fuel trim (Bank 2)	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h

NOTE:

Refer to OBD-II general scan tool manufacturer's instruction manual to access freeze frame data (MODE \$02).

## 4. MODE \$03 (EMISSION-RELATED POWERTRAIN DIAGNOSTIC TROUBLE CODE) S048527A1604

Refer to Read Diagnostic Trouble Code for information about data denoting emission-related powertrain diagnostic trouble codes. <Ref. to EN(H6)-49, Read Diagnostic Trouble Code.>

## 5. MODE \$04 (CLEAR/RESET EMISSION-RELATED DIAGNOSTIC INFORMATION) S048527A1605

Refers to the mode used to clear or reset emission-related diagnostic information (OBD-II trouble diagnostic information).

NOTE:

Refer to OBD-II general scan tool manufacturer's instruction manual to clear or reset emission-related diagnostic information (MODE \$04).