


## CRANKSHAFT POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)

### 5. Crankshaft Position Sensor

#### A: REMOVAL


1) Disconnect battery ground cable.

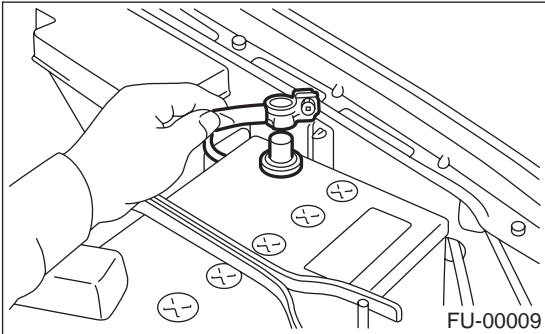


2) Remove air intake chamber.

<Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>

3) Remove engine harness bracket from intake manifold.

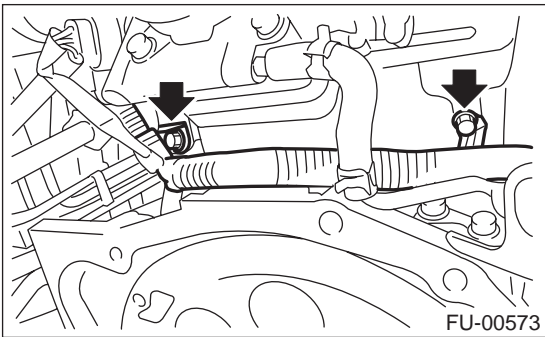


4) Remove service hole cover.

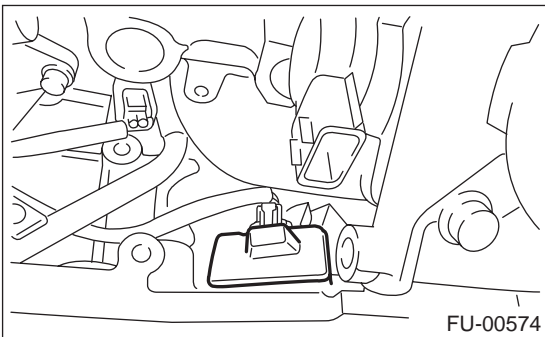

5) Remove bolt which install crankshaft position sensor to cylinder block.

6) Remove crankshaft position sensor, and disconnect connector from it.

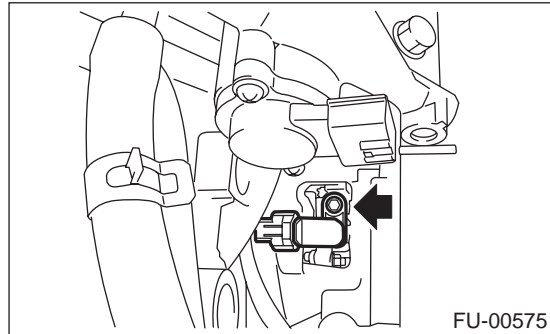


#### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**6.4 N·m (0.65 kgf-m, 4.7 ft-lb)**

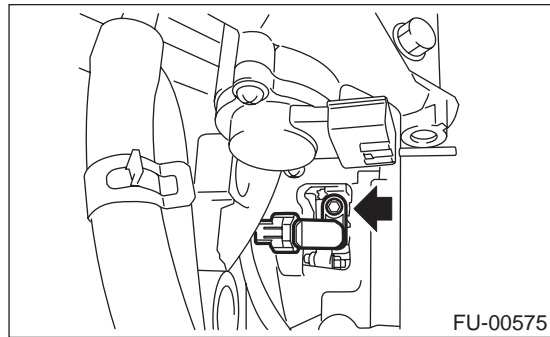

**Tightening torque:**

**5.0 N·m (0.51 kgf-m, 3.7 ft-lb)**

