


9. Air Cleaner Element


A: REPLACEMENT

1) Disconnect the ground cable from battery.

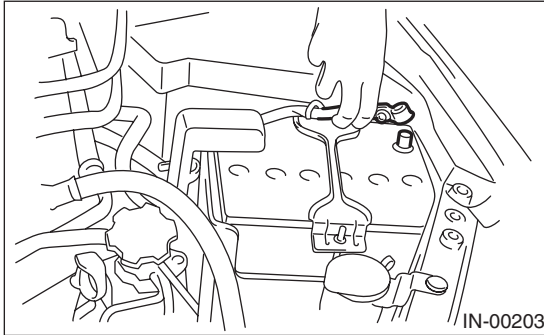


2) Disconnect the connector from mass air flow sensor.

- Non-turbo model

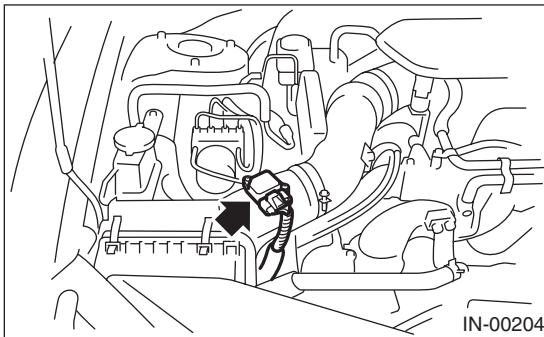


- Turbo model

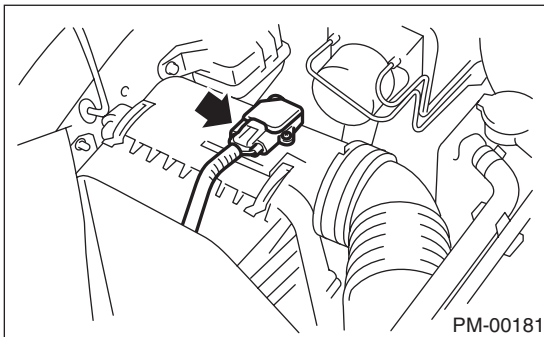


3) Loosen the clamps (A) which connect the air cleaner case to intake duct. (Turbo model)

4) Remove the clips (B) on air cleaner case.

- Non-turbo model

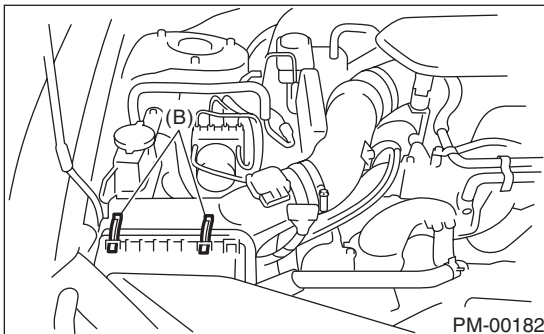


- Turbo model

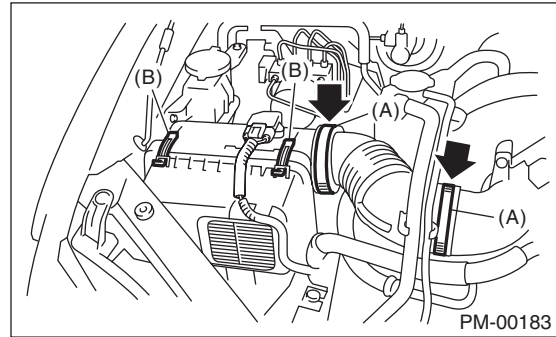

5) Remove the air cleaner case (rear).


6) Remove the air cleaner element.

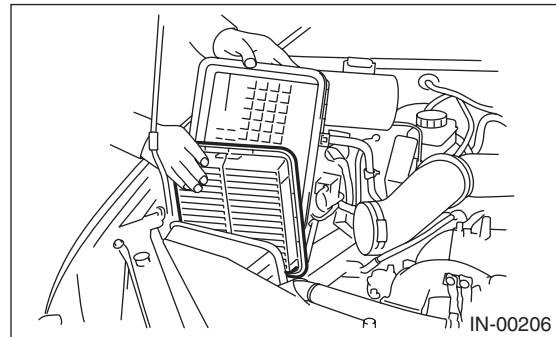

7) Install in the reverse order of removal.

NOTE:

- Fasten with a clip after inserting the lower tab of case.

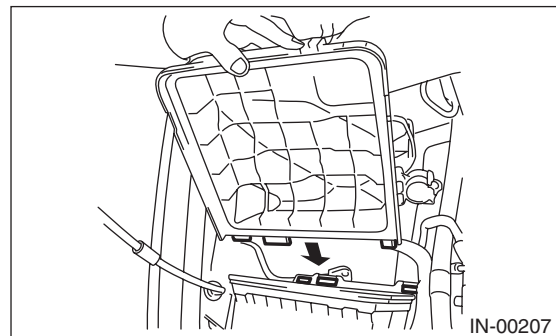

- Refer to "COMPONENT" for tightening torque.
 - 2.5 L non-turbo model
<Ref. to IN(H4SO)-2, COMPONENT, General Description.>
 - 2.5 L turbo model
<Ref. to IN(H4DOTC)-2, COMPONENT, General Description.>
 - 3.0 L model
<Ref. to IN(H6DO)-2, COMPONENT, General Description.>