

# Air Cleaner Case


INTAKE (INDUCTION)

---

## 3. Air Cleaner Case

### A: REMOVAL

- 1) Remove the air intake duct. <Ref. to IN(H4DOTC)-9, REMOVAL, Air Intake Duct.>
- 2) Remove the air cleaner element.  
<Ref. to IN(H4DOTC)-7, REMOVAL, Air Cleaner Element.>
- 3) Remove the bolts (A) and nuts (B) which secure the air cleaner case (front) to the body.

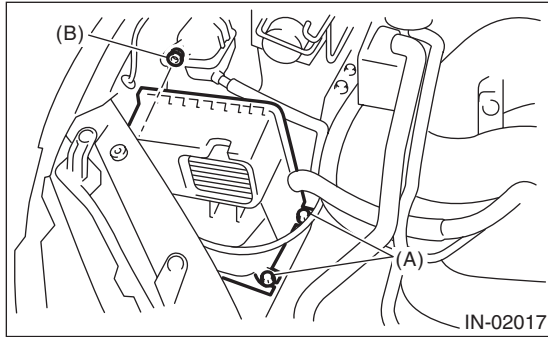

- 4) Remove the air cleaner case (front).

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**Bolt: 6.0 N·m (0.61 kgf-m, 4.4 ft-lb)**

**Nut: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

### C: INSPECTION

Check for cracks or loose connection.