


4. Air Intake Duct

A: REMOVAL

Remove the clip which installs the air intake duct on the front side of body.

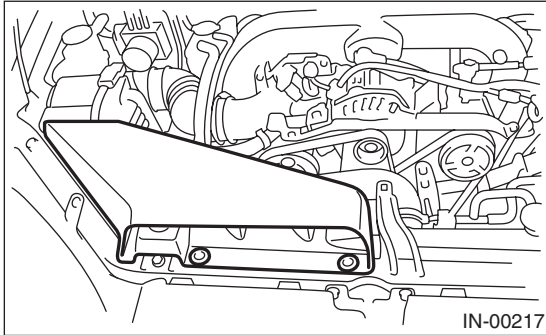

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check for cracks or loose connection.
- 2) Inspect that no foreign objects in the air intake duct.