


11.Helper

A: REMOVAL

1) Lift up the vehicle, and then remove the rear wheels.

2) Remove the helper using the ST.

ST 20099AE030 HELPER SOCKET WRENCH

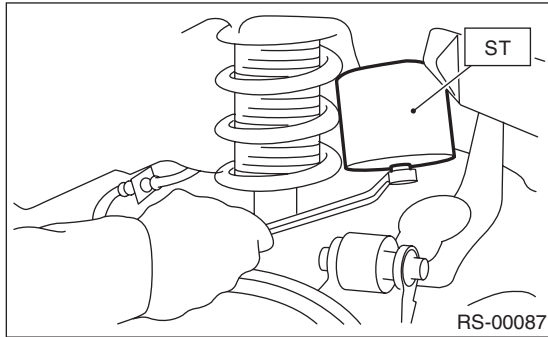

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

32 N·m (3.3 kgf-m, 24 ft-lb)

C: INSPECTION

Check the helper for major cracks, fatigue or damages.