


Instrument Panel Lower Cover

EXTERIOR/INTERIOR TRIM


18. Instrument Panel Lower Cover

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the front door inside scuff plate (A) and front pillar lower trim (B) on the driver's side. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>

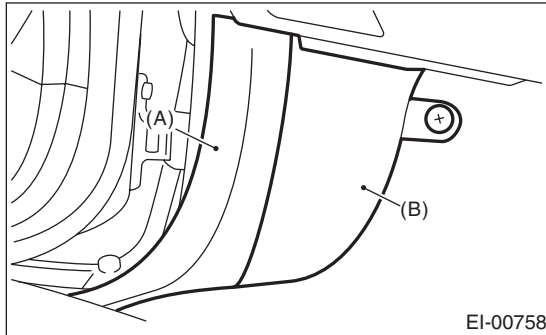

- 3) Remove the clips, and remove the instrument panel lower cover under.

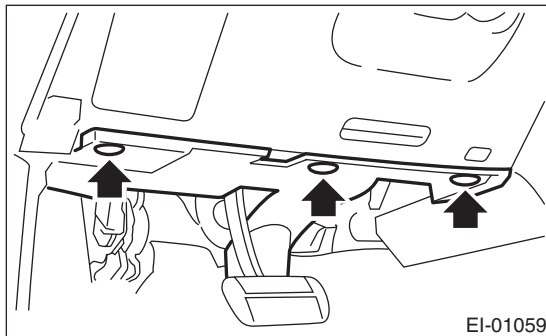

- 4) Loosen the screw (A), disconnect the connectors, and remove the instrument panel lower cover upper.

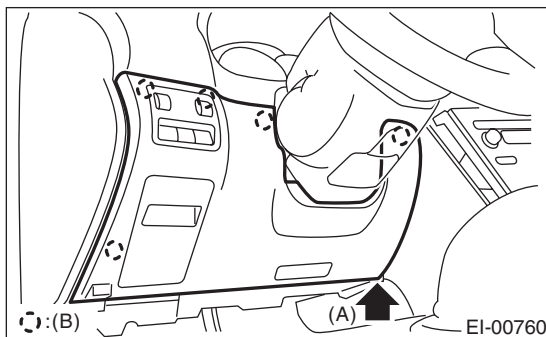

(B) Clip

B: INSTALLATION

Install in the reverse order of removal.