


Fuel Tank Protector

EXTERIOR/INTERIOR TRIM

6. Fuel Tank Protector

A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Remove the bolts (A) and plastic nuts (B), and then remove the fuel tank protector.

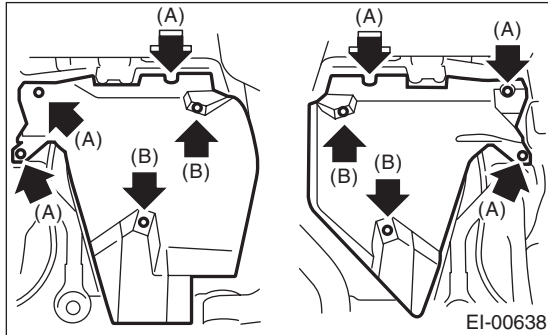

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Bolt

17.5 N·m (1.78 kgf-m, 12.9 ft-lb)