


Rear Regulator and Motor Assembly

GLASS/WINDOWS/MIRRORS


12. Rear Regulator and Motor Assembly

A: REMOVAL


- 1) Remove the rear door glass. <Ref. to GW-24, REMOVAL, Rear Door Glass.>
- 2) Remove the nut (A) to remove the front sash.

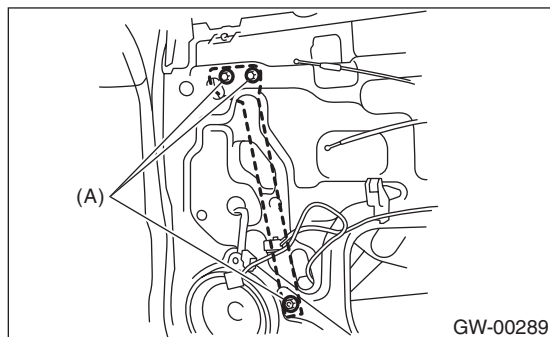

- 3) Disconnect the motor connector.
- 4) Remove the four bolts and two nuts to remove regulator assembly.

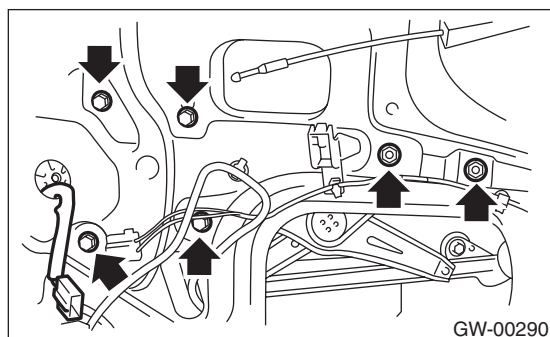

- 5) Remove the screws to remove motor assembly.

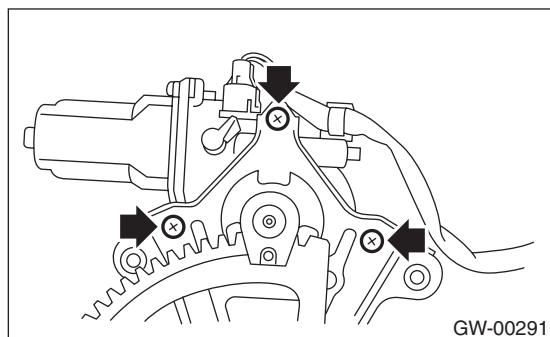

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the rear door glass. <Ref. to GW-25, ADJUSTMENT, Rear Door Glass.>

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Make sure that the power window motor rotates properly when the battery voltage is applied to the terminals of motor connector.
- 2) Change polarity of battery connection to terminals to ensure that the motor rotates in reverse direction.