

# Outer Mirror Assembly


GLASS/WINDOWS/MIRRORS

---

## 8. Outer Mirror Assembly

### A: REMOVAL

1) Remove the mirror gusset cover.

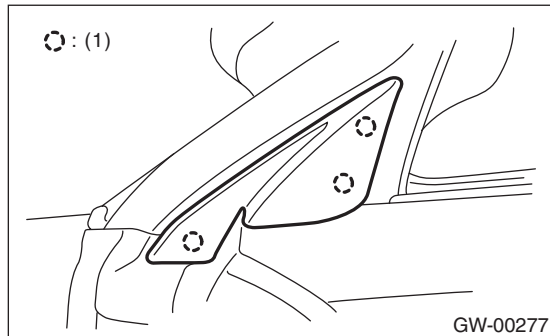


(1) Hook

2) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>

3) Disconnect the outer mirror connector.

4) Remove the screws to remove outer mirror assembly.

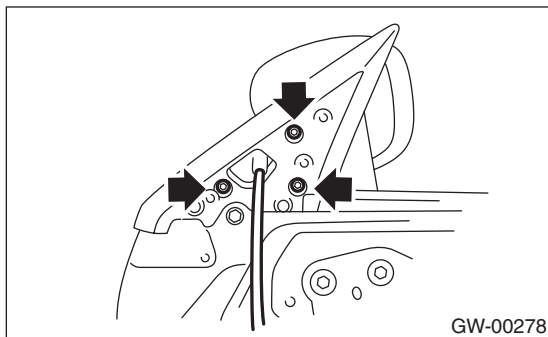


### B: INSTALLATION

Install in the reverse order of removal.

## C: INSPECTION


Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

- Model with side turn signal light

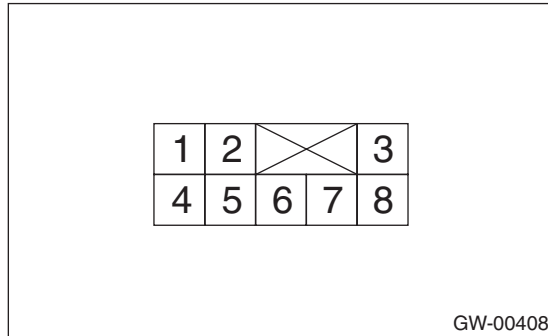

Switch position	Terminal No.
OFF	—
UP	6 (+) and 3 (-) or 8 (-)
DOWN	3 (+) or 8 (+) and 6 (-)
LEFT	7 (+) and 3 (-) or 8 (-)
RIGHT	3 (+) or 8 (+) and 7 (-)

- Model without side turn signal light

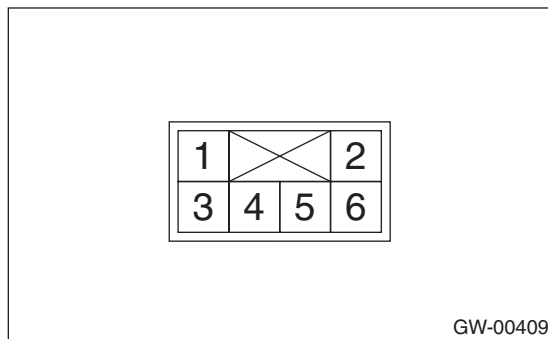

Switch position	Terminal No.
OFF	—
UP	4 (+) and 2 (-) or 6 (-)
DOWN	2 (+) or 6 (+) and 4 (-)
LEFT	5 (+) and 6 (-) or 2 (-)
RIGHT	6 (+) or 2 (+) and 5 (-)

Replace the outer mirror assembly if defective.