


Rear Door Latch and Door Lock Actuator Assembly

SECURITY AND LOCKS

11. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from rear inner remote. <Ref. to SL-38, REMOVAL, Rear Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-23, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-24, REMOVAL, Rear Door Glass.>
- 6) Remove the rear sash. <Ref. to GW-26, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Pull out the cable from the cable clamp of the outer handle.
- 8) Remove the three screws.

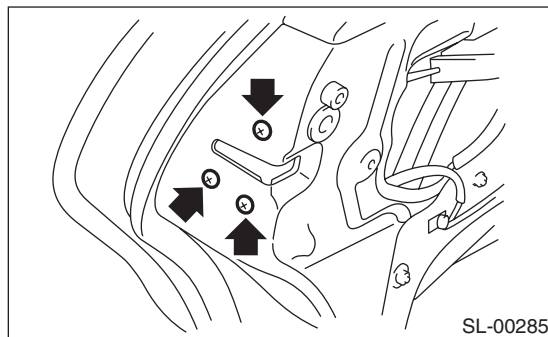

- 9) Disconnect the connectors, and then remove the rear door latch and door lock actuator assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check that the lever and cable operates smoothly.