


9. Rear Wiper Arm


A: REMOVAL

- 1) Detach the wiper arm cover (A).
- 2) Remove the nut (B) to remove the wiper arm.

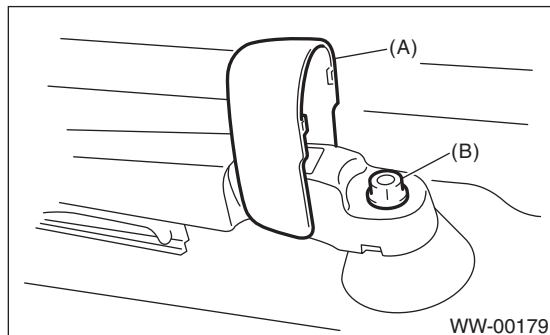

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade with the marking (A) of the glass.

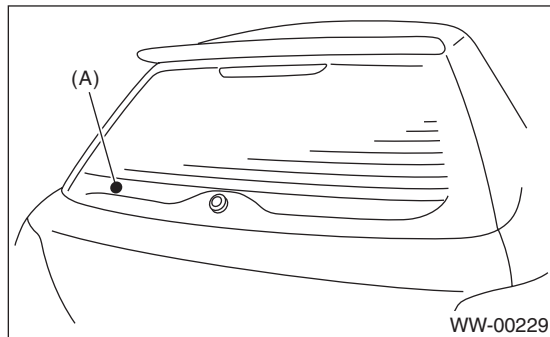

Tightening torque:

Refer to "COMPONENT" of "General Description".

<Ref. to WW-3, REAR WIPER (WAGON MODEL), COMPONENT, General Description.>

C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade with the marking (A) of the glass.

