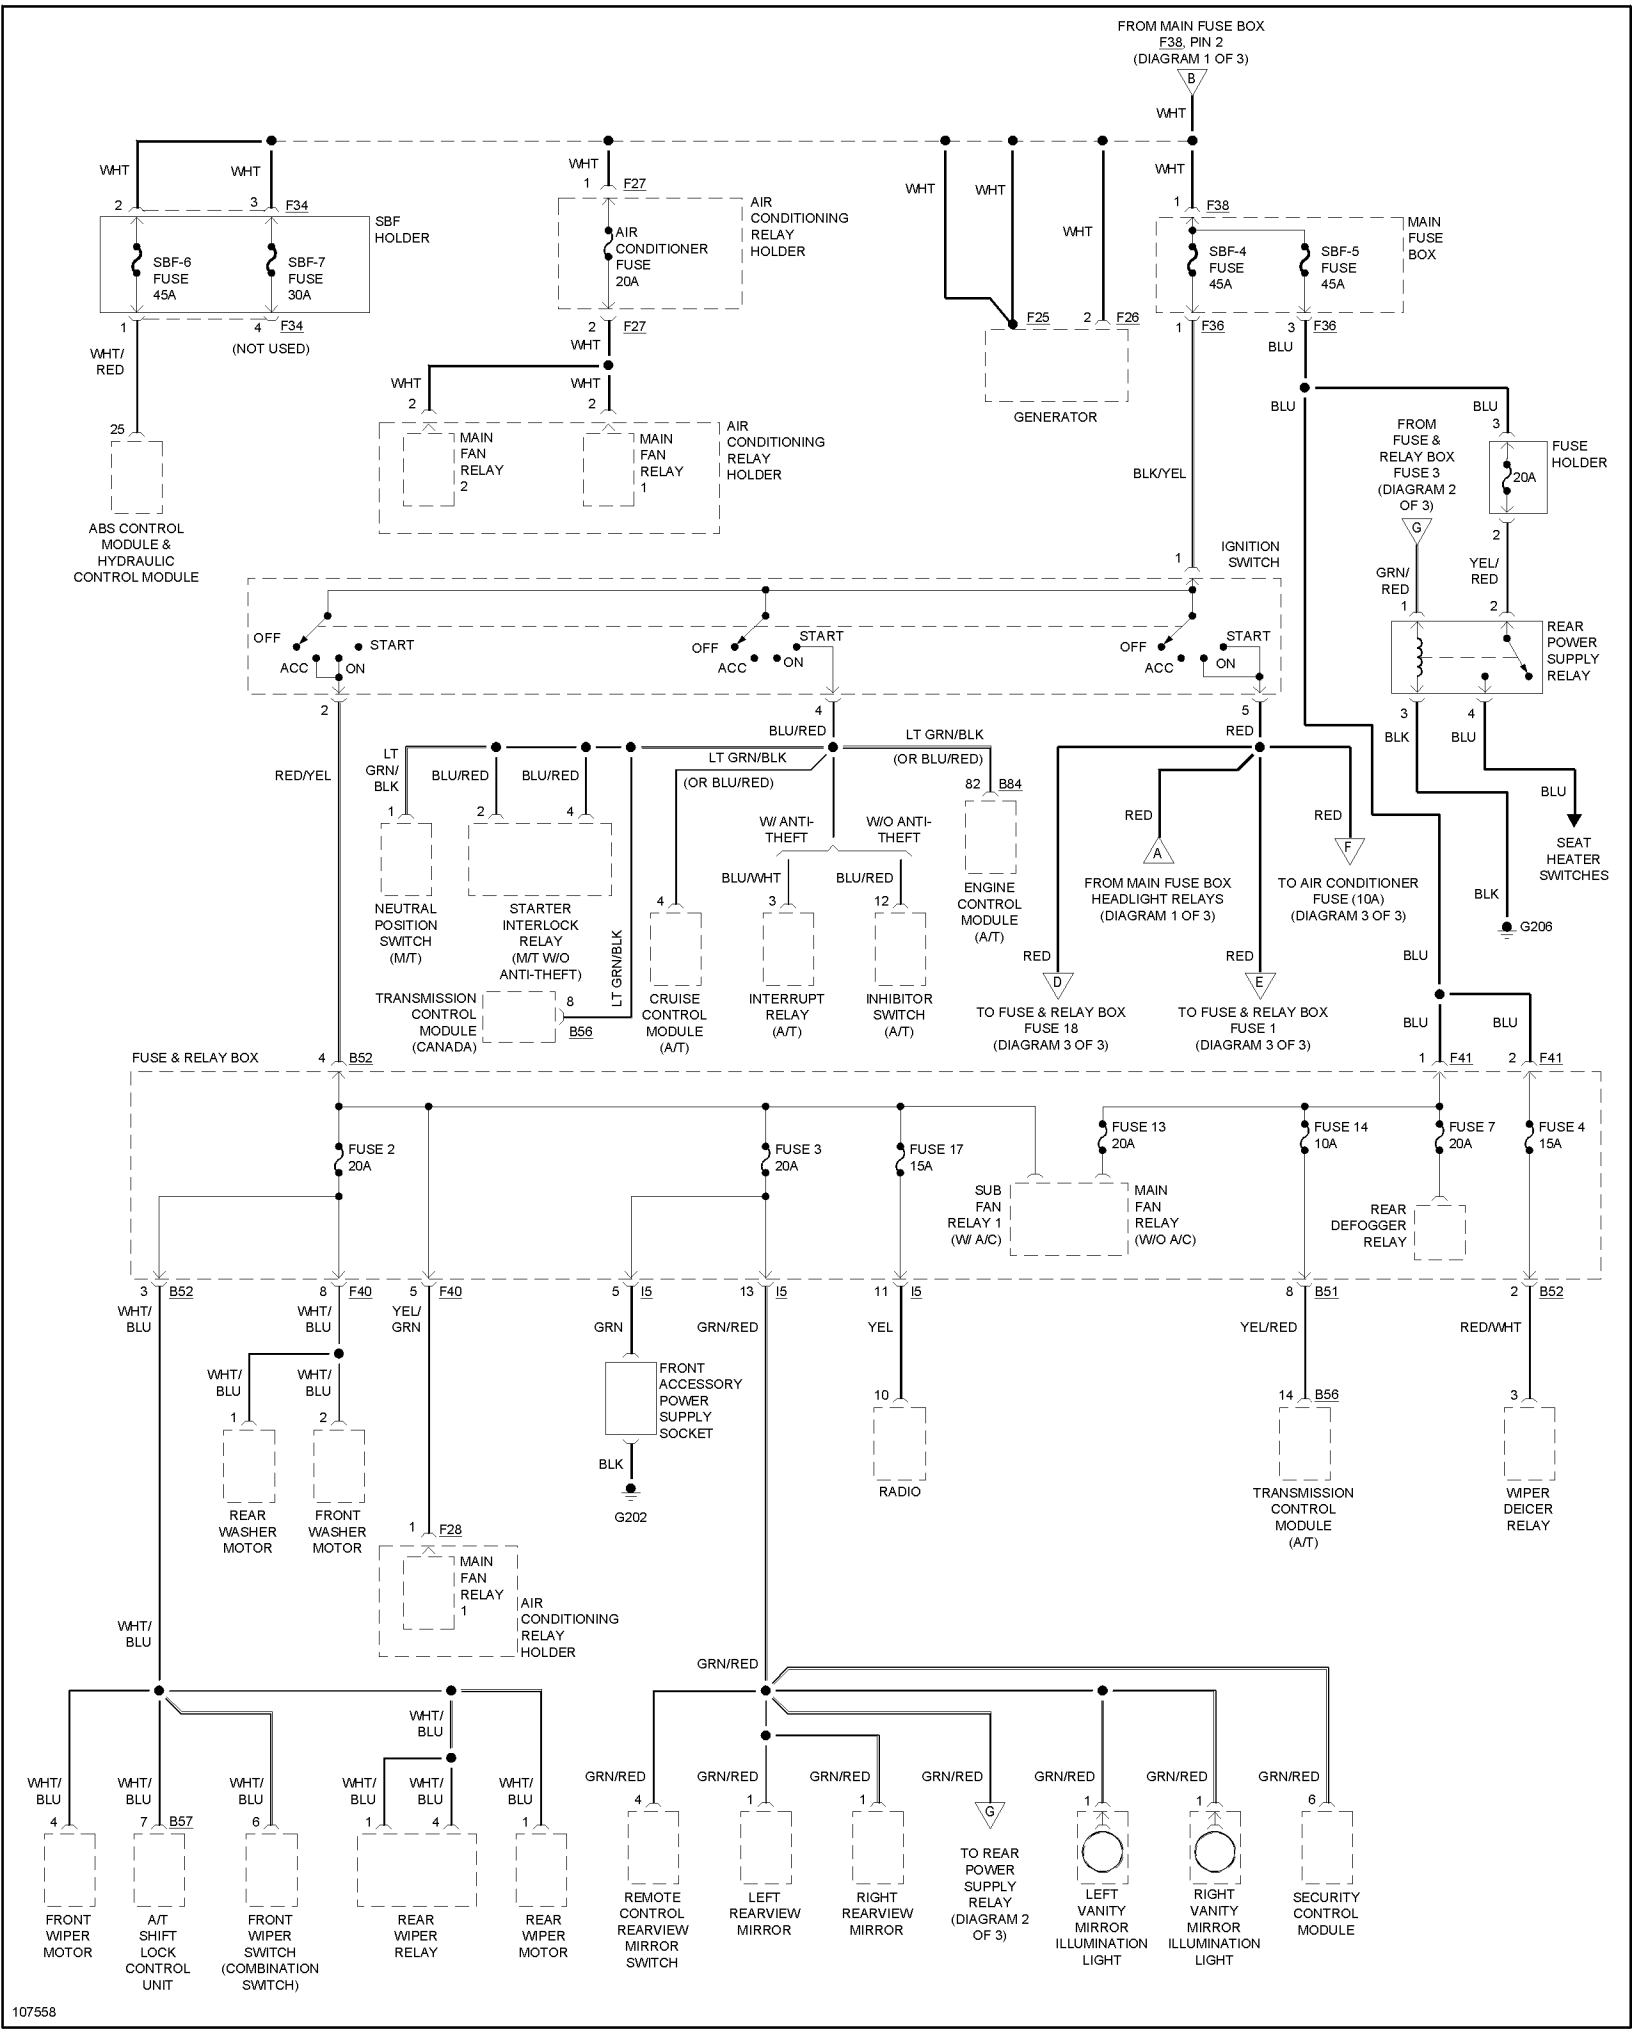
FROM MAIN FUSE BOX
F38, PIN 2
(DIAGRAM 1 OF 3)
B
WHT
SBF HOLDER
SBF-6 FUSE 45A
SBF-7 FUSE 30A
F34
(NOT USED)
WHT/ RED
25
ABS CONTROL MODULE & HYDRAULIC CONTROL MODULE
AIR CONDITIONING RELAY HOLDER
AIR CONDITIONER FUSE 20A
F27
MAIN FAN RELAY 2
MAIN FAN RELAY 1
GENERATOR
F25
F26
MAIN FUSE BOX
SBF-4 FUSE 45A
SBF-5 FUSE 45A
F38
F36
BLU
BLK/YEL
IGNITION SWITCH
OFF
ACC
ON
START
FROM FUSE & RELAY BOX FUSE 3 (DIAGRAM 2 OF 3)
G
FUSE HOLDER
20A
GRN/ RED
YEL/ RED
REAR POWER SUPPLY RELAY
BLK
SEAT HEATER SWITCHES
G206
RED/YEL
LT GRN/ BLK
BLU/RED
LT GRN/BLK
(OR BLU/RED)
NEUTRAL POSITION SWITCH (M/T)
STARTER INTERLOCK RELAY (M/T W/O ANTI-THEFT)
TRANSMISSION CONTROL MODULE (CANADA)
B56
LT GRN/BLK
CRUISE CONTROL MODULE (A/T)
W/ ANTI-THEFT
W/O ANTI-THEFT
BLU/WHT
INTERRUPT RELAY (A/T)
INHIBITOR SWITCH (A/T)
B84
ENGINE CONTROL MODULE (A/T)
RED
FROM MAIN FUSE BOX HEADLIGHT RELAYS (DIAGRAM 1 OF 3)
TO AIR CONDITIONER FUSE (10A) (DIAGRAM 3 OF 3)
TO FUSE & RELAY BOX FUSE 18 (DIAGRAM 3 OF 3)
TO FUSE & RELAY BOX FUSE 1 (DIAGRAM 3 OF 3)
FUSE & RELAY BOX
B52
F41
FUSE 2 20A
FUSE 3 20A
FUSE 17 15A
SUB FAN RELAY 1 (W/ A/C)
FUSE 13 20A
MAIN FAN RELAY (W/O A/C)
FUSE 14 10A
FUSE 7 20A
FUSE 4 15A
REAR DEFOGGER RELAY
WHT/ BLU
YEL/ GRN
GRN
GRN/RED
YEL
YEL/RED
RED/WHT
F40
I5
B51
REAR WASHER MOTOR
FRONT WASHER MOTOR
FRONT ACCESSORY POWER SUPPLY SOCKET
G202
RADIO
TRANSMISSION CONTROL MODULE (A/T)
WIPER DEICER RELAY
F28
MAIN FAN RELAY 1
AIR CONDITIONING RELAY HOLDER
FRONT WIPER MOTOR
A/T SHIFT LOCK CONTROL UNIT
B57
FRONT WIPER SWITCH (COMBINATION SWITCH)
REAR WIPER RELAY
REAR WIPER MOTOR
REMOTE CONTROL REARVIEW MIRROR SWITCH
LEFT REARVIEW MIRROR
RIGHT REARVIEW MIRROR
TO REAR POWER SUPPLY RELAY (DIAGRAM 2 OF 3)
LEFT VANITY MIRROR ILLUMINATION LIGHT
RIGHT VANITY MIRROR ILLUMINATION LIGHT
SECURITY CONTROL MODULE
107558