



5) Connect rear oxygen sensor connector. (Except California spec. vehicles)

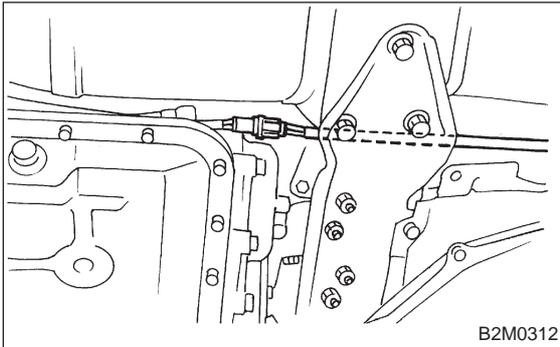

6) Lower the vehicle.


7) Connect battery ground cable.

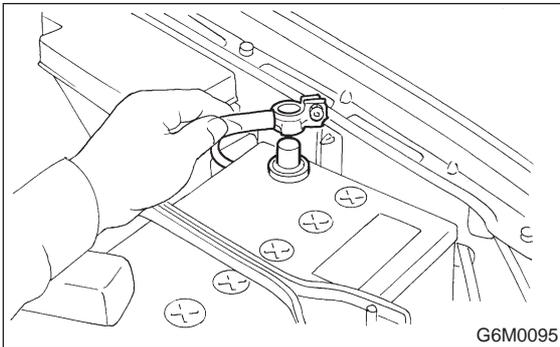


3. Canister

A: REMOVAL AND INSTALLATION

- 1) Lift-up the vehicle.
- 2) Remove clip.
- 3) Remove clip, and disconnect evaporation hoses from canister.

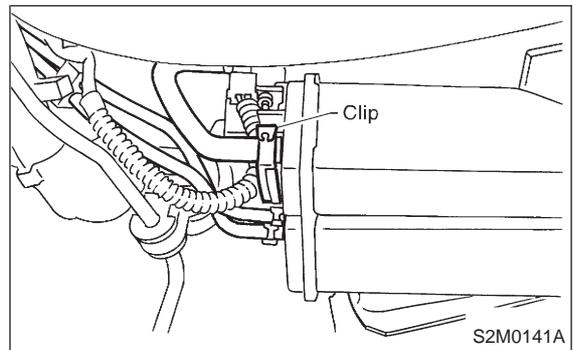

4) Remove canister from body.

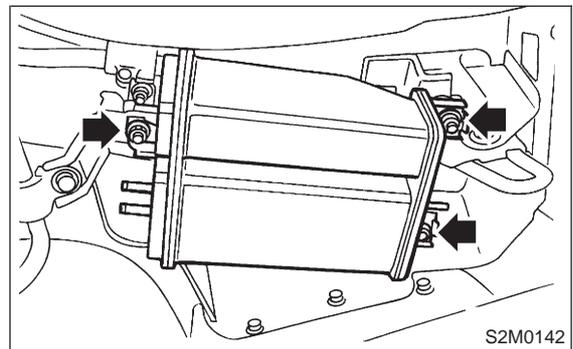

5) Installation is in the reverse order of removal.

Tightening torque:

$23 \pm 7 \text{ N}\cdot\text{m}$ ($2.3 \pm 0.7 \text{ kg}\cdot\text{m}$, $16.6 \pm 5.1 \text{ ft}\cdot\text{lb}$)

