


## 7. Rear Quarter Glass

### A: REMOVAL


#### 1. SEDAN

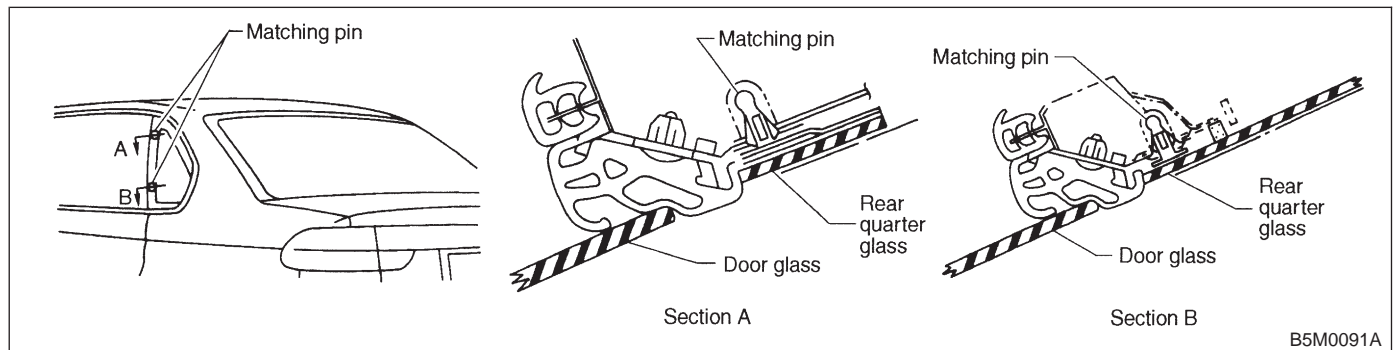

1) Remove rear quarter molding.

2) Remove glass in the same manner as in windshield.

#### 2. WAGON

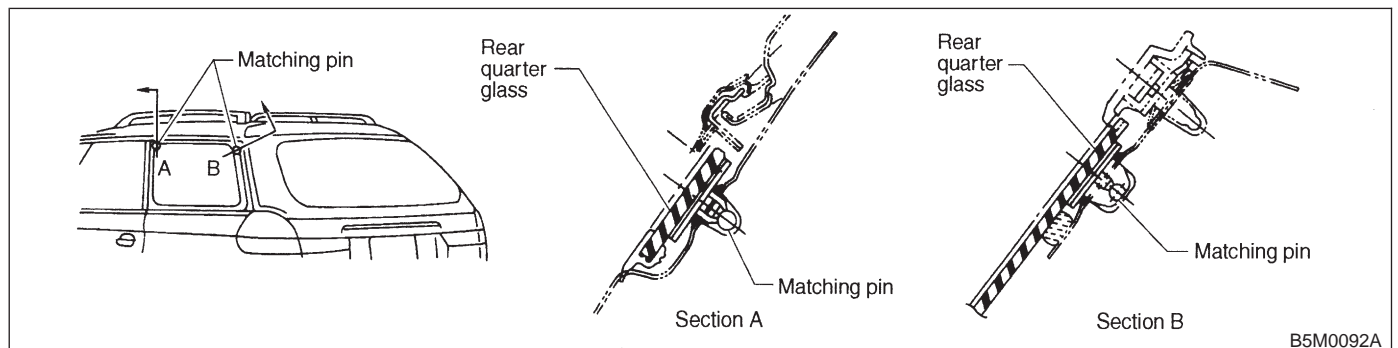

1) Remove rear quarter molding.


2) Remove glass in the same manner as in windshield.

### B: INSTALLATION

1) Finish surface of adhesive layer on body. Using a putty knife, etc., cut layer of adhesive stick firmly to body and finish it into a smooth surface of about 2 mm (0.08 in) in thickness.

**CAUTION:**

**Be careful not to damage body finish.**

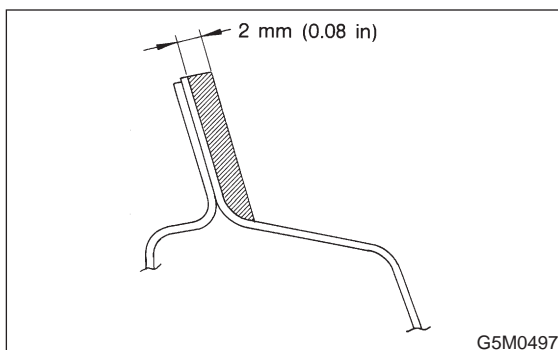

2) Cleaning of body surface:

(1) Remove chips, dirt and dust from body surface.

(2) Clean body wall surface and upper surface of adhesive layer with a solvent such as alcohol or white gasoline.

3) Cleaning glass:

(1) Remove dirt and dust from surface of glass to be adhered.

(2) Clean surface of glass to be adhered with alcohol or white gasoline.

4) Application of primer:

(1) Using a sponge, apply primer to surface of glass to be adhered.

## 5-2 [W7B0]


### 7. Rear Quarter Glass

## SERVICE PROCEDURE

(2) Apply primer to surface of body to be adhered.


#### CAUTION:

- If primer has dropped on body finish, it is hard to wipe it off. So protect with masking.
- Primer must not project from black frame of glass.
- After applying primer, let it dry spontaneously for about 10 minutes.

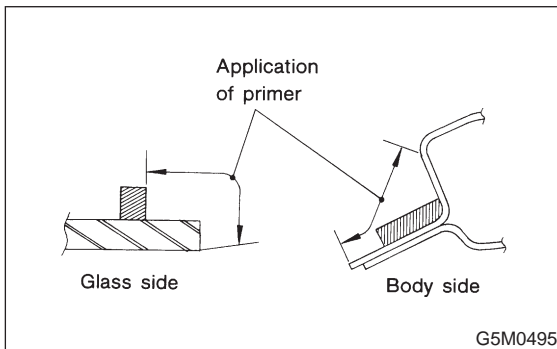

5) Application of adhesive:

(1) Cut nozzle tip as shown in figure.

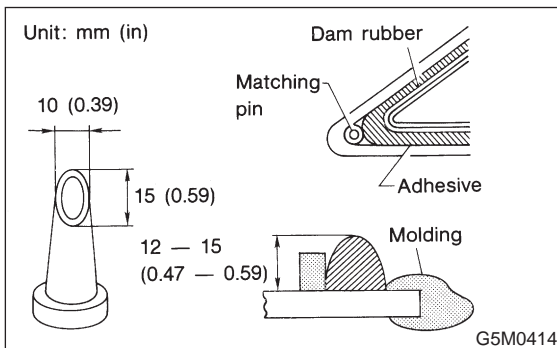

(2) Open cartridge and put it into a gun with nozzle attached.

(3) Apply adhesive uniformly to all sides of adhesion surface while operating gun along glass end face.

6) Installation of glass:

(1) Hold glass with rubber suction cups.

(2) Mount glass on body with matching pin aligned.

(3) Stick them fast by pressing all sides lightly.

7) Water leakage test:

After installing glass, test for water leakage after about one hour.

#### CAUTION:

- Move vehicle slowly.
- When opening and closing door, lower door glass and move door gently.
- Do not squirt strong hose stream on vehicle.

8) Spontaneous drying:

After completing all operations, leave vehicle alone for 24 hours.

#### CAUTION:

When delivering vehicle to user, tell him or her that vehicle should not be subjected to heavy shocks for at least three days.