


## 19. Upper Inner Trim S911384

### A: REMOVAL S911384A18

- 1) Remove front mole (A).
- 2) Remove front pillar upper trim (B).
- 3) Detach front seat belt shoulder anchor, then remove center pillar upper trim (C).

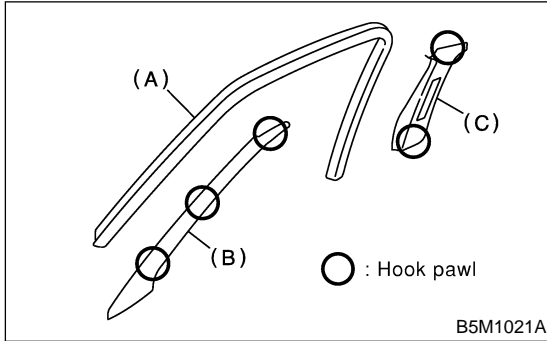

### B: INSTALLATION S911384A11

Install in the reverse order of removal.

#### CAUTION:

**Be sure to securely hook pawls of inner trim panel to body flange.**

#### NOTE:

When installing center pillar upper trim and front pillar upper trim, be sure to set front mole as shown in figure.

