

9. Woofer S901612


A: REMOVAL S901612A18

1. SEDAN S901612A1801


- 1) Disconnect ground cable from battery.
- 2) Remove rear shelf trim. <Ref. to EI-50, REMOVAL, Rear Shelf Trim.>
- 3) Remove woofer mounting screws.
- 4) Disconnect harness connector, and then remove woofer.

2. WAGON S901612A1802

- 1) Disconnect ground cable from battery.
- 2) Remove trim of woofer.

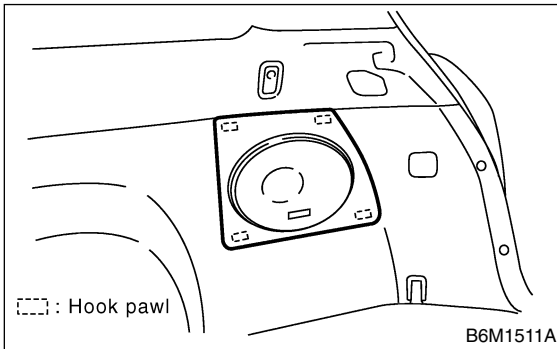

- 3) Remove woofer mounting screws.

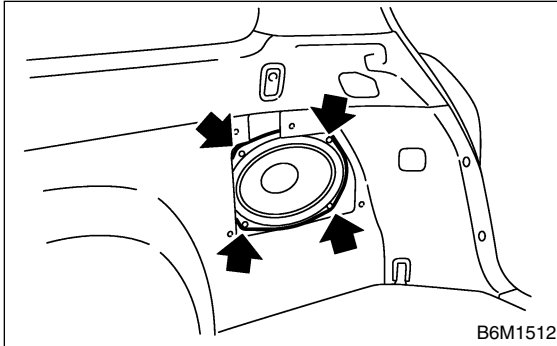

- 4) Disconnect harness connector, and then remove woofer.

B: INSTALLATION S901612A11

Install in the reverse order of removal.