

SUNROOF LID


SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

3. Sunroof Lid

A: REMOVAL

1. WAGON (FRONT)


- 1) Tilt-up the front sunroof (most upper position).
- 2) Remove sunroof switch. <Ref. to SR-14, REMOVAL, Sunroof Switch.>
- 3) Remove two mounting bolts.
- 4) Detach covers (A) then remove two nuts from tilt-up assembly.

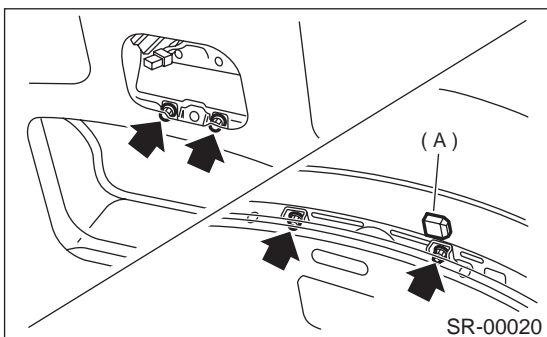

- 5) Remove the sunroof lid carefully.

2. SEDAN AND WAGON (REAR)

- 1) Completely close rear sunroof lid and open sunshade.
- 2) Remove covers (A) then remove nuts (B).

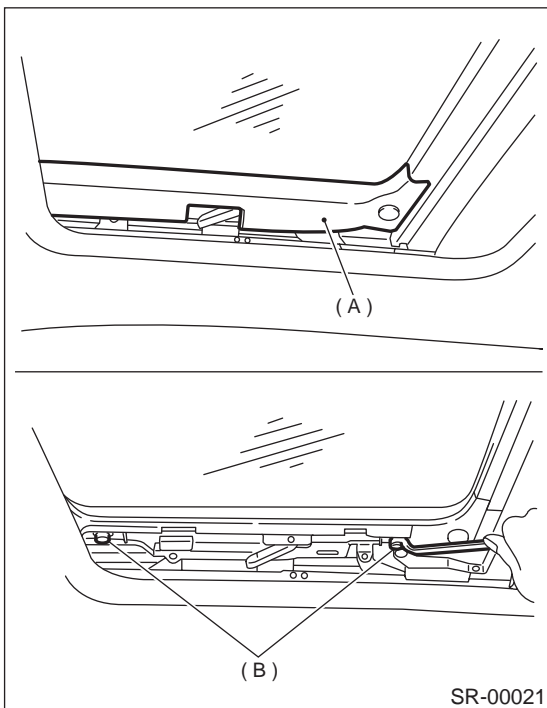


- 3) Remove the sunroof lid carefully.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When installing sunroof lid, be careful not to pinch the lip (A) of lid.

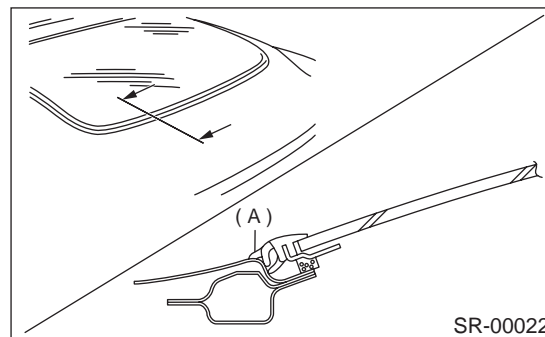

C: ADJUSTMENT

1. ALIGNMENT OF HEIGHT BETWEEN SUNROOF LID AND ROOF PANEL

Loosen sunroof lid installation nuts and then adjust height by adding (max: two pieces) or extracting (max: one piece) shims (B) (standard: one piece) between sunroof lid (A) and body.

Difference in height between sunroof lid and roof panel: L

L: 2.0 ± 0.5 mm (0.079 ± 0.020 in)

