


## 15.Rear Window Glass

### A: REMOVAL

- 1) Disconnect the electrical connectors from rear defogger terminal.
- 2) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-27, REMOVAL, Windshield Glass.>

### B: INSTALLATION

- 1) Adhere the dam rubber.

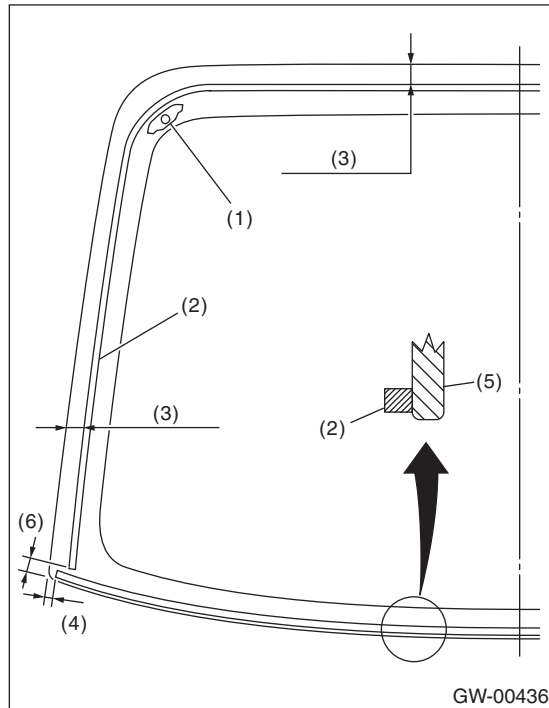

- (1) Locating pin (adhered)
- (2) Dam rubber
- (3) 11 mm (0.433 in)
- (4) 4 mm (0.157 in)
- (5) Rear window glass
- (6) 40 mm (1.575 in)

- 2) Install the glass in the same procedure as for windshield glass. <Ref. to GW-28, INSTALLATION, Windshield Glass.>

- 3) Connect the rear defogger and antenna terminal connectors.

- 4) After completion of all work, allow the vehicle to stand for about 24 hours.

#### NOTE:

- When door is opened/closed after glass is bonded, always lower the door glass first, and then open/close it carefully.
- Move the vehicle slowly.
- For minimum drying time and vehicle standing time before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

- 5) After curing of adhesive, pour the water on external surface of vehicle to check that there are no water leaks.

#### NOTE:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.