


1. Fuel Tank

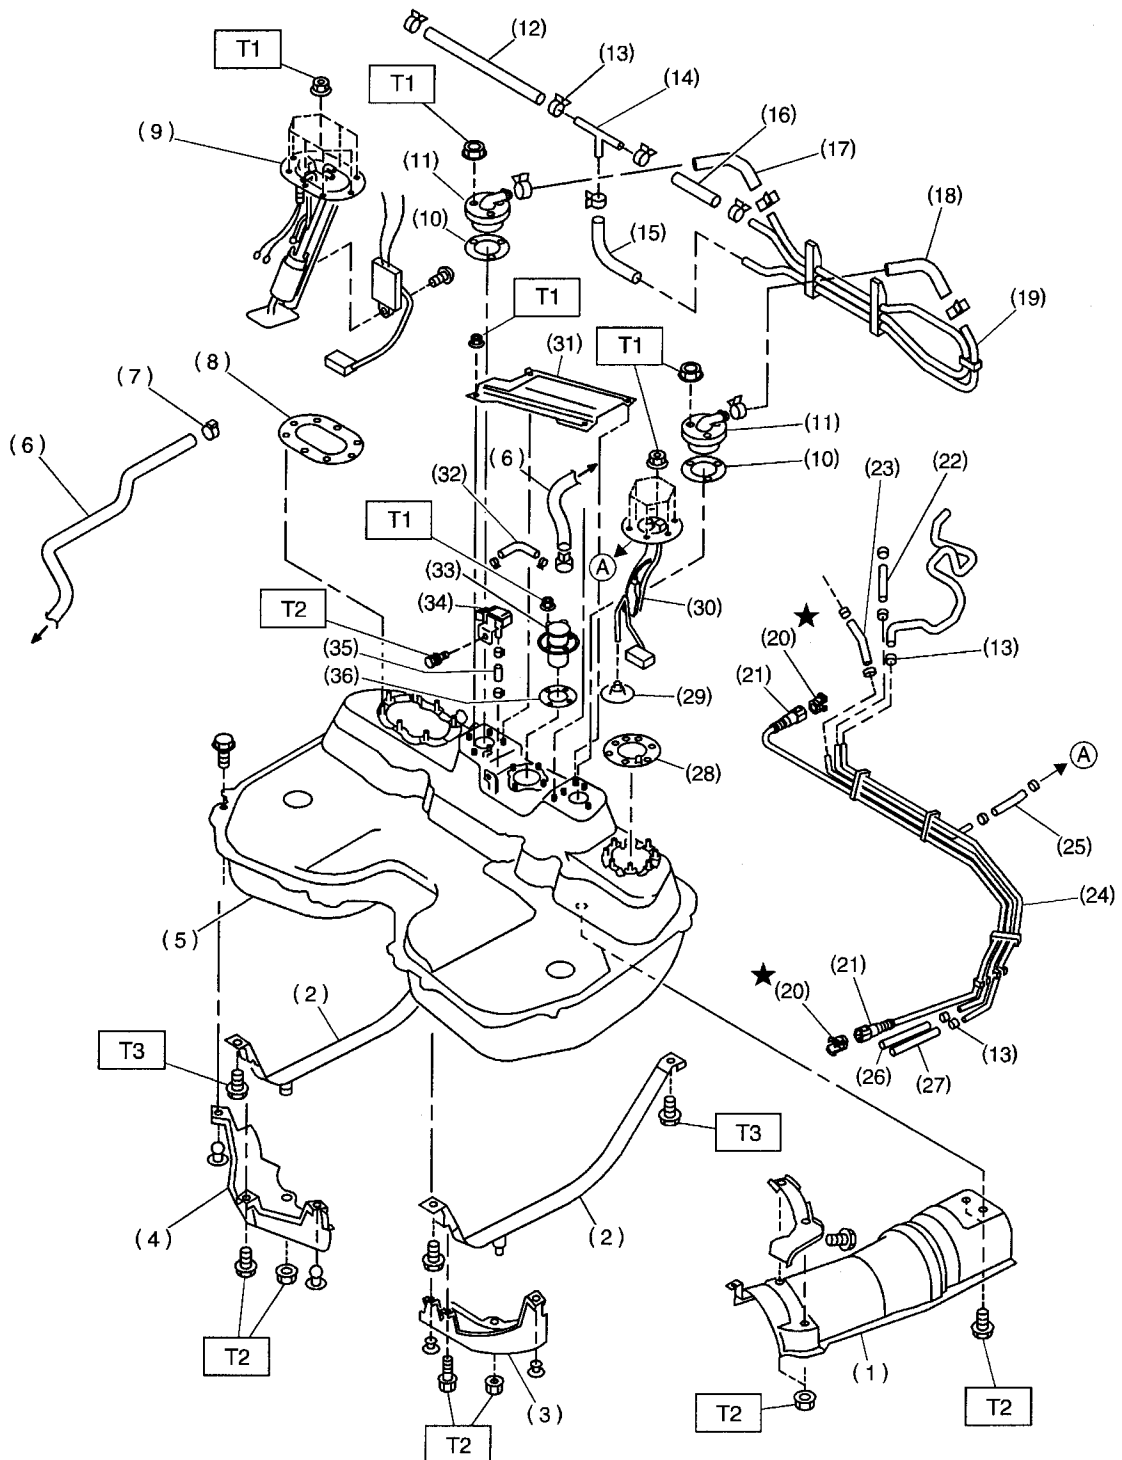

S2M0877A

(1) Heat seated cover	(15) Evaporation hose C	(29) Jet pump filter
(2) Fuel tank band	(16) Evaporation hose B	(30) Fuel sub meter unit
(3) Protector LH	(17) Evaporation hose D	(31) Protector cover
(4) Protector RH	(18) Evaporation hose E	(32) Vent valve hose
(5) Fuel tank	(19) Evaporation pipe ASSY	(33) Vent valve
(6) Canister hose A	(20) Retainer	(34) Fuel tank pressure sensor
(7) Clamp	(21) Quick connector	(35) Fuel tank pressure sensor hose
(8) Fuel pump gasket	(22) Jet pump hose A	(36) Vent valve gasket
(9) Fuel pump ASSY	(23) Fuel return hose A	
(10) Fuel cut valve gasket	(24) Fuel pipe ASSY	Tightening torque: N·m (kg-m, ft-lb)
(11) Fuel cut valve	(25) Jet pump hose B	T1: 4.4±1.5 (0.45±0.15, 3.3±1.1)
(12) Fuel delivery hose A	(26) Fuel return hose B	T2: 7.4±2.0 (0.75±0.2, 5.4±1.4)
(13) Clip	(27) Evaporation hose F	T3: 33±10 (3.4±1.0, 25±7)
(14) Joint pipe	(28) Fuel sub meter gasket	