
SERVICE PROCEDURE


3. Front Bumper

A: REMOVAL AND INSTALLATION


- 1) Disconnect the ground cable from the battery.
- 2) Remove front fog light.
- 3) Remove the front grille.
- 4) Remove three clips from upper side of bumper.

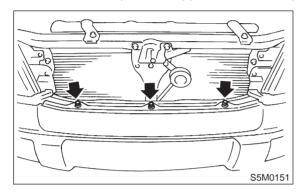


5) Remove the extension of both sides.

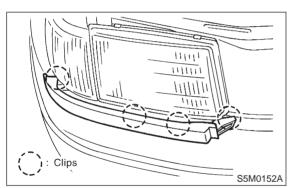


- 6) Remove under cover.
- 7) Remove seven clips from under side of bumper.

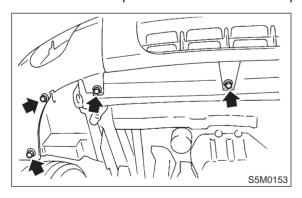


8) Turn over the front mud guard of the front portion and then remove bolt.

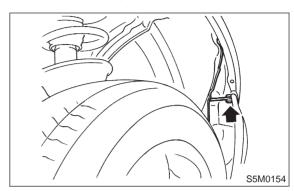

- 9) Remove bumper face and E/A form.
- 10) Remove back beam.

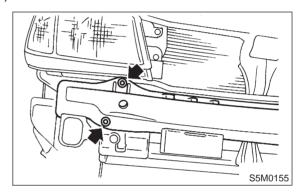

11) Remove beam upper.

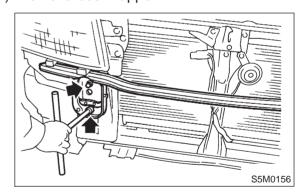

12) Installation is in the reverse order of removal.

CAUTION:

- Be extremely careful to prevent scratches on bumper face as it is made of resin.
- Be careful not to scratch the body when removing or installing the bumper.