


1. Steering Wheel and Column

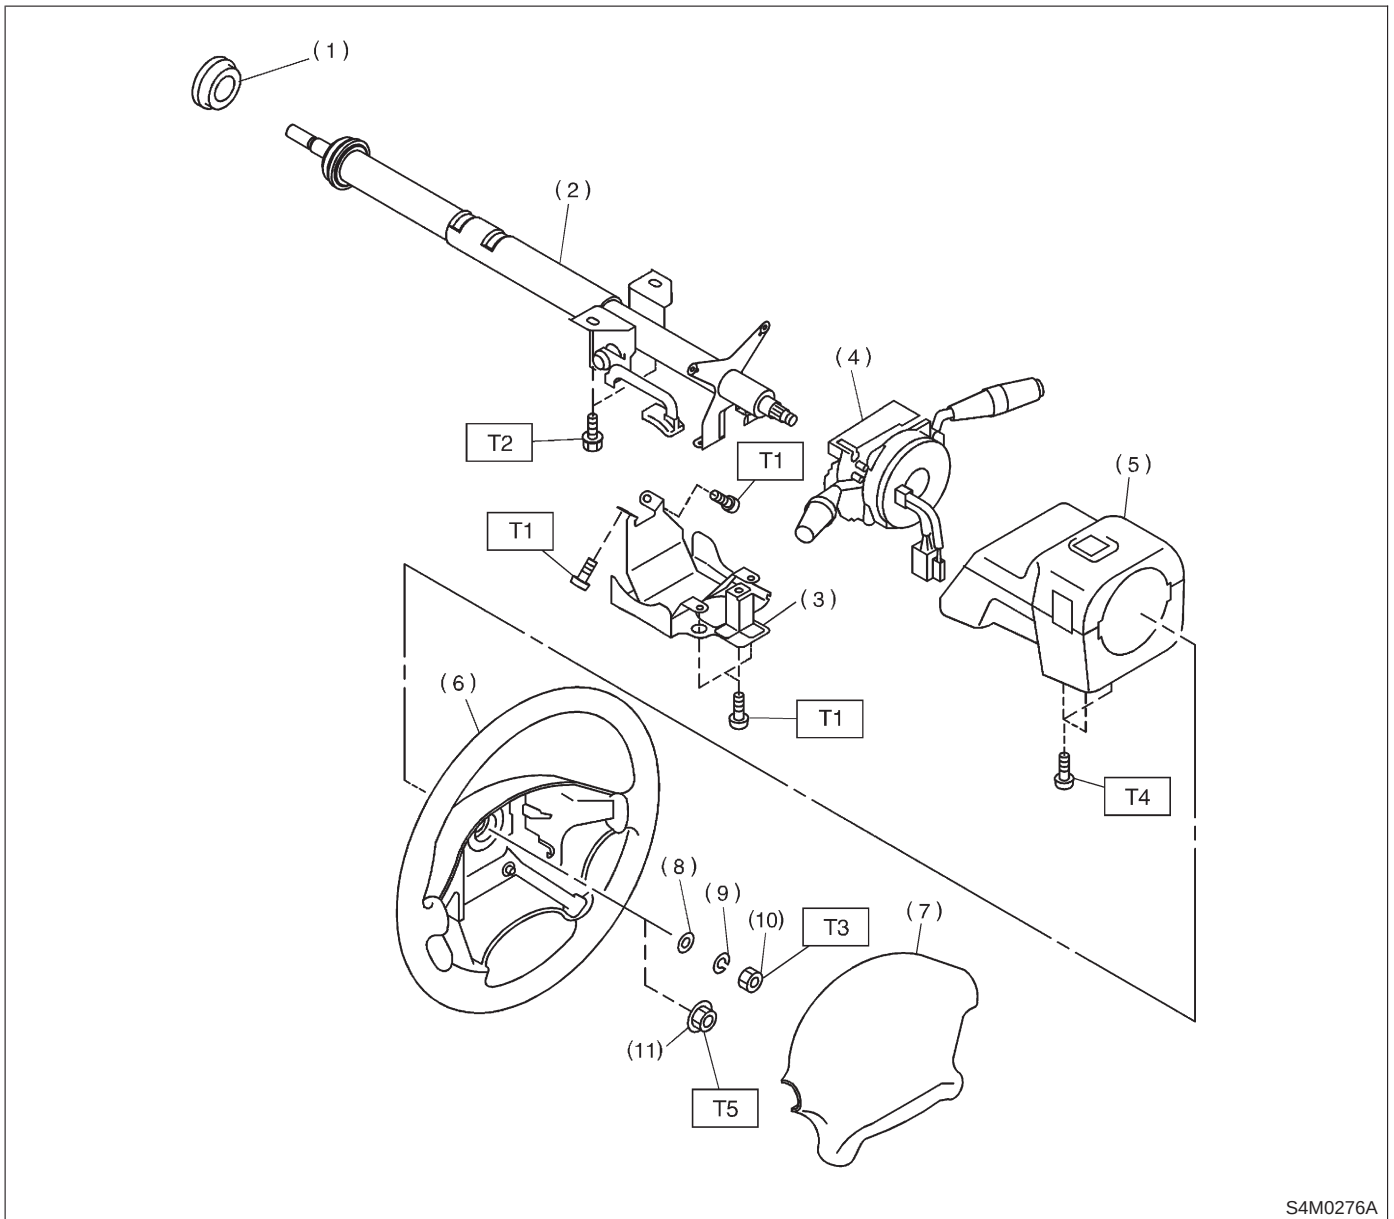

S4M0276A

- (1) Bushing
- (2) Steering shaft
- (3) Knee protector
- (4) Steering roll connector
- (5) Column cover
- (6) Steering wheel
- (7) Airbag module

- (8) Plain washer
- (9) Spring washer
- (10) Nut
- (11) Flange nut

Tightening torque: N·m (kg·m, ft·lb)

T1: 3.4±1.0 (0.35±0.1, 2.5±0.7)

T2: 25±5 (2.5±0.5, 18.1±3.6)

T3: 34±5 (3.5±0.5, 25.3±3.6)

T4 1.2±0.2 (0.12±0.02, 0.9±0.1)

T5 44±5 (4.5±0.5, 32.5±3.6)