


1. Torque Converter Clutch and Case

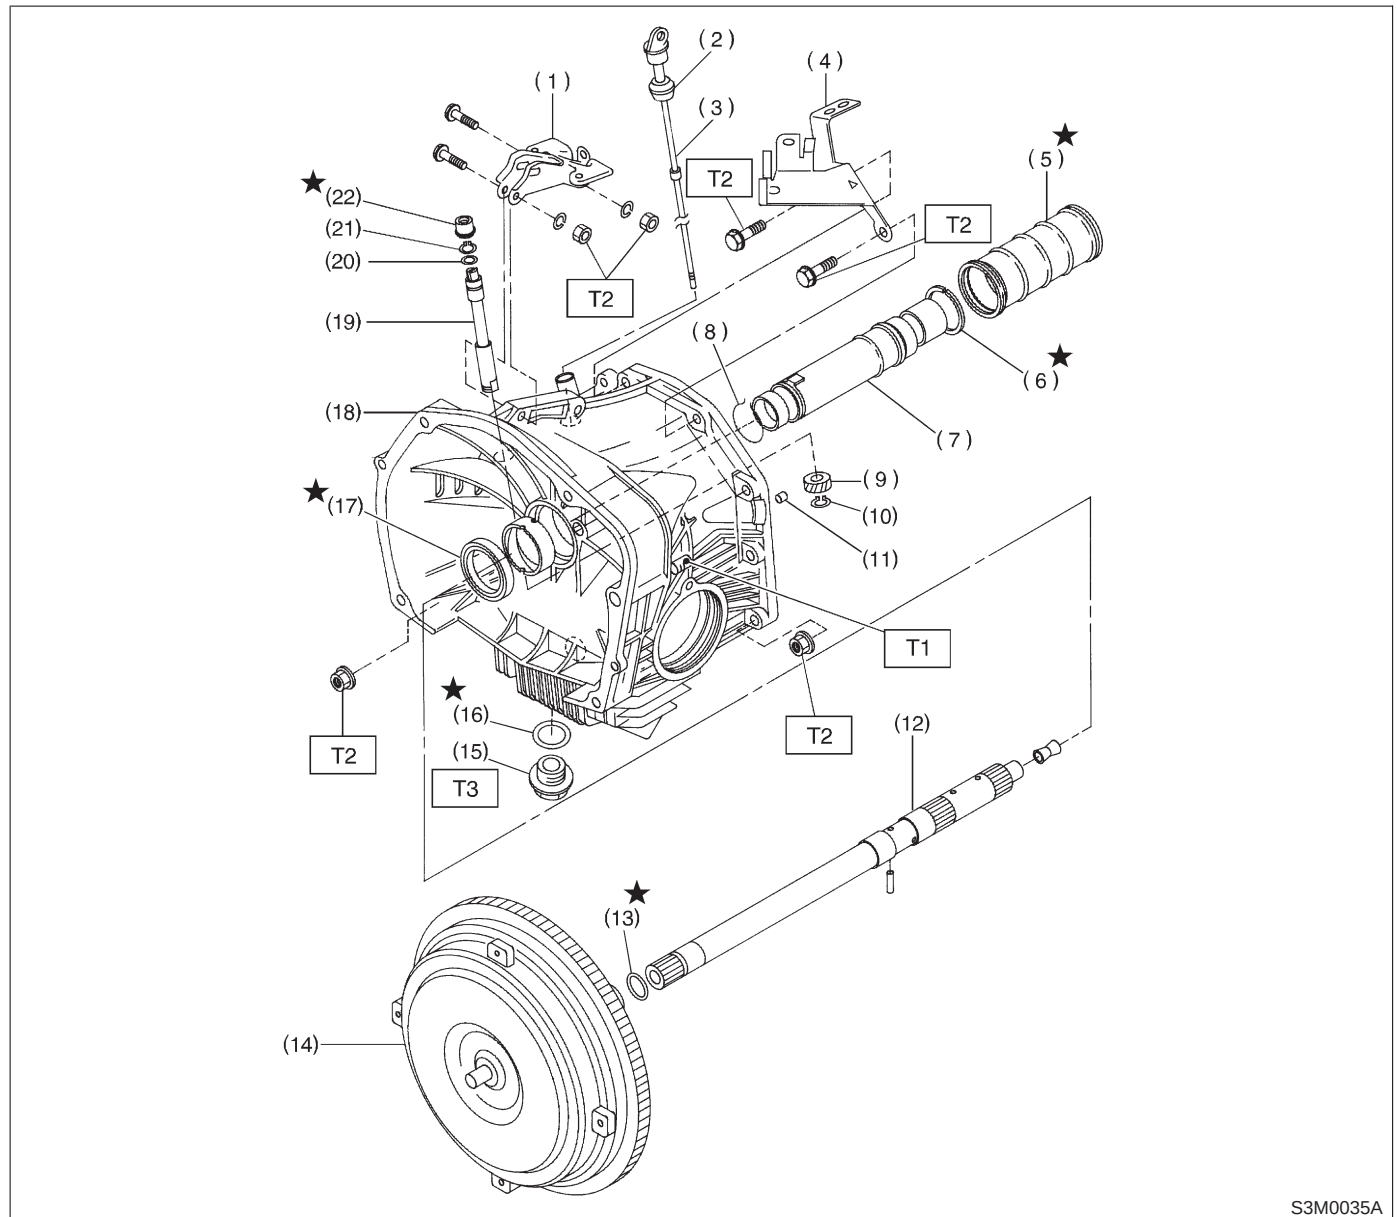

S3M0035A

- | | |
|------------------------------|-----------------------------------|
| (1) Pitching stopper bracket | (11) Oil drain pipe |
| (2) O-ring | (12) Input shaft |
| (3) Oil level gauge | (13) O-ring |
| (4) Stay | (14) Torque converter clutch |
| (5) Seal pipe | (15) Drain plug |
| (6) Seal ring | (16) Gasket |
| (7) Oil pump shaft | (17) Oil seal |
| (8) Clip | (18) Torque converter clutch case |
| (9) Speedometer driven gear | (19) Speedometer shaft |
| (10) Snap ring | (20) Washer |

- (21) Snap ring
(22) Oil seal

Tightening torque: N·m (kg·m, ft·lb)**T1: 18±5 (1.8±0.5, 13.0±3.6)****T2: 41±3 (4.2±0.3, 30.4±2.2)****T3: 44±3 (4.5±0.3, 32.5±2.2)**