


3. Transmission Case, Transmission Cover and Control Device

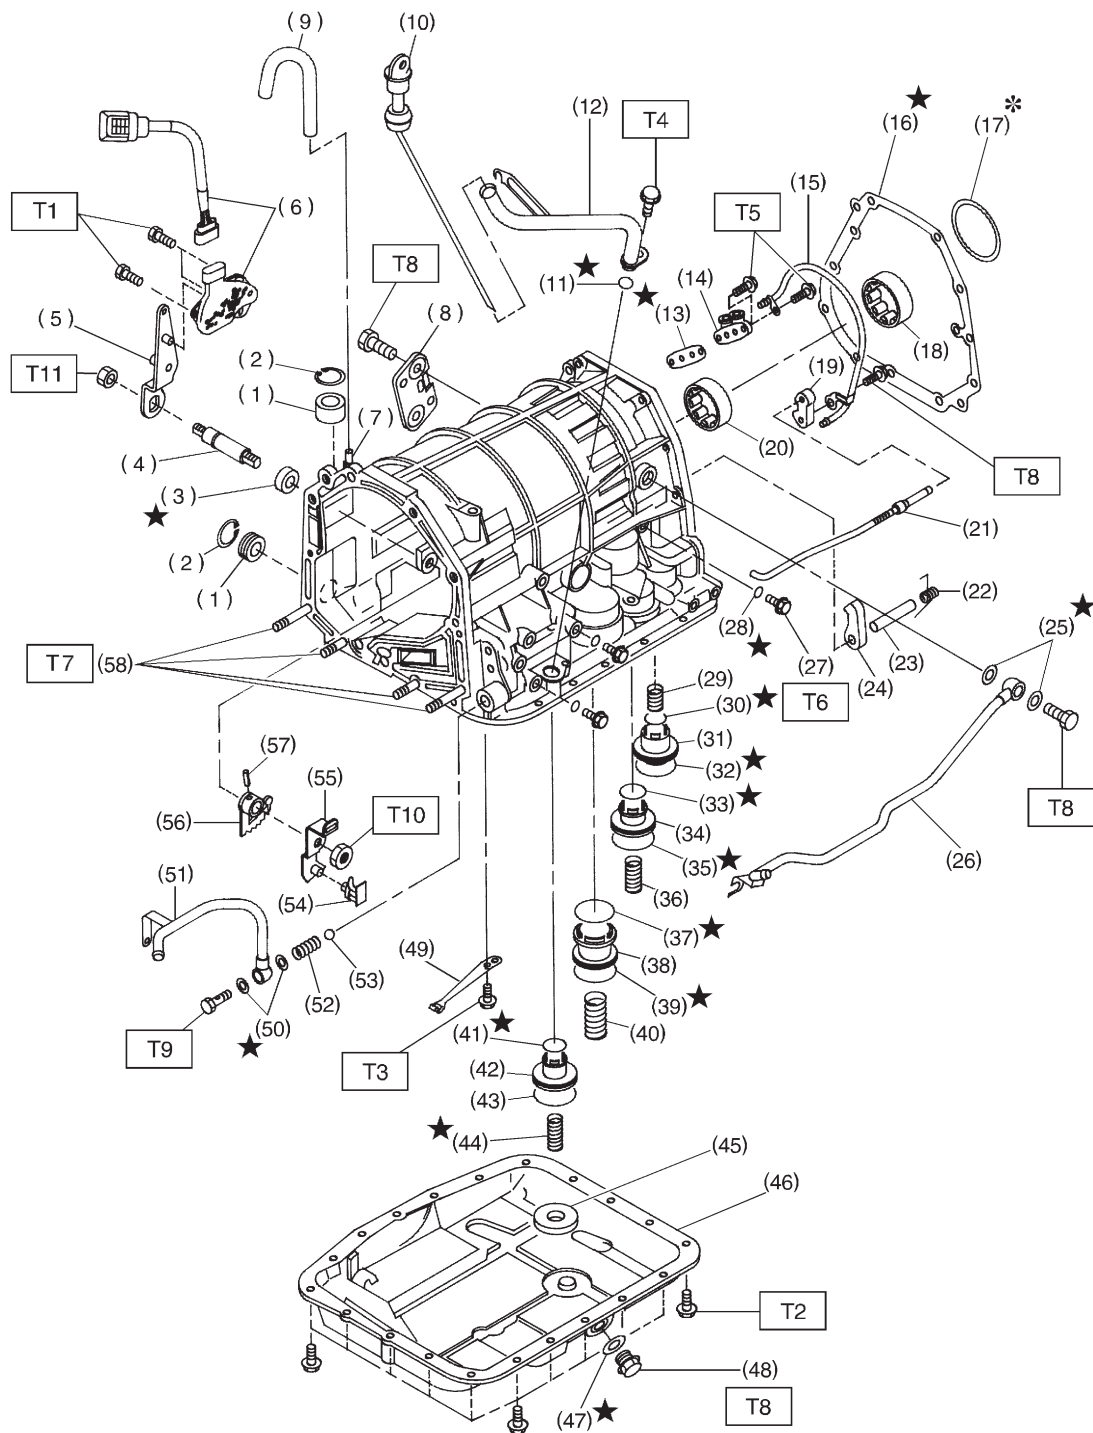

(1) Plug	(25) Gasket	(49) Detention spring
(2) Snap ring	(26) Inlet pipe	(50) Gasket
(3) Oil seal	(27) Test plug	(51) Outlet pipe
(4) Manual shaft	(28) O-ring	(52) Spring
(5) Range select lever	(29) Spring	(53) Ball
(6) Inhibitor switch ASSY	(30) O-ring	(54) Stopper
(7) Nipple	(31) Accumulator piston (N-D)	(55) Manual lever
(8) Plate ASSY	(32) O-ring	(56) Manual plate
(9) Air breather hose	(33) O-ring	(57) Spring pin
(10) Oil level gauge	(34) Accumulator piston (2-3)	(58) Stud bolt
(11) O-ring	(35) O-ring	
(12) Oil charger pipe	(36) Spring	<i>Tightening torque: N·m (kg-m, ft-lb)</i>
(13) Gasket	(37) O-ring	<i>T1: 3.4±0.5 (0.35±0.05, 2.5±0.4)</i>
(14) Relief valve	(38) Accumulator piston (1-2)	<i>T2: 4.9±0.5 (0.50±0.05, 3.6±0.4)</i>
(15) Pipe	(39) O-ring	<i>T3: 5.9±1.0 (0.60±0.10, 4.3±0.7)</i>
(16) Gasket	(40) Spring	<i>T4: 6.4±0.5 (0.65±0.05, 4.7±0.4)</i>
(17) Shim	(41) O-ring	<i>T5: 7.8±1.0 (0.80±0.10, 5.8±0.7)</i>
(18) Roller bearing	(42) Accumulator piston (3-4)	<i>T6: 12.7±1.0 (1.30±0.10, 9.4±0.7)</i>
(19) Parking support	(43) O-ring	<i>T7: 17.7±2.9 (1.80±0.30, 13.0±2.2)</i>
(20) Ball bearing	(44) Spring	<i>T8: 24.5±2.0 (2.50±0.20, 18.1±1.4)</i>
(21) Parking rod	(45) Magnet	<i>T9: 34.3±2.9 (3.50±0.30, 25.3±2.2)</i>
(22) Return spring	(46) Oil pan	<i>T10: 47.1±2.0 (4.80±0.20, 34.7±1.4)</i>
(23) Shaft	(47) Gasket	<i>T11: 47.1±4.9 (4.80±0.50, 34.7±3.6)</i>
(24) Parking pawl	(48) Drain plug	