

Door Cord

WIRING SYSTEM

59. Door Cord


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D1	25	★	C-2	B30	Bulkhead wiring harness
D2	2	★	C-3		Front door speaker LH
D3	2	Green	C-3		Front power window motor LH
D4	2	Black	C-3		Front door tweeter LH
D5	6	★	C-3		Outer mirror assembly LH (without outer mirror turn signal light, mirror heater)
	8	★	C-3		Outer mirror assembly LH (without outer mirror turn signal light, with mirror heater)
	8	★	C-3		Outer mirror assembly LH (with outer mirror turn signal light, without mirror heater)
	10	★	C-3		Outer mirror assembly LH (with outer mirror turn signal light, mirror heater)
D7	16	★	C-4		Front power window main switch
D8	4	★	C-4		Front door lock actuator LH
D11	25	★	C-1	B101	Bulkhead wiring harness
D12	2	★	B-1		Front door speaker LH
D13	2	Green	B-2		Front power window motor RH
D14	2	Black	B-1		Front door tweeter RH
D15	6	★	B-1		Outer mirror assembly RH (without outer mirror turn signal light, mirror heater)
	8	★	B-1		Outer mirror assembly RH (without outer mirror turn signal light, with mirror heater)
	8	★	B-1		Outer mirror assembly RH (with outer mirror turn signal light, without mirror heater)
	10	★	B-1		Outer mirror assembly RH (with outer mirror turn signal light, mirror heater)
D17	8	★	B-2		Front power window sub-switch RH
D18	4	★	B-2		Front door lock actuator RH
D22	8	★	C-4	B270	Bulkhead wiring harness
D23	2	★	C-4		Rear door speaker LH
D24	2	Green	C-4		Rear power window motor LH
D25	8	★	B-4		Rear power window sub-switch LH
D26	4	★	B-5		Rear door lock actuator LH
D28	8	★	B-3	B266	Bulkhead wiring harness
D29	2	★	B-3		Rear door speaker RH
D30	2	Green	B-3		Rear power window motor RH
D31	8	★	B-3		Rear power window sub-switch RH
D32	4	★	B-3		Rear door lock actuator RH
D61	10	★	C-3		Remote control mirror switch
D62	5	★	B-2		Front door sub-switch

★ : White or natural color

Door Cord

WIRING SYSTEM

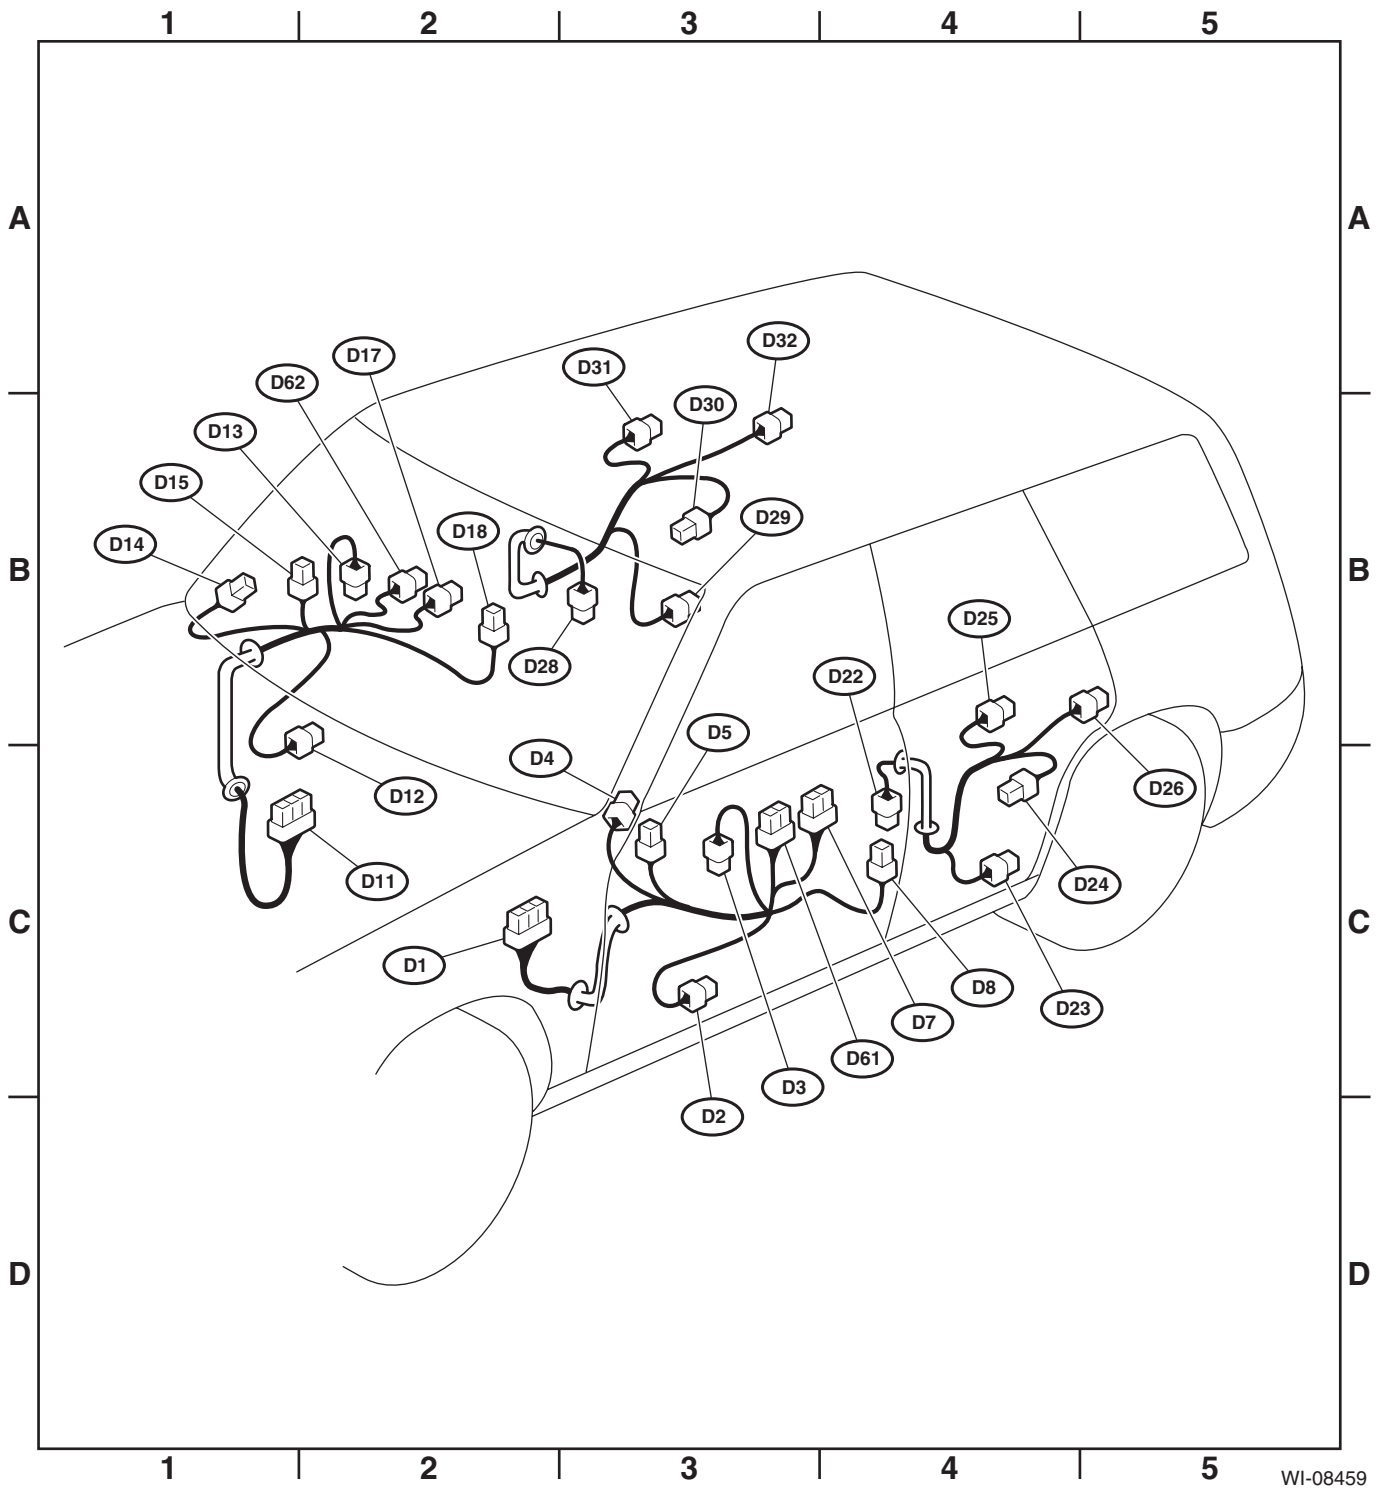

WI-08459