

**17. Roof Rail (Outback with step roof)**

**A: REMOVAL**


- 1) Remove roof trim, rear quarter trim, pillar trim, etc. <Ref. to 5-3 [W5A0].>
- 2) Remove flange bolts.
- 3) Remove flange nuts.
- 4) Remove roof rail.

**B: INSTALLATION**

Installation is in the reverse order of removal.

**CAUTION:**

To prevent deformation, be sure to install roof rail in steps 4), 3), 2) and 1), in that order.

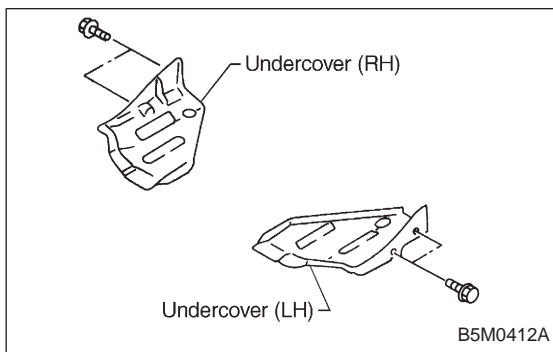


**18. Undercover**

**A: REMOVAL AND INSTALLATION**

- 1) Remove undercover mounting bolts.
- 2) Installation is in the reverse order of removal.

**NOTE:**


Undercover is bolted along with mud guard.

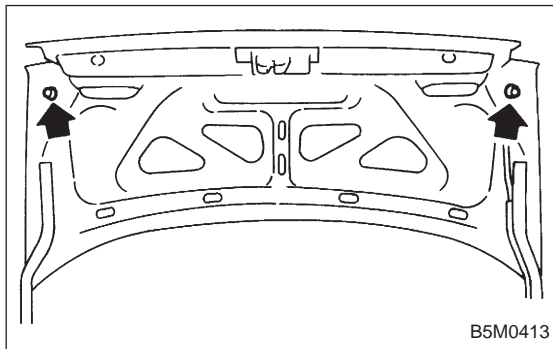

**19. Rear Spoiler (4 Door Sedan 2500 cc GT model only)**

**A: REMOVAL AND INSTALLATION**

- 1) Open trunk lid.
- 2) Disconnect high-mount stop light connector located inside the trunk lid.
- 3) Remove rubber caps.

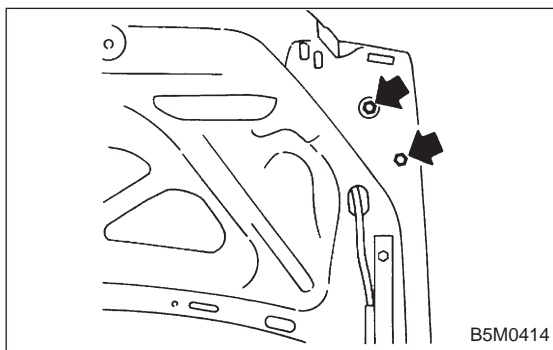

- 4) Remove rear spoiler mounting nuts.

**CAUTION:**

When removing nuts, be careful not to drop them inside rear gate.